

HCD2

Computerized Single Head Embroidery Machine

INSTRUCTION BOOK

Program Ver. *1.34 ~



 **HAPPY** Industrial Corporation

IMPORTANT SAFETY INSTRUCTIONS ..	1-1	How to select patterns from memory	5-A
WARNING LABELS & THEIR LOCATIONS	1-2	Erasing patterns from memory	5-B
SETTING UP THE MACHINE		NEEDLE BAR SELECTION	5-E
Assemble machine unit	2-1	SEWING WITH TUBULAR FRAMES	
How to carry machine	2-2	Installing and removing the frame holder arm	6-1
Machine installation	2-2	How to hoop	6-2
Assemble safety sensor (Option)	2-4	Mounting the hoop on the machine	6-3
Assemble Wide X-carriage (Option)	2-4b	Starting to embroider	6-4
Assemble table (Option)	2-5	CAP FRAME (option)	
Assemble border frame (Option)	2-5b	Cap frame settings in the control box	7-1
Assemble Expand side table (Option)	2-5c	Installing and removing the cap frame driver ..	7-2
Assemble bobbin thread guide (Option) ..	2-6	Normal cap frames	7-5
Grounding instruction	2-7	Wide cap frames	7-8
Disposal of a battery	2-7	Starting to embroider	7-B
MAIN PARTS	3-1	ADJUSTING THE THREAD TENSION	8-1
HOW TO READ THESE INSTRUCTIONS and SCROLLBAR	3-3	ADJUSTING THE LASER POINTER (OPTION) ...	8-2
MESSAGES	3-4	SEWING	
TURNING THE MACHINE ON		What to do if the thread breaks while sewing .	9-1
How to turn on the machine	3-5	Stopping and resuming sewing	9-1
Calendar and clock setting	3-7	Loss of power while embroidering	9-2
THE CONTROL BOX	3-8	Moving the hoop while embroidering and then returning to the correct location (Position)	9-3
DRIVE MODE	3-9	Moving back to the starting point (Origin) .	9-3
GUIDE	3-D	Going back to the beginning of the design (Top)	9-4
INSERTING A NEEDLE	4-1	Placing the design in the center of the selected embroidery frame (Center)	9-4
SELECT NEEDLES AND THREADS	4-2	Rotating and mirroring designs (Convert)	9-5
BACKING MATERIALS	4-3	Starting in the middle of a design (Position) ...	9-6
BOBBIN WINDING		DISPLAYING THE PATTERN IN SETTING MODE .	10-1
Winding the bobbin (Option)	4-4	PATTERN	
Removing the bobbin	4-5	Locking pattern data	11-1
Inserting the bobbin	4-5	Trace type	11-2
Adjusting bobbin thread tension	4-5	Export	11-3
Inserting the bobbin case	4-5	Renaming patterns	11-5
THREADING THE MACHINE		Copying pattern data	11-6
How to thread upper thread	4-6	Moving pattern data	11-7
MACHINE SETTINGS	5-1	Renaming folders	11-9
LOCK STITCHES	5-3b	Sort	11-A
SEQUIN SETTINGS (Option)	5-3c	Thread break report	11-B
PREPARATION OF PATTERN DATA		Retrieve built-in data from machine	11-C
Connecting to a PC	5-4	Searching pattern data	11-D
Reading embroidery pattern data from the PC	5-4b	PATTERN SETTINGS	12-1
Reading embroidery pattern data	5-5	Scaling	12-2
Selection of folders	5-9		

Width adjustment	12-3	USER MANAGEMENT	
Angle	12-4	Registration of administrator	21-3
Repeat sewing	12-5	Registration of user	21-6
Auto origin	12-7	Selection of user (Login)	21-8
Offset	12-8	Selection of user (Login) at power ON ..	21-9
Frame out	12-D	OTHER SETTINGS	
NEEDLE BAR SELECTION	13-1	Create network	22-1
Auto setting	13-2	Version information and software update	22-3
Thread color	13-3	Language	22-3b
Color change data registration	13-5	Calibrate	22-3c
Color change data read	13-6	Report	22-4
Repetition of color group setting	13-7	User maintenance mode	22-5
READING		SCREEN SAVER	22-7
Join	14-1	SPECIFICATIONS • MAINTENANCE	
Pattern Read Settings	14-4	Specifications	23-1
POSITION ALIGNMENT BY DEFINING 2 POINTS ..	15-1	Oiling	23-1
BORER (Option)	15-4	Cleaning the rotary hook	
POSITION	16-1	Cleaning the thread cutting knife	23-2
Piece number	16-2	ERRORS AND WHAT TO DO	24-1
REGISTER	17-1	INITIALIZING OF MACHINE SETTINGS	
Entry	17-2	Re-Initialization of machine system	25-1
Return	17-3	Initializing of machine speed	25-2
LETTER	18-1	HELPFUL HINTS	26-1
QUEUE	19-1	EMBROIDERY TERMS	26-2
Alter and Execution	19-2	BUILT-IN FONT LIST	26-3
Needle bar selection and Pattern settings...	19-4	BUILT-IN PATTERNS LIST	26-4
Registration of QUEUE setting	19-5		
Read QUEUE setting	19-6		
FRAME CONFIRMATION	20-1		
Frame selection	20-2		
Adjusted for embroidery area	20-4		
User-defined frames (1 ~ 5)	20-7		
User-defined frames (6 ~ 20)	20-A		
How to change center point of frame (1 ~ 5, 6 ~ 20) ..	20-J		
Non registered	20-L		
i-CUSTOM	21-1		

When using an electrical appliance, basic safety precautions should always be followed, including the following.

Read all instructions before using this appliance.



DANGER - To reduce the risk of electric shock:

1. An appliance should never be left unattended when plugged in. Always unplug this appliance from the electric outlet immediately after using and before cleaning.



WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:


1. Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
2. Use this appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.
4. Never operate the appliance with any air openings blocked. Keep ventilation openings of the sewing machine and foot controller free from the accumulation of lint, dust, and loose cloth.
5. Never drop or insert any object into any opening.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off ("0") position, then remove plug from outlet.
9. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
10. Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
11. Always use the proper needle plate. The wrong plate can cause the needle to break.
12. Do not use bent needles.
13. Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
14. Switch the sewing machine off ("0") when making any adjustments in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, etc.
15. Always unplug sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual.

SAVE THESE INSTRUCTIONS

WARNING LABELS & THEIR LOCATIONS

1-2

Safety Instruction Sticker for servicing, operating and maintaining

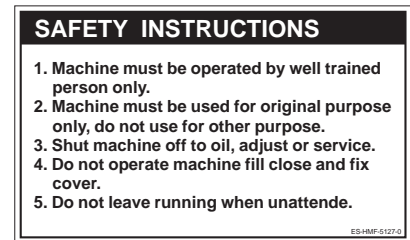


Caution Sticker for hot surface

(on all pulse motors, the motors may reach a certain temperature after long time running, which can reach up to 60°C)




Trapping hazard

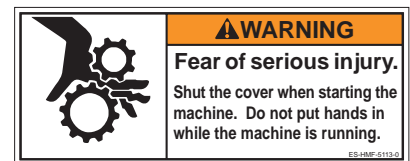

Trapping hazard wherever this label is found



Injury risk warning for all needles

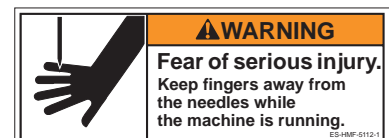


Shock hazard on all electrical components



Injury risk on moving head(s)



Injury risk on frame and carriage

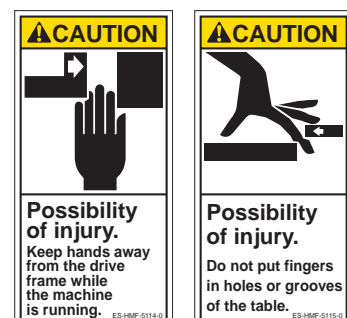


Laser beam (Class 1)

Do not stare into the beam.




● Assemble machine unit


1. Insert thread stand felt on the thread stand.
2. Turn the thread guide pillar clockwise with a 3 mm hexagonal driver until tight.
3. Install the thread guide bracket with supplied screws (pan head screw M4 X 8 2 pcs).

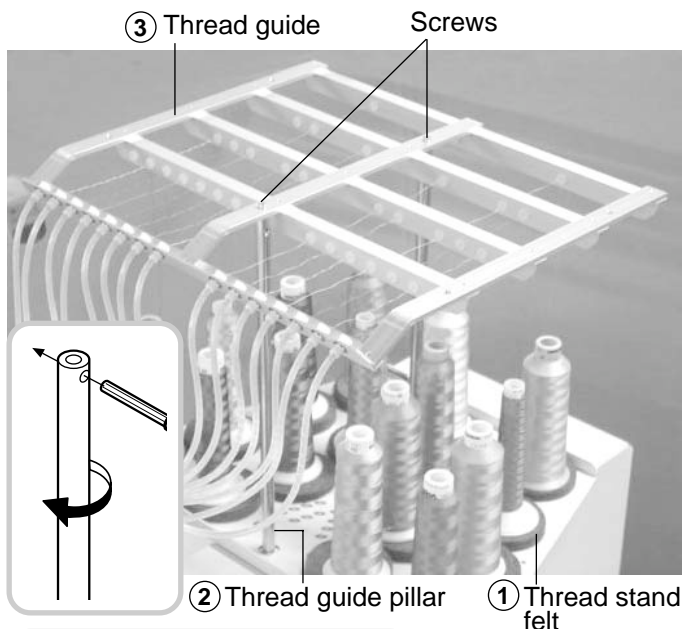


4. Loosen the screw with a offset driver and remove the red shipping collars that are equipped on the both side of the guide bar. (Keep the shipping collars. It is necessary when packing.)

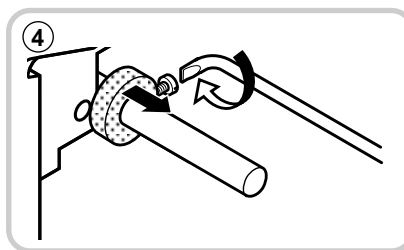

5. Raise slowly the control box to the front then fix it with 2 screws (upper and lower).
6. Install the tubular frame arm for embroidery. Please refer to (page 6-1) "Installing and removing the tubular frame arm". Or, Install the cap frame for the cap embroidery. Please refer to (page 7-1) "Installing and removing the cap drive frame".

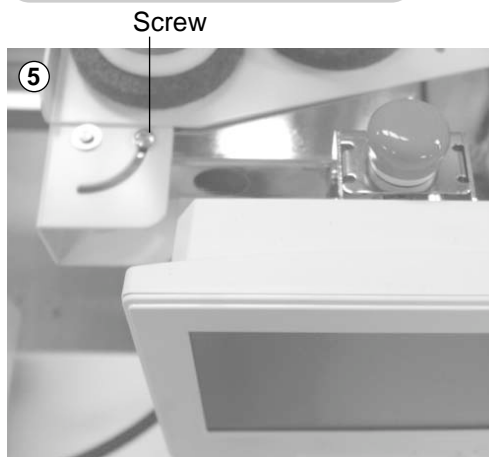

7. Insert built-in stylus into the holder (slot) of control box.

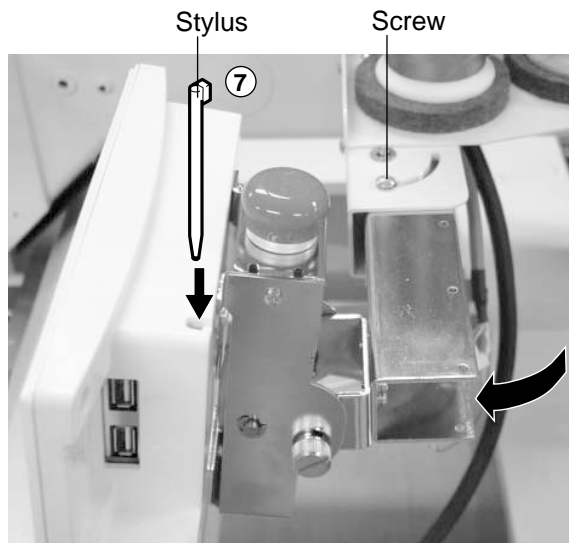

- When taking the machine apart in case of packing, the process is opposite of assembling the machine. Please do exactly the opposite way of assembling.
- When packing the machine up for transportation, be sure to select the eighth needle and fix it with shipping collars on the both side of the guide bar.



SETTING UP THE MACHINE

for qualified personnel only

2-2

●How to carry machine

The unpacked machine should be carried by 3 person with the hand position at ▲ mark shown in photos.

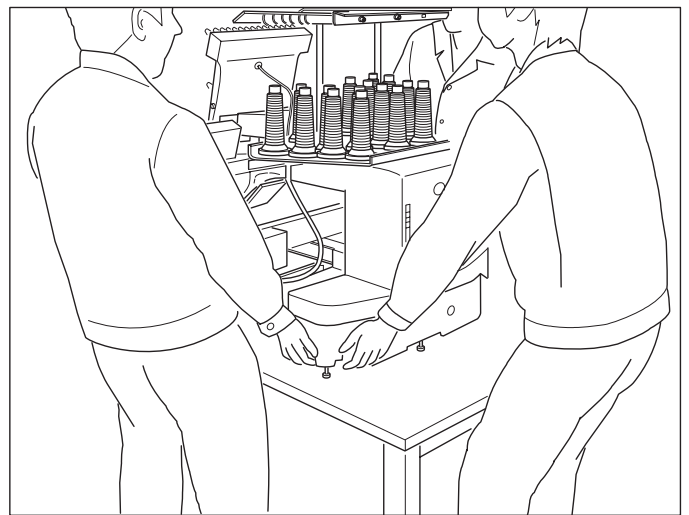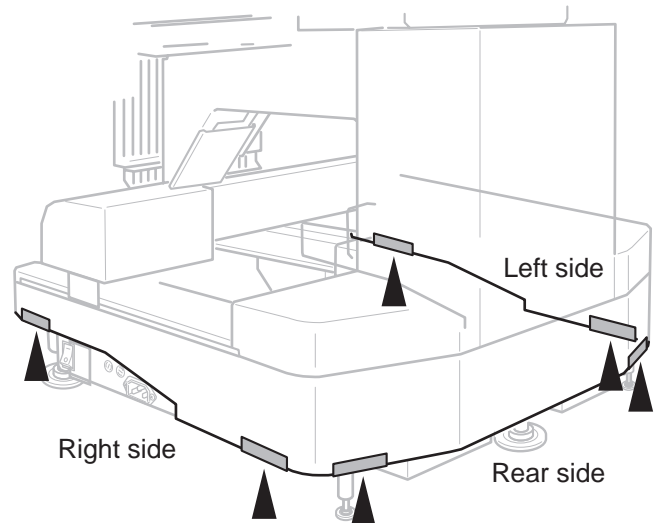


●Machine installation

■ Do not run the machine before setting it properly.
Make sure of taking the following steps to set the machine.

1. Pick up rubber mount (3 places) on the stand then mount machine on the stand. Then adjust machine level by adjuster on foot and lock the each nut.

■ Be sure to use rubber mounts. Also be sure to use robust stand that enables to adjust level of the machine and endure machine weight and vibration.

2. Please two occasional adjuster light touch to stand and lock.

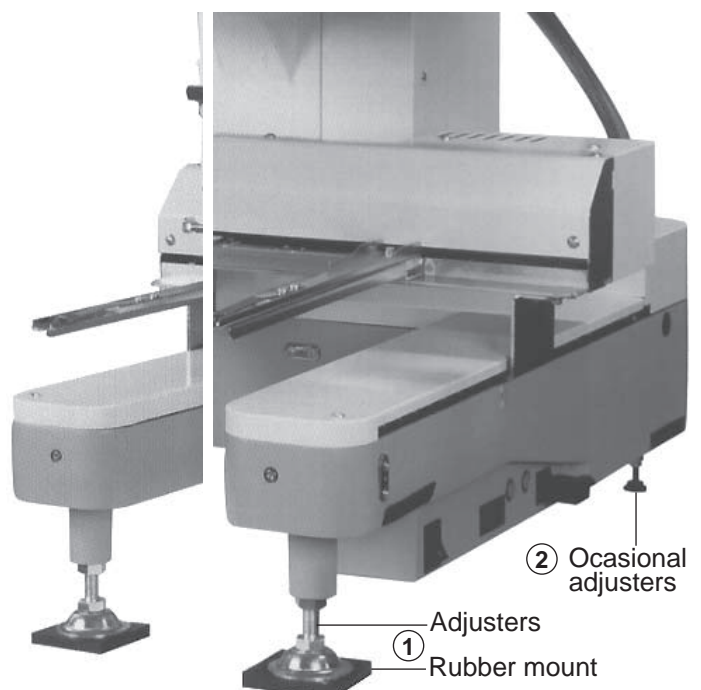

3. Remove needle plates and bobbin cases from all the heads.
4. Lower the needle holder by pressing down with fingers on Fig. 4.
5. Turn main shaft by using the hexagonal driver in direction shown with arrow mark on Fig. 5 and set the angle of the adjustment disk as shown in fig. 6.
6. Check the needle depth on all needles.
Pull white plastic $\varnothing 17$ measuring gauge in and out of rotary hook in fig. 7. If height gauge brushes lightly against tip of needle, needle height is correct. If not, loosen needle bar block screw to adjust, then re-tighten after adjustment.
(Remove the gauge when finished).
Note: Height gauge is contained in tool box.
7. Turn main shaft slightly in direction shown by the arrow mark.
Then set the angle of adjustment disc as shown in Fig. 8.
Note the space or timing between needle and tip of rotary hook as shown Fig. 9, 10.
If the space is too open or too close, loosen 3 screws of shuttle to adjust. Make sure to tighten 3 screws after adjusted the space.
(The timing is set exactly at the factory. However, in some cases timing is inadvertently thrown off from handling during shipment.)
8. Turn main shaft in direction and set to C point.
Place the bobbin and bobbin case in the hook and replace the needle plate and tighten.
9. Machine is now ready for sewing.

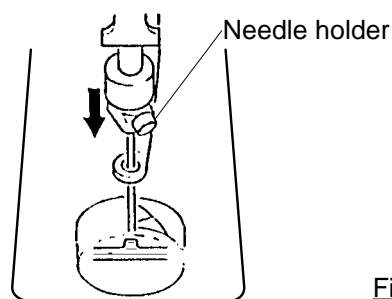


Fig. 4

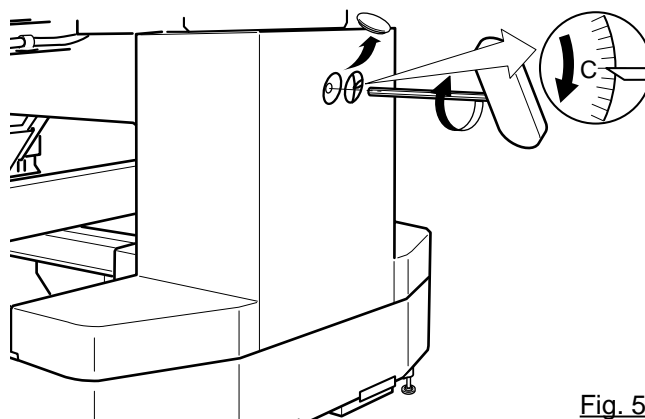


Fig. 5

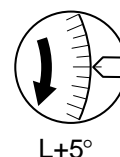


Fig. 6

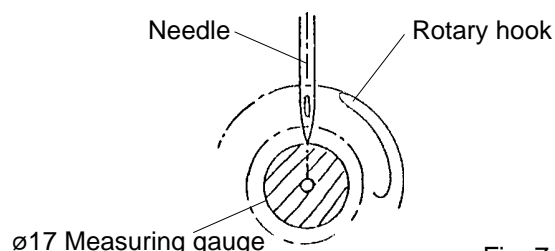


Fig. 7

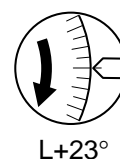


Fig. 8

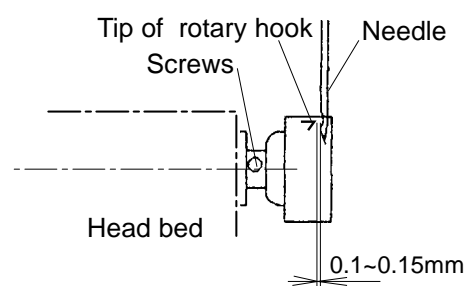


Fig. 9


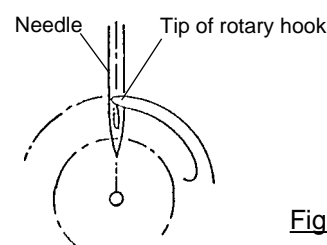


Fig. 10


● Assemble safety sensor (Option)

Safety sensors are set at a provisional position for transportation. Please reset the safety sensors at normal positions for adjustment.


1. Unscrew set screws at lower points on the safety sensors on right and left sides.
Loosen set screws slightly at upper points on the safety sensors.

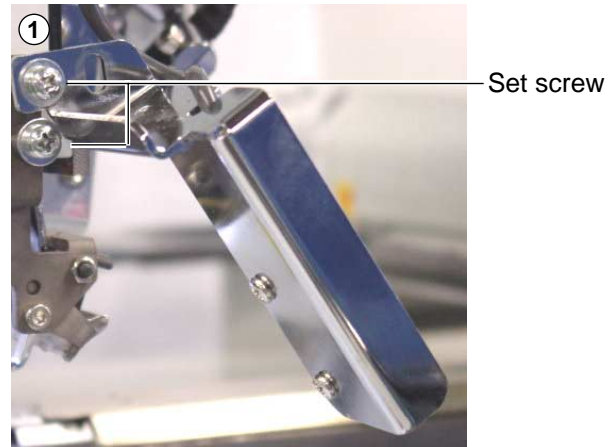


2. Set the right and left safety sensors at the positions as shown in a photo by turning them to the front side.
At this time, make sure the part on the sensors indicated by an arrow shall be set vertically, and set safety sensors both right and left at parallel positions each other with viewing them from the side.
The set screw on the right safety sensor shall be tightened to the level that the positions of the safety sensors can be adjusted vertically.

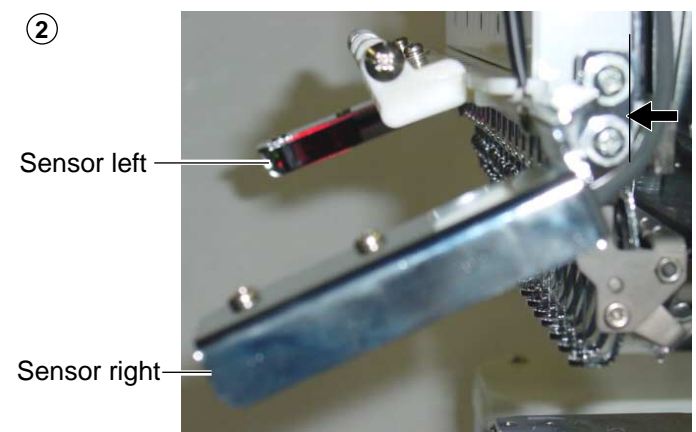

3. Turn on the machine and confirm a lamp for receiving ray (orange) is on when the way of sensor ray is not blocked.

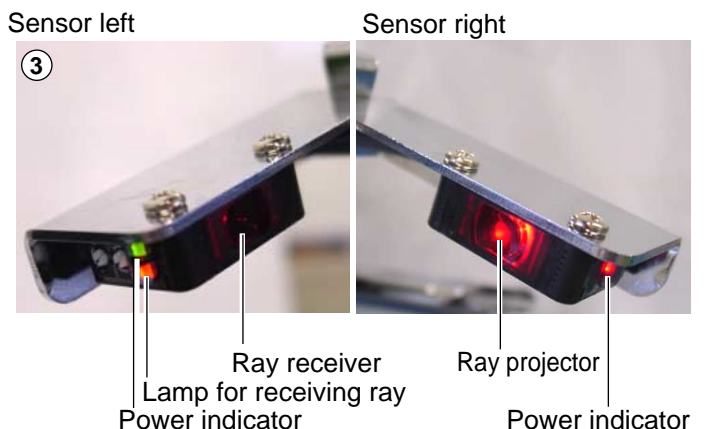

4. Confirm if the lamp for receiving ray (orange) is turned off by blocking the way of sensor ray by a hand or other.
Tighten the set screw firmly.

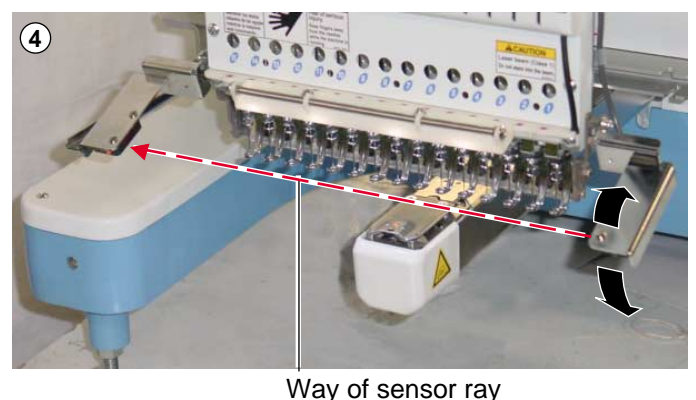

SETTING UP THE MACHINE

2-4b

● Assemble Wide X-carriage (Option)


Wide X-carriage is packed separately from machine.

When you set machine up, please install Wide X-carriage on machine.

1. Move Stay at middle of Y-carriage.
2. Put Wide X-Carriage on Stay and adjust screw hole position.
3. Fix Carriage by Flat head screw (M4x8) at hole position [1] and [2](for the purpose of positioning).
4. [3][4] Fix Carriage by Fixing screw (Cap M4x8, Spring washer, Plain washer) at hole position [3] and [4].
5. Unscrew Flat head screw from [1] and [2] and fix by Fixing screw (Cap M4x8, Spring washer, Plain washer).
6. Loosen screws on BOX terminal and take cover out.
7. Insert X-Motor cable into BOX terminal and connect with X-Motor relay cable. Fix terminal for earth connection for X-Motor cable and X-Motor relay cable together.
8. Fix X-Motor cable by Cable clamp.
9. Close cover of BOX terminal.

Please be sure cables do not get caught by cover.

■ Please reverse procedure when remove the X-Carriage.

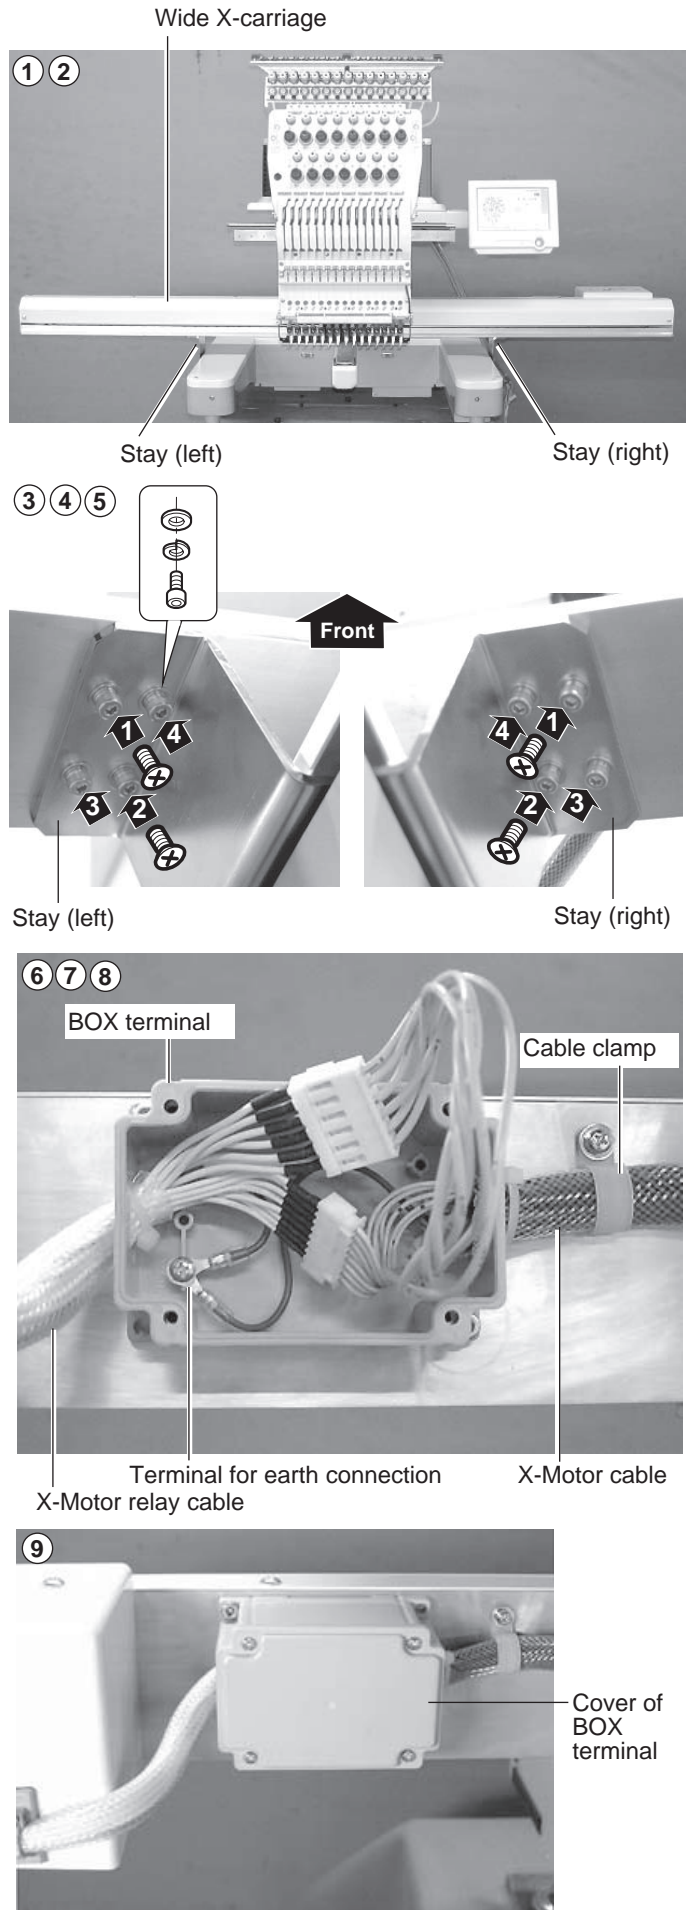

● Assemble table (Option)


Installing the Table or the Table (border).

1. Insert Knob screw to right and left side of machine.
And set table like right side picture.
Please insert table bracket trench to the knob screw.



Knob screw

2. Tight 2 knob screw on under the table for fix table.

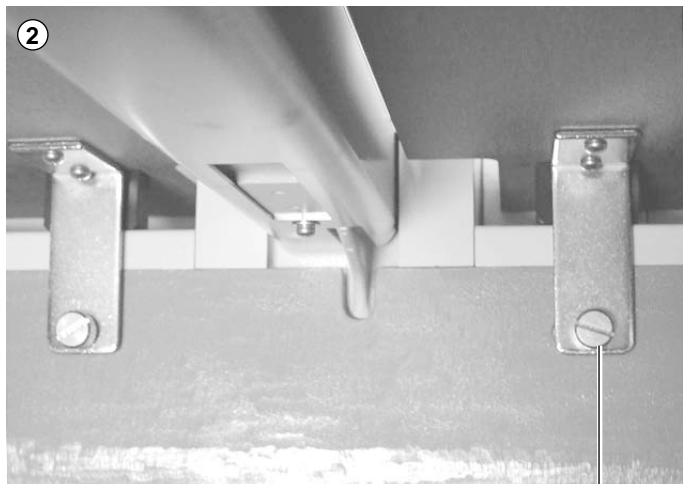


Knob screw

3. Tight 2 knob screw on side of the table.


■ Please reverse procedure when remove the table.

● Assemble border frame (Option)

1. Fix the border frame under the bracket of the X carriage and tighten the knob screw completely.

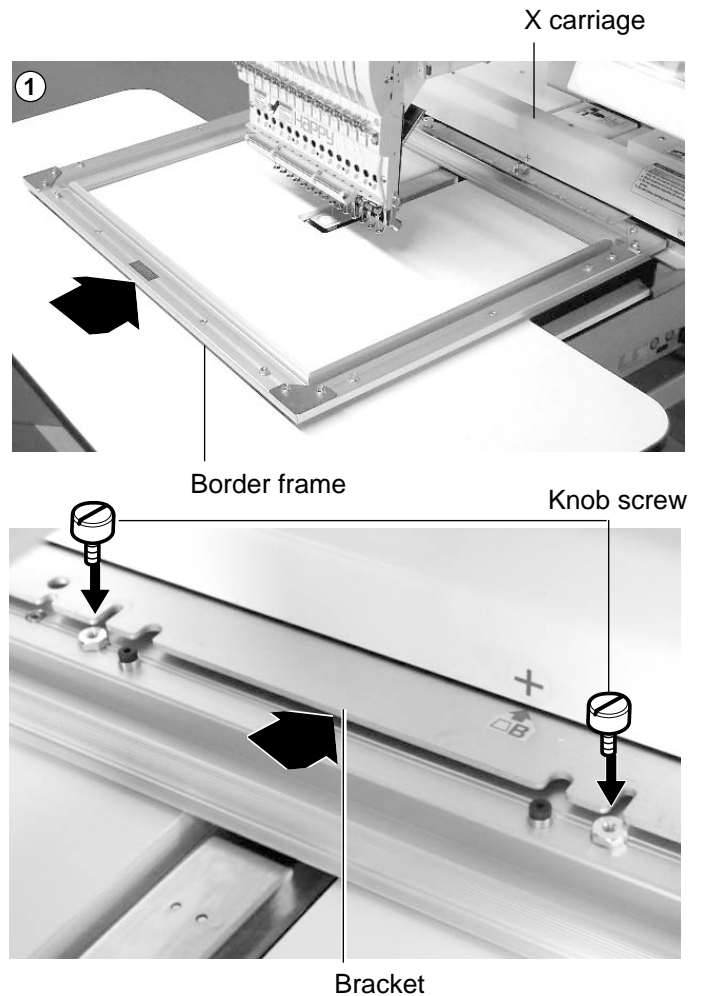

Clearance between X-carriage and Border Frame at right edge and left edge should be equal.

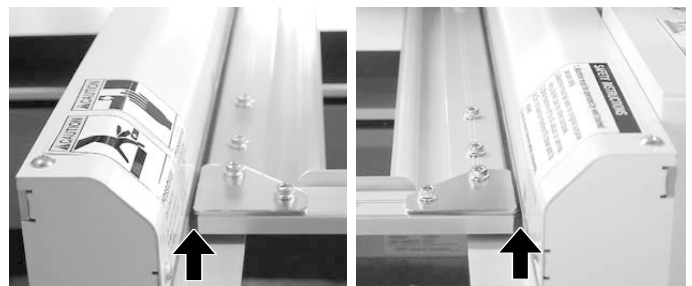


2. Select Frame Type "Border".
Please refer in this manual page "FRAME CONFIRMATION" for "Frame selection".
P 20-2

■ Please reverse procedure when remove the border frame.

SETTING UP THE MACHINE

2-5c

● Assemble Expand side table (Option)

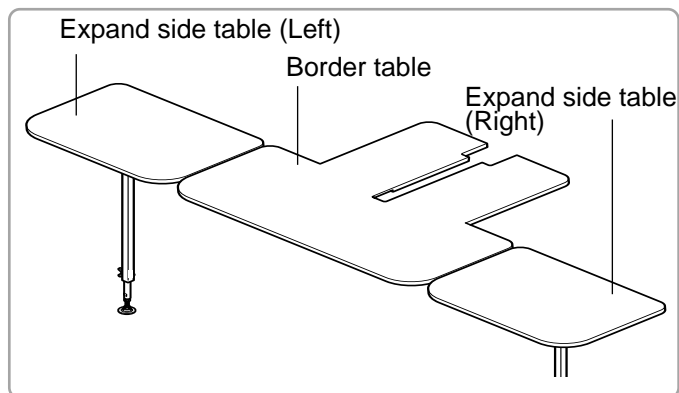

1. Set Stay on Expand Side table.
Put Expand Side Table under Border table
and set Stay by Wing Bolt.
Adjust height of Adjuster by Wing bolt to the
same height as surface of border table.




CAUTION: To prevent accidents.
Table may be slanted.
Tighten Wing bolt to fix height of stay.


In case you need to set Expand Side Table
on same level of machine stand (or table), set
Adjuster to Stay A directly.



Adjuster

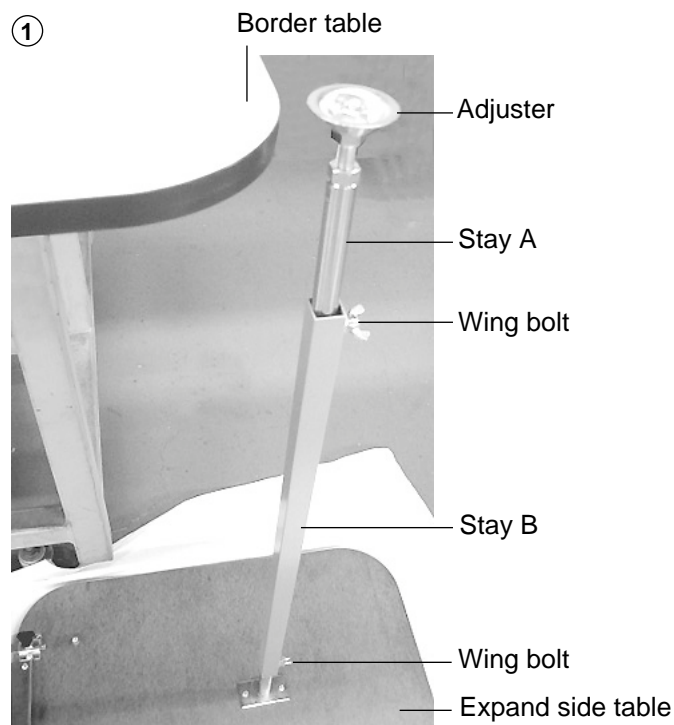


2. Turn Expand Side Table and join tables with
inserting Prop B into Prop A.

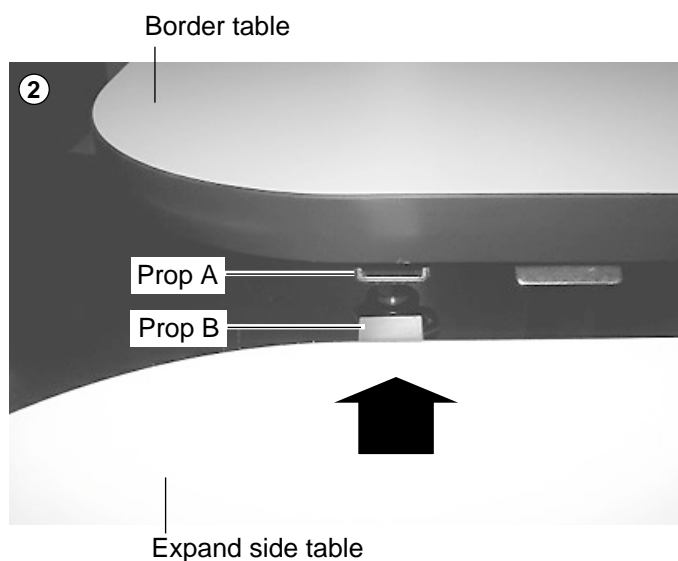

SETTING UP THE MACHINE

2-5d

3. Confirm that Middle support plate enters to the space between table and Prop plate and there is no opening between tables. Tighten Knob bolt of Prop A at Border table and fix Lock nut. Then set Clamp.

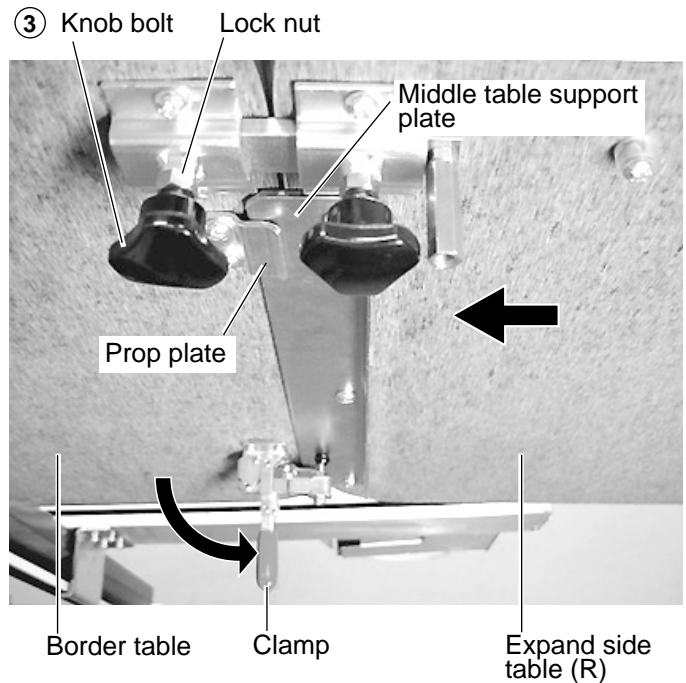


4. Adjust height of Expand Side Table by Adjuster and fix by Lock nut.



CAUTION: To prevent accidents.
Table may be slanted.
Please do not load any objects on Expand side table.



④

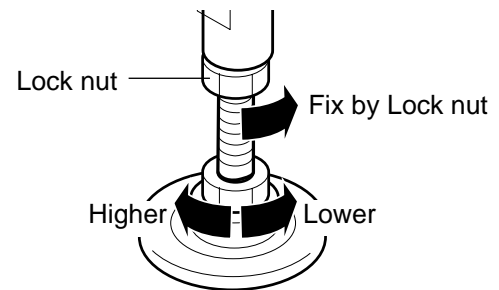

- Please reverse procedure when remove the Expand Side Table.

● Assemble bobbin thread guide (Option)

1. Install the bobbin thread guide with supplied screws (pan head screw M4 X 6 2 pcs).
(Showing following pictures, Please square left end of sticker with right end of thread stand)

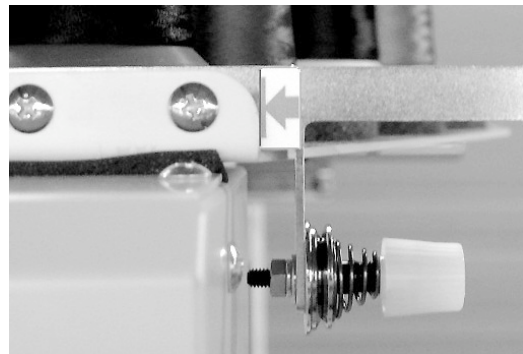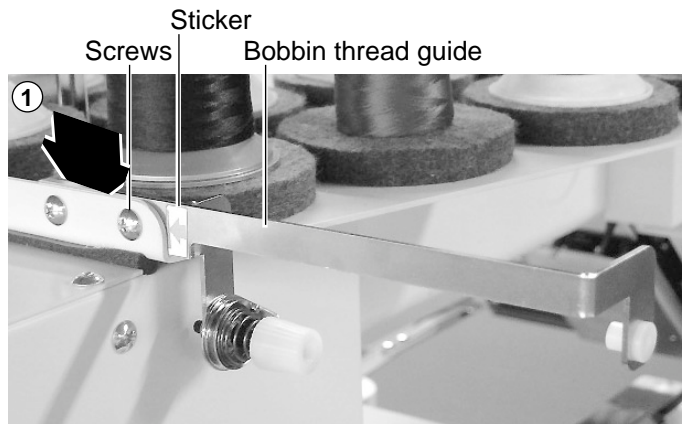

●Grounding instruction (for type of 120V)

This product must be grounded. In the event of malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


⚠ DANGER – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120 V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in Figure. A temporary adaptor, which looks like the adaptor illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adaptor should be used only until a properly grounded outlet can be installed by a qualified electrician. The green colored rigid ear, lug, and the like, extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adaptor is used, it must be held in place by the metal screw.

Grounding methods

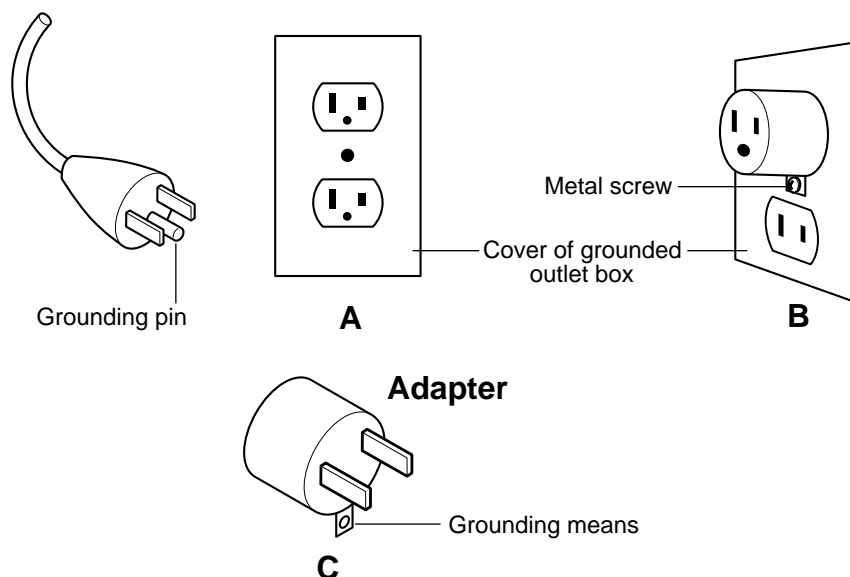


●Disposal of a battery




A battery is had built-in to this embroidery machine.

When you dispose of a battery, according to each country or a method determined in each area, please dispose appropriately.

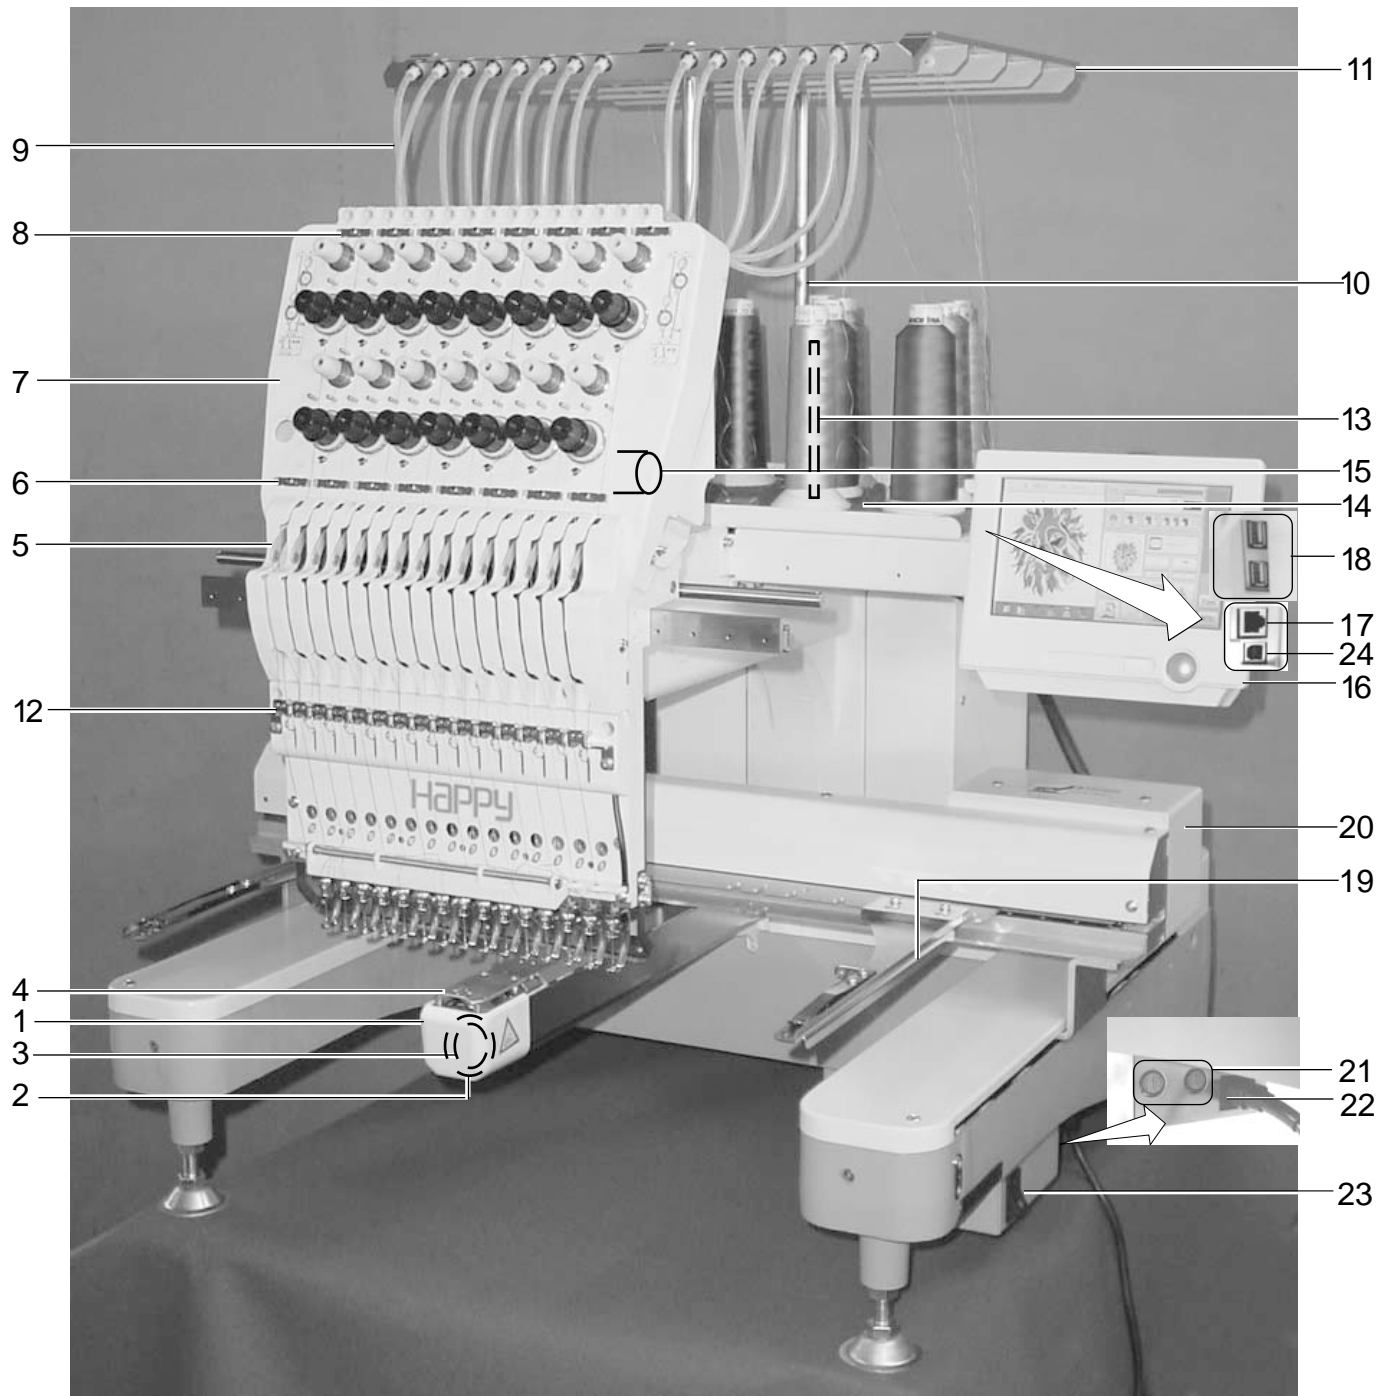

- | | | |
|--------------------------|-------------------------------|-------------------------|
| 1. Hook cover | 11. Thread guide | 20. Carriage |
| 2. Hook | 12. Thread check spring | 21. Fuse (6A) |
| 3. Bobbin case | 13. Thread stand pin | 22. Terminal box |
| 4. Needle plate | 14. Thread stand felt | 23. Power switch |
| 5. Take-up lever | 15. Needle bar selection knob | 24. USB port |
| 6. Lower rectifier | 16. Control box | (Standard-B receptacle) |
| 7. Thread tension | 17. LAN port | |
| 8. Upper rectifier | 18. USB port | |
| 9. Guide tube | (Standard-A receptacle) | |
| 10. Thread guide support | 19. Frame hold arm | |

CONTROL BOX

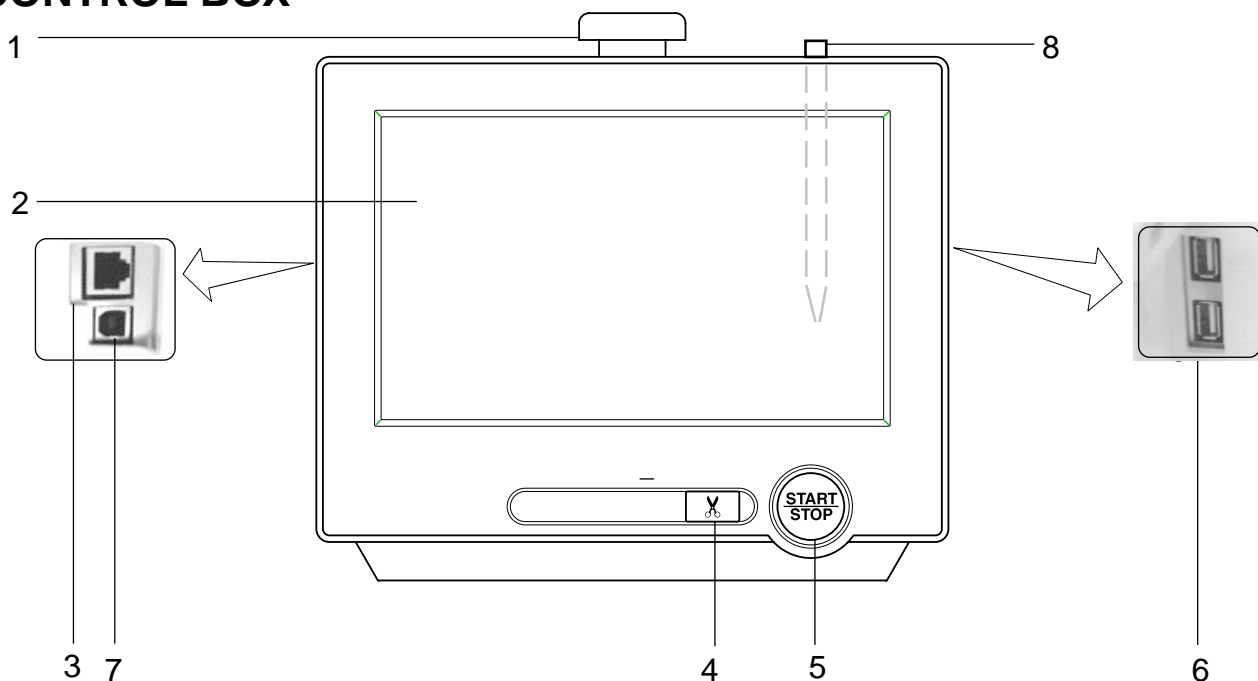


1. Emergency stop button
2. Display (L.C.D.)
3. LAN port
4. Thread cut button
5. Start/Stop button

6. USB port (Standard-A receptacle)
7. USB port (Standard-B receptacle)
8. Stylus

BOBBIN WINDING (Option)

1. Thread guide
2. Thread tension
3. Spindle
4. Lever
5. Thread stand pin
6. Plastic spring
7. Thread stand felt

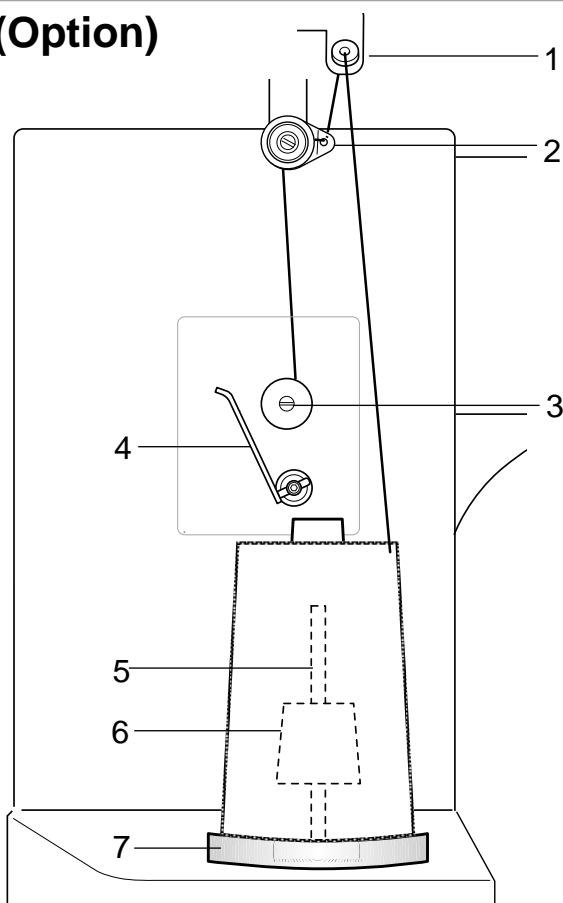

HOW TO READ THESE INSTRUCTIONS and SCROLLBAR 3-3

The instructions in this manual have been formatted as follows:

Written instructions will be provided on the left side of the page while graphics depicting the necessary steps are provided on the right.

Graphics on the far right will show the display after performing the steps indicated.



CAUTION: To prevent accidents.


This will appear for items related to your safety.



CAUTION: To avoid problems.

This will appear for items related to potential problems.





Order of operation

1. When the machine is stopped, press  .

Indicates supplementary explanation regarding a given operation or action.


2. Select "PATTERN".

The display indicates the current pattern.
The left side of display shows the number, name and details for the current pattern.

-  Number of stitches
-  Number of Color change number
-  Height
-  Width

AWords marked with a "*" are explained in "EMBROIDERY TERMS" at the end of this instruction manual.

3. Select *pattern data.


This pattern will be selected.  3-3

Operation key


This indicates an additional explanation on an operation elsewhere in the manual for more detail.

Press  to return to Menu mode.

Press  to return to Drive mode.

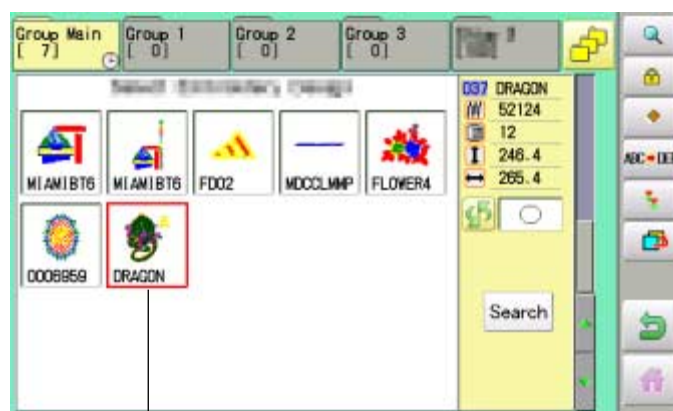

Selected pattern data

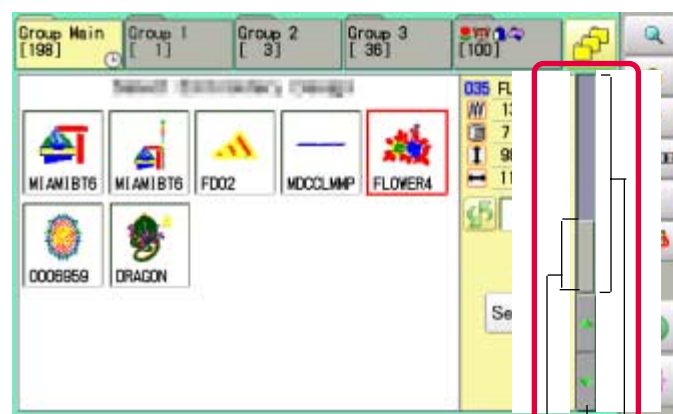

Display area

Arrow key

Scroll area

Scrollbar

Scrollbar

If the data are too much to fit into display screen, you can use scrollbar.


Display area : It shows the area which is displayed.

Arrow key : You can scroll the display area to arrow marked direction.


Scroll area : It shows the whole area of the data.

You can push arbitrary point of Scroll area to display the desired location.







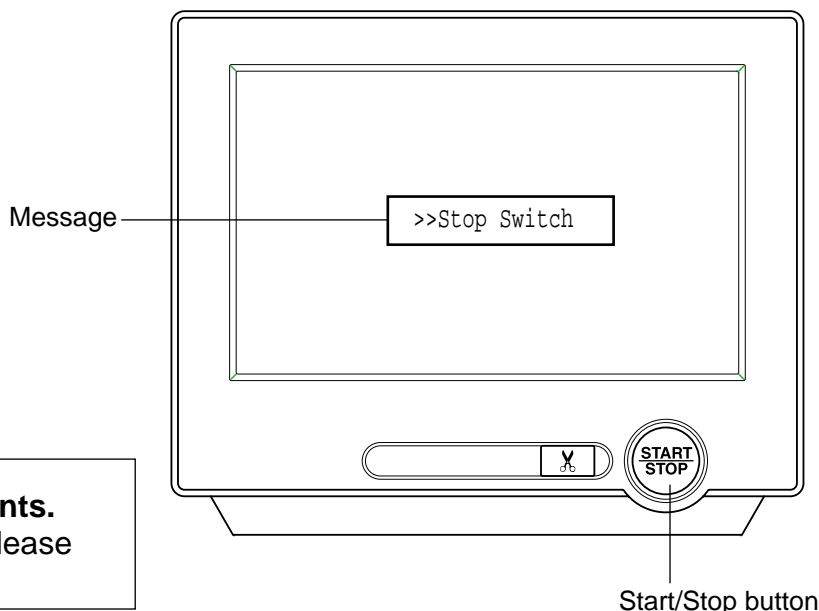



Below is a list of possible messages that may appear while operating the machine, along with an brief explanation and suggested actions to take as a result.

The message with  mark will be appeared with beep sound.

Press the screen (any location is okay) or button, then message and buzzer will be stopped.



CAUTION: To prevent accidents.
The embroidery frame may move. Please keep hands clear for your safety.

	MESSAGE	EXPLANATION	OPERATION	PAGE
	 A  B Place to oil	Designated letter on the display is due to be lubricated.	Push [Done] and lubricate indicated location with instruction in the reference page. Push [Leter], if you can not lubricate right away. The message will be disappeared temporary, but it will come up later.	23-1
	 Cleaning of rotary fook  Cleaning of thread cut knife	Clean the rotary hook and the thread cutting knife.	Clean with instruction in the reference page.	23-2
	>>Stop Switch	The machine is stopped because the stop button was pressed while embroidering the design.	Press the start/stop button to resume sewing.	
	>>End	The machine is stopped because it has finished the design.	If you wish to sew design again, please newly hooped item on machine & press start/stop button.	
	>>Change Stop	Machine stopped, because you used "Stop at color change point" function.	When you press the start/stop button, the machine will select the next color and resume embroidering automatically.	
	>>Color ?	Machine stopped because the next color has not been selected.	Please select next needle number by needle selection button then press the start/stop button.	
	>>Thread Break	Machine stopped, because upper or bobbin thread broken.	Please thread upper thread or check bobbin thread then press start/stop button to resume sewing.	
	>>Frame out	The "Frame out" function has been executed.	Press the start/stop button if OK.	12-D
	>>Sequin Empty	Sequin is empty.	Please set the new sequin then press start button to resume sewing.	

TURNING THE MACHINE ON

3-5


●How to turn on the machine

1. Connect the power cord to the inlet on the right side of the machine.

2. Connect the power plug to an electrical outlet.

3. Turn on the power switch.
Indicates the select frame.

Please confirm the emergency stop button has been released.
Push the power switch firmly so it will remain on.

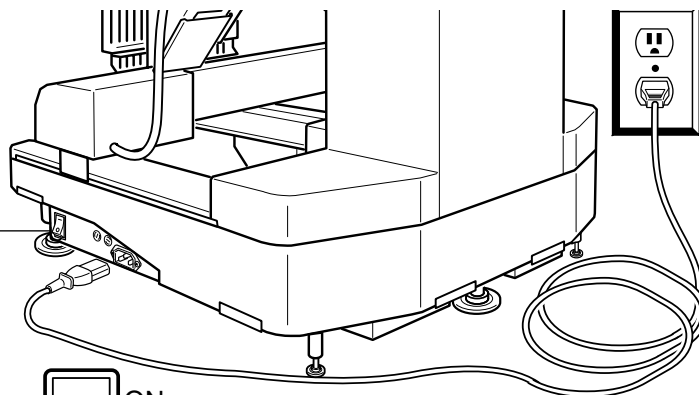

Selected frame




4. In case you do not need to change frame type, Press **Next**.

After the carriage and frame move slightly, the embroidery frame will return to the previous position automatically.
Machine becomes ready for operation.



CAUTION: To prevent accidents.
The embroidery frame and carriage will move.
Please keep hands clear for your safety.

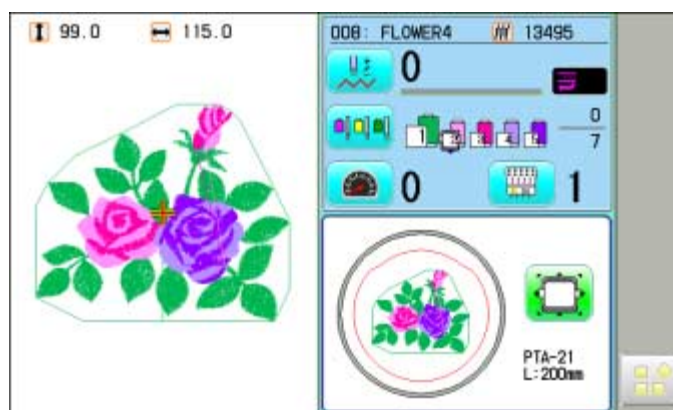



In case you want to change frame type,








Press




TURNING THE MACHINE ON

3-6

5. Select the desired frame with  .

-  : Tubular round frame
-  : Tubular square frame
-  : Cap and One-point frame.
-  : Border frame (for HCD2)
-  : Sock frame
-  : User-defined frame
-  : Non registered

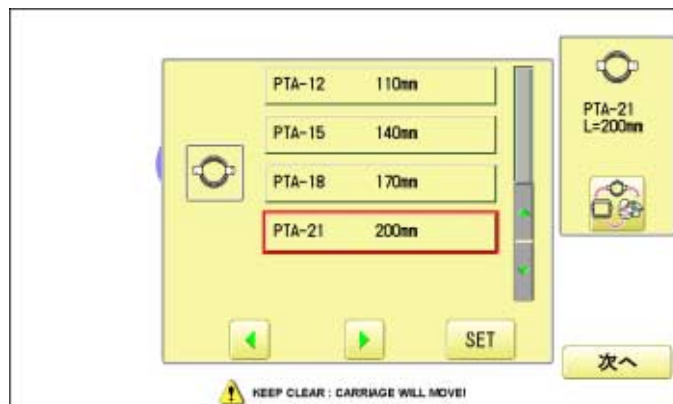

6. Select desired type of frame and Press



The display returns to the view of Step 3.

To disconnect, switch the power switch to the off position, then remove plug from outlet.



DANGER: To reduce the risk of electric shock.

Never leave the machine unattended when plugged in.

Always unplug this machine from the electrical outlet immediately after use and before performing any maintenance on it.



WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons.


Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

TURNING THE MACHINE ON

3-7

●Calendar and clock setting

Setting the calendar and clock lets the machine advise when oiling and other maintenance is scheduled to occur.

1. When the machine is stopped, press .







2. Press .




3. Press .
Current year, month date and time is displayed.




4. Select year/month, time or date.
Press right /left of   to select the setting point, and press up/down of   to select the number of year, month and time.



5. Press .
The date is fixed.

6. Press  to return to Menu mode.

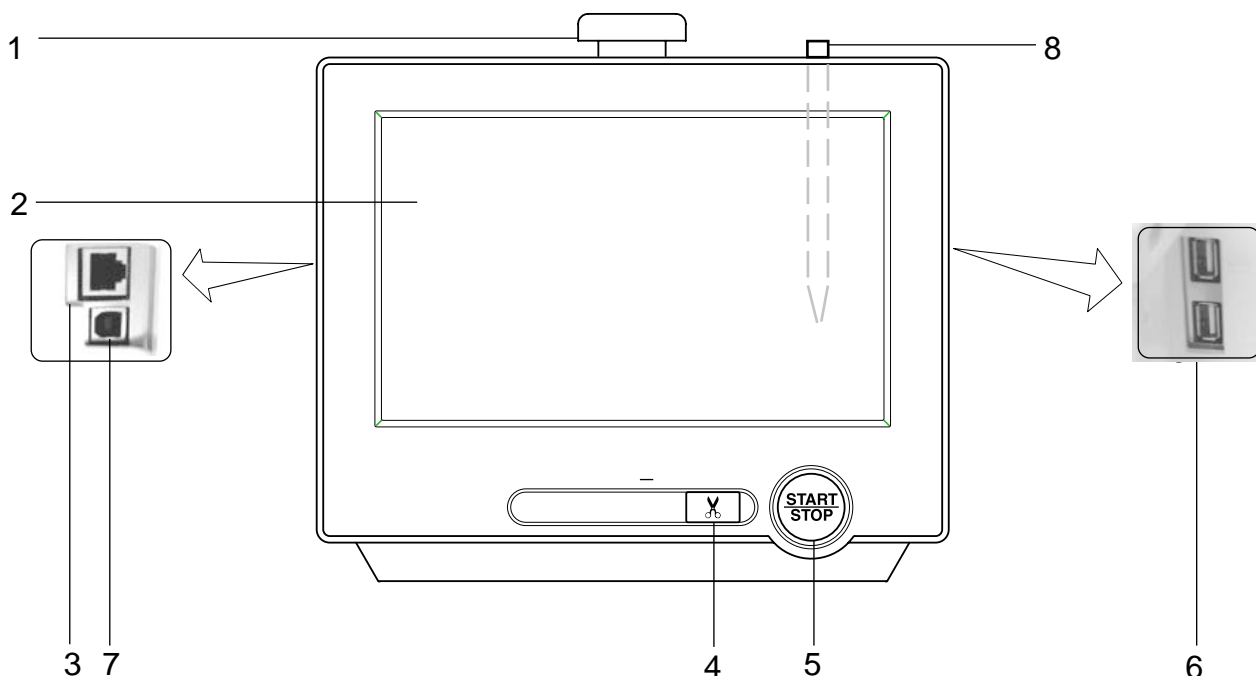

1. Emergency stop button

When pressed, the power is switched off and the machine stops immediately. The emergency button locks when pressed.

To unlock, turn the emergency button to the right (Arrow direction) then release. The button will unlock.

Use this button only for emergency.



2. Display

Shows the embroidery design name, the number of the current needle and other machine generated messages.

Menu and keys in the display can be operated with a finger or built-in stylus.

3. LAN port

You can connect PC with a LAN.

4. Thread trim button

The Machine will cut the upper and lower thread when this button is pressed.

In case you press and keep (around 2 sec.), you can cut only bobbin thread.



CAUTION: To prevent accidents.

If you Press thread trim button, the needle will penetrate the fabric. Please keep your hands clear for your safety.

5. Start/Stop button

This button starts the machine.

When pressed, while the machine is running, the machine will stop.

Green Machine ready to sew.

Main menu also accessible by pressing MENU, which causes menu to display.

Blinking red . Indicates the upper thread has broken or the Bobbin thread has run out.

Red Machine is running.

Orange Machine has detected an error. An error number will be shown on the Display. [p 24-1](#)

6. USB port (Standard-A receptacle)



USB memory socket.



USB mouse socket.

Menu and keys in the display can be operated with a commercial USB mouse.

Press right mouse button to show a mouse pointer in the display.

7. USB port (Standard-B receptacle)

Use this port to connect the machine with PC via USB.

8. Stylus

Stylus can be used for pressing menu and keys in place of fingers.


Most operation can be done by fingers. Stylus is required for some operation such as calibration for the touch panel LCD. [p 22-3c](#)

Insert a stylus into the holder (slot) of control box when not used to prevent loss of the stylus.


Drive key

The each key menu will be shown.

STANDARD CONTROL BOX

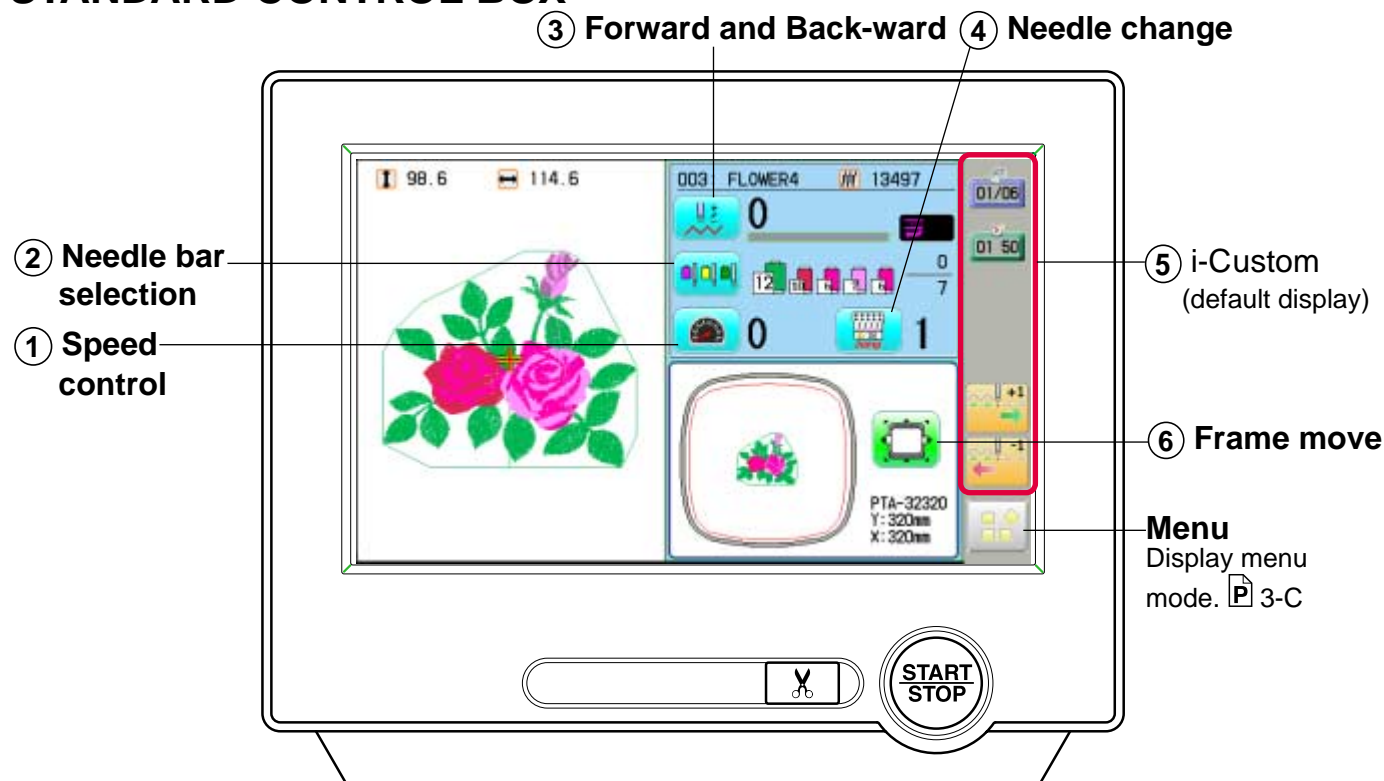

10.4" CONTROL BOX (Option)

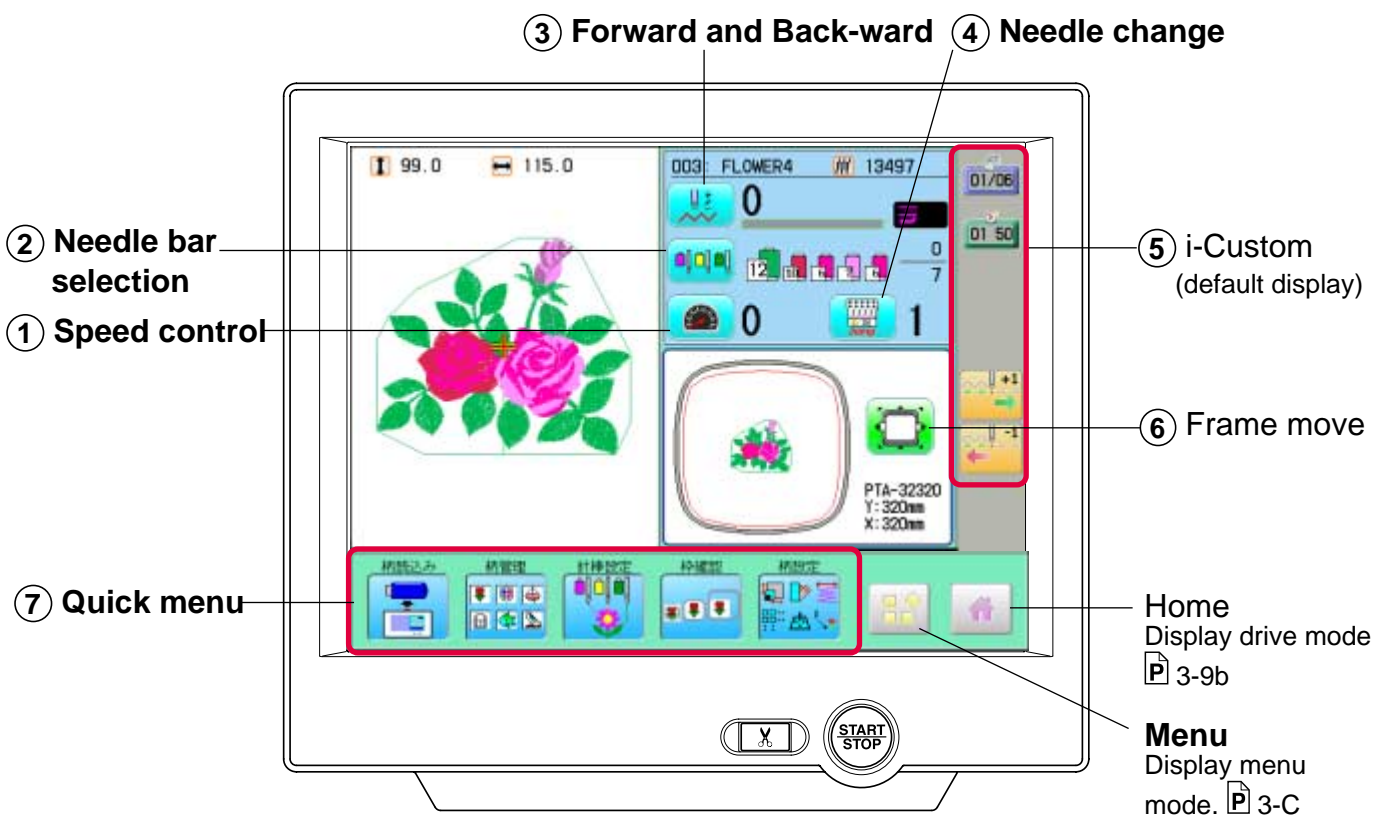

① Drive speed

Control embroidery speed.
The speed can be controlled while embroidering.



Speed control

Press the + button to increase the machine sewing speed and the - button to lower the machine speed. is displayed on the LCD display.



Low speed operation (OFF state)

Press the button to turn "ON" state.



Low speed operation (ON state)

The drive speed will be reduced to "200 rpm".
Press the button to turn "OFF" state.



Speed setting by needle (OFF state)

Press the button to turn "ON" state.



Speed setting by needle (ON state)

Press the button to turn "OFF" state. [P 3-9e](#)

② Needle bar selection [P 5-E](#)

For each color change in a given pattern, the needle number loaded with the correct color thread is assigned by the operator.

③ Frame forward

This creates direct designations to the position and data to the designated sewing position.



Piece [P 16-2](#)

If "Repeat" is set, this allows the frame to move to the beginning of any piece at will.



Change (Color position) [P 9-7](#)

This moves the frame to the beginning of any Color change number at will beginning of color.



Stitch (Number of stitches) [P 9-6](#)

This moves the frame to any stitch at will.



Color position forward

Move the frame to the beginning embroidery position of the previous or later color position number



Stitch number forward

Move the frame forward or backward by the stitch number displayed in each button.

④ Needle change



Change the needle bar directly to the indicated needle number on the button.



Change

Move the sewing head to the adjacent needle in the direction of the arrows.



Jump (Off)

The machine can embroider.




Jump (On)

Machine becomes jump and the machine doesn't embroider.

⑤ i-Custom P 21-1

The following display and key icons are set as default. You can place other frequently used icons freely on the right side of Drive mode screen.



Calendar

Current year, month date is displayed.



Clock

Current time is displayed.



Stitch number forward

Move the frame forward or backward by the one

When the key is pressed continuously, the "Key lock" function is activated and the frame will move continuously even the finger is released from the key.

When the key is pressed much longer, the step of "Stitch number forward" will be changed from one stitch to 10 stitches. P 5-2

When you stop it, press  (Start/Stop button).

■ The "Key lock" and "Fast forward" function will be activated after setting through AgMachine SettingAh menu. P 5-2

⑥ Frame move

Selection the way of frame movement and Move frame.



Frame change

Change the frame to be used.



Design centering

Move design to the center of frame.




Center

Moves the embroidery frame to the center automatically.



Frame out

Move frame to the front position which was set before.

Press  (Position) to return the frame to the original position before frame out position. It is convenience if hand work is required in the middle of embroider process.



Position

When sewing is interrupted in the middle of a design, this returns the frame to current sewing position regardless of where frame may have been moved with the arrow keys after interrupt. target design



Original point return

This returns the frame to *pattern origin point. After performing this action once, repeating this again will cause the frame to return to the previous position.



Origin registration

Register the current frame position as origin.



Trace

When pressed while at the beginning of design, the embroidery frame moves following the outer edge of the design. This allows you to compare the design size and position against the frame before sewing.

Indicate target design on LCD panel when non-showing design.

If you press this key and hold, re-display your



Register

Register will restore the position of the frame to the last point before a power failure even if the point of origin or the pattern itself were changed.



Quick move

First press this key and then the arrow key to move the frame toward the edge of the embroidery area in the direction of the arrow.



Quick embroidery design data position


move

First press this key and then the arrow key to move the frame where the design data can be embroidered at the edge in the direction of the arrow.



Frame move key

The frame moves toward direction of the arrow mark.

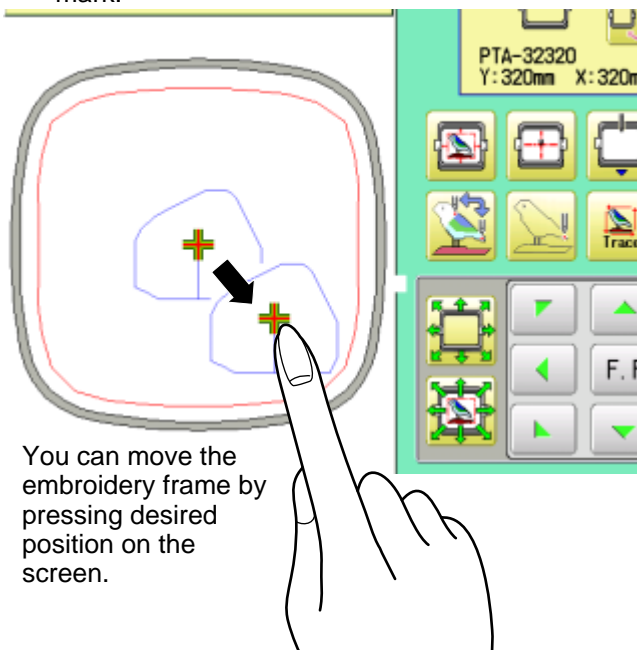

You can move the embroidery frame by pressing desired position on the screen.



Fast move (OFF state)

Press the button to turn "ON" state.



Fast move (ON state)

Press this key one time to move the frame faster toward the direction of the arrow.
Press the button to turn "OFF" state.



Fast move speed setting (High)



Fast move speed setting (Middle)



Fast move speed setting (Low)

The speed of "Fast move" can be adjusted.



Pointer (Option)

Turn on and off the laser pointer.



X Direction frame move



Y Direction frame move

The frame can be moved with specified distance along X axis or Y axis. (Unit: mm)
The function allows you to move the frame precisely with a pitch of 0.1mm.



Select the number, and press **SET**.

The frame will move specified distance.




Changing is cancelled.




Numbers are deleted.

⑦ Quick menu (10.4' CONTROL BOX)

Display menu icons at lower part of the screen.

You can choose menu icons (top line of the menu screen) directly without pressing .

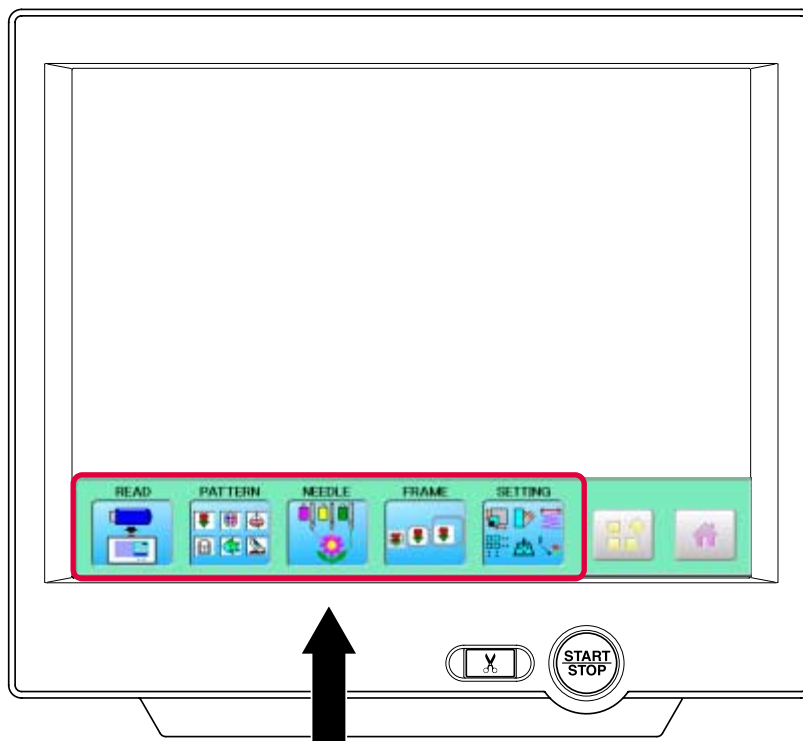

Top line of the menu screen
P 3-C



Speed setting by needle (ON state)

Embroidery speed can be set by needle.

If speed by needle exceeds the speed set at Drive speed setting, the value of speed turns gray and speed by the needle is applied to the speed set at Drive speed setting.

You can be set up taking the following steps.



1. Press



2. Press




Speed setting by needle

Drive speed setting [P 3-9](#)

3. Change the setting on the needle number you would like to change with .

Press when returning the setting on all the needle numbers to maximum.

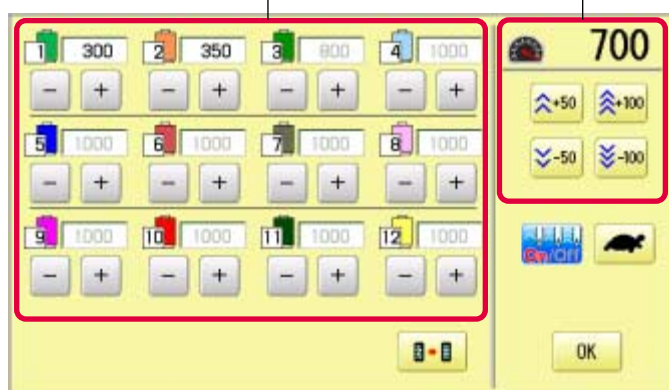

4. Press




The screen returns to Drive mode.




Display example

When beginning an embroidery

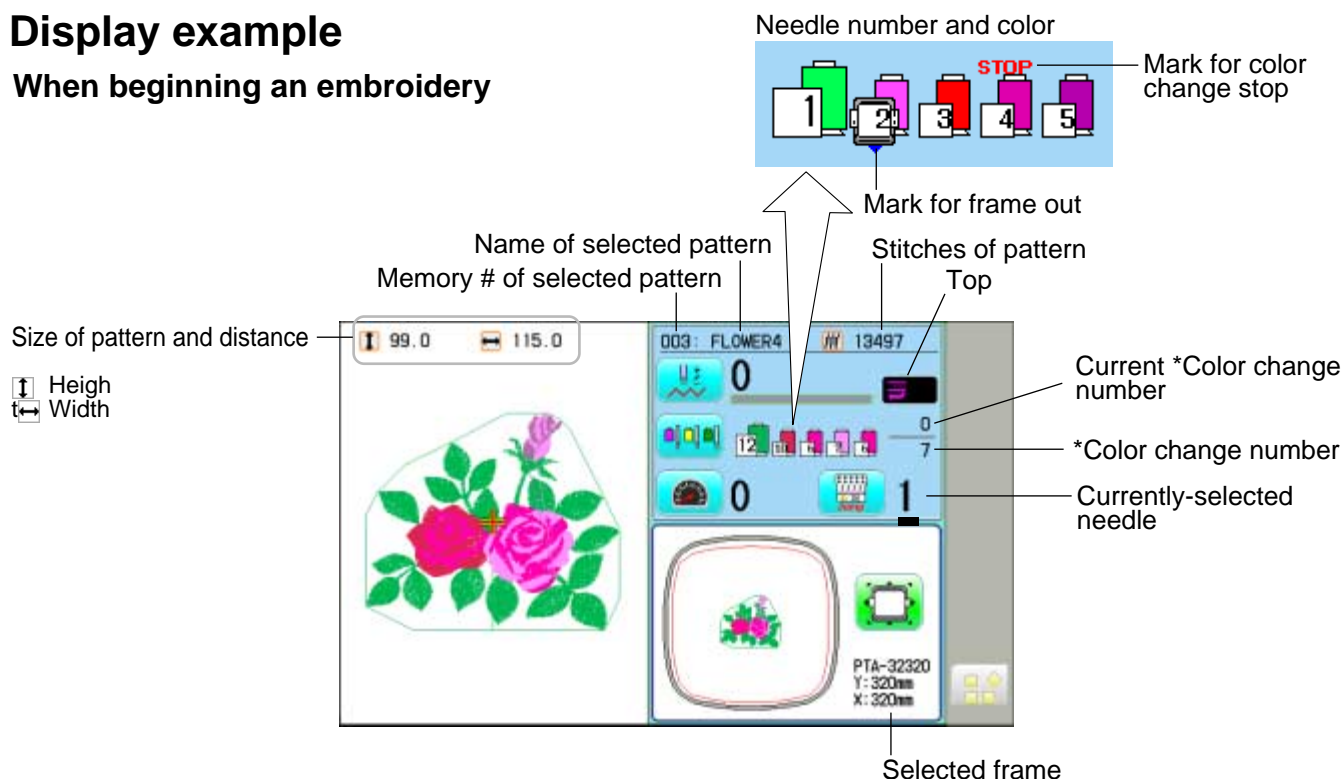


Machine stopped during embroidering

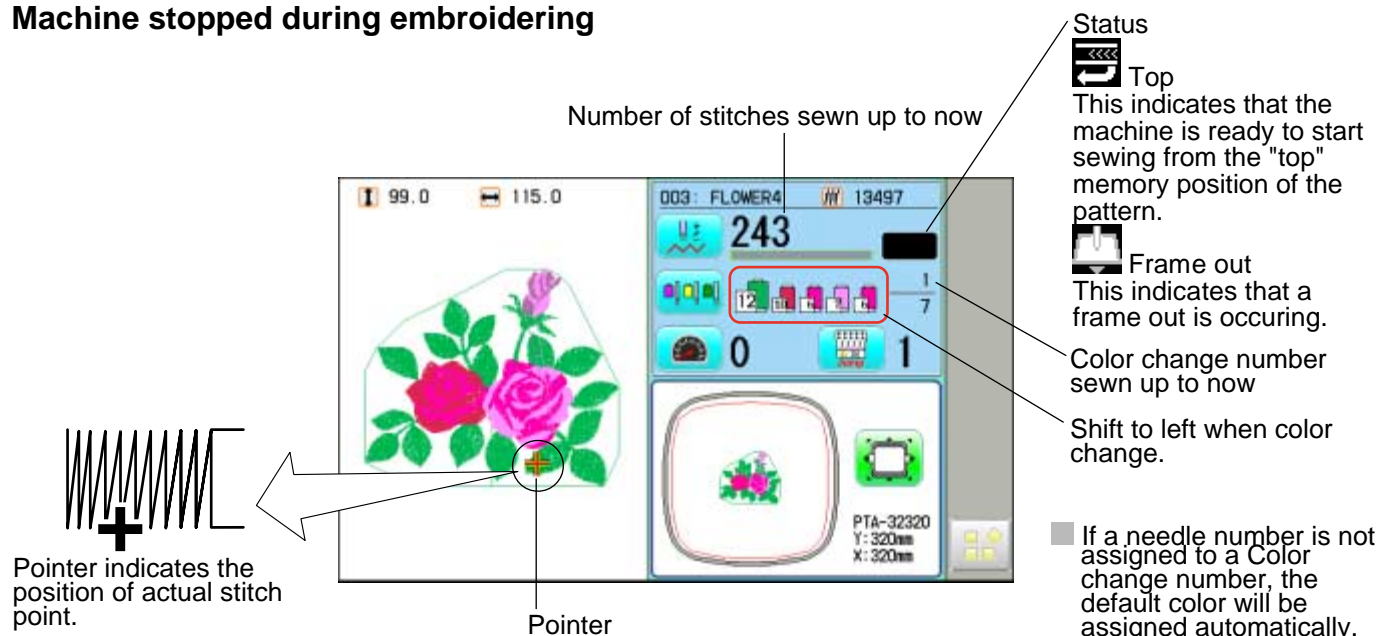

Display if the machine has no design in memory



The GUIDE offers tips and step-by-step help for embroidering with the machine. In each stage of embroidery operation there is an easy to follow guide available.


1. When the machine is stopped, press .






2. Select "GUIDE".

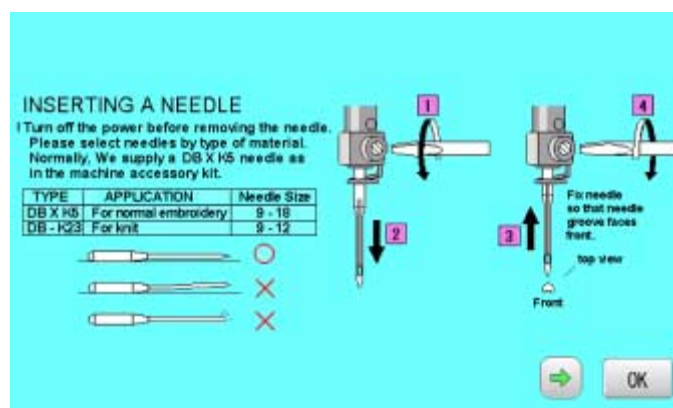

3. Select desired item.




4. You can move to next page by pressing  .

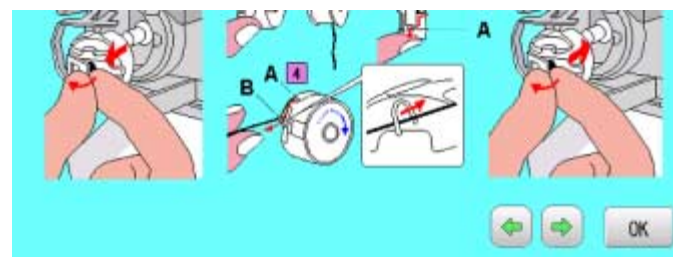

5. Press .

You will return to the guide menu.



Press  to return to Menu mode.

INSERTING A NEEDLE


4-1

Select a needle of the right type. See the following “SELECT THREADS”.




CAUTION: To prevent accidents.
Turn off the power before removing the needle.

1. Loosen the needle clamp screw slightly with the screwdriver.
2. Remove the needle.
3. Insert a new needle into the needle clamp with push it up as far as it will go keeping the slotted side of the needle in front.
4. Tighten the needle clamp screw with the screwdriver.

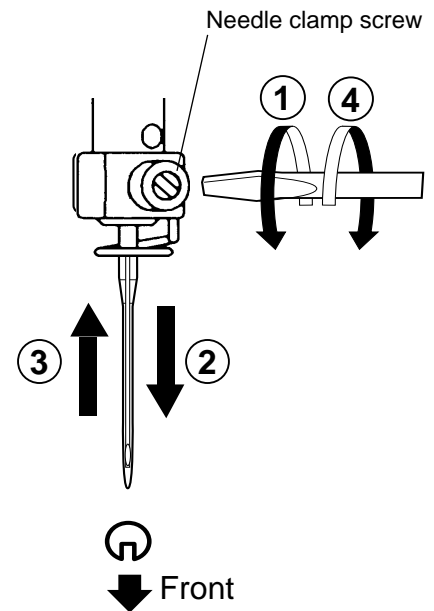

- A. Do not use a bent or blunt needle.
Place the needle on a flat surface and check for straightness.

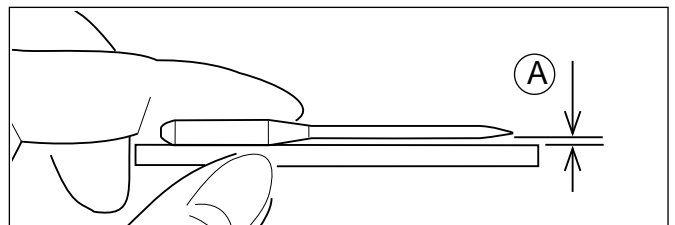

About needle

Please select needles by type of material .

Normally, We supply a DB X K5 needle as in the machine accessory kit.

TYPE	APPLICATION	Needle Size
DB X K5	For normal embroidery	9 ~ 18
DB - K23	For knit	9 ~ 12

Relation of needle and upper thread

Please select type of needle and upper thread by flowing list.

Size		Relation of needle and upper thread				
Organ	German	Cotton #	Silk	Polyester	Rayon	
# 8	# 60	100 ~ 130	140 ~ 160	150 ~ 200	50 ~ 70	
9	65	70 ~ 80	100 ~ 120	130 ~ 150	70 ~ 100	Normal em- broidery field
10	70					
11	75	50 ~ 60	80 ~ 100	100 ~ 130	100 ~ 130	
12	80					
13	85	36 ~ 40	60 ~ 70	80 ~ 100	130 ~ 150	
14	90					
15	95					
16	100	30 ~ 36	50 ~ 60	60 ~ 80	150 ~ 160	
17	105					
18	110	24 ~ 30	40 ~ 50	50 ~ 60	180 ~ 230	

► Normal use embroidery needle and upper thread.

Upper thread : Rayon 120 d/2 (120 denier)
Polyester 120 d/2 (120 denier)

Needle : #11 (DB X K5)

► If the relationship of needle size and thread type is incorrect, it is possible to have any of the following problems.

- Thread break
- Skip stitch (Upper thread does not catch bobbin thread)
- Other stitch quality problem

Backing

Generally, Backing is used for hooped embroidery fabric. Knit fabrics particularly require the use of embroidery backings.

Embroidery backings will allow the hoop to move the fabric more accurately, creating a more beautiful embroidery.


Select backing type

Choose the thickness and number of sheets by the type of material and embroidery condition. Generally, you should consider the following items.

- Embroidery stitch quality
- Contraction or compression of fabric caused by sewing, etc.
- Stiffness of fabric

■ In case, if you sew lace and leather, you may not need backing sheet.


Example of using a backing

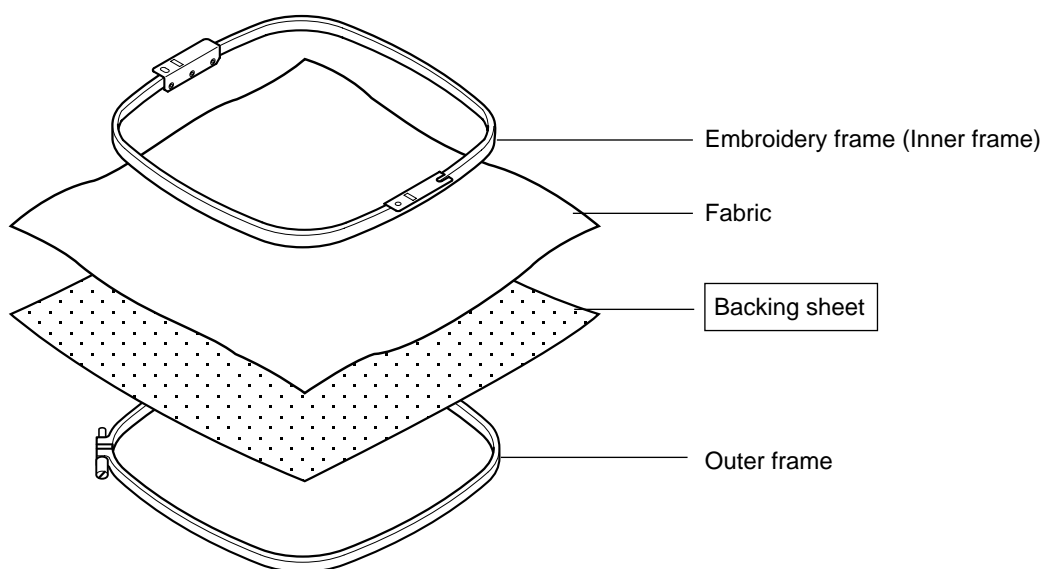

●Winding the bobbin (OPTION)

Thread the bobbin winder as shown below:

1. Thread guide
2. Thread tension – Be sure to thread through the small eye before going between the disks.
3. Bobbin (Place the bobbin on the bobbin winder spindle.)
4. Press the limit lever as indicated by the arrow to start the winder. The lever stops the winder automatically after the winding is complete.

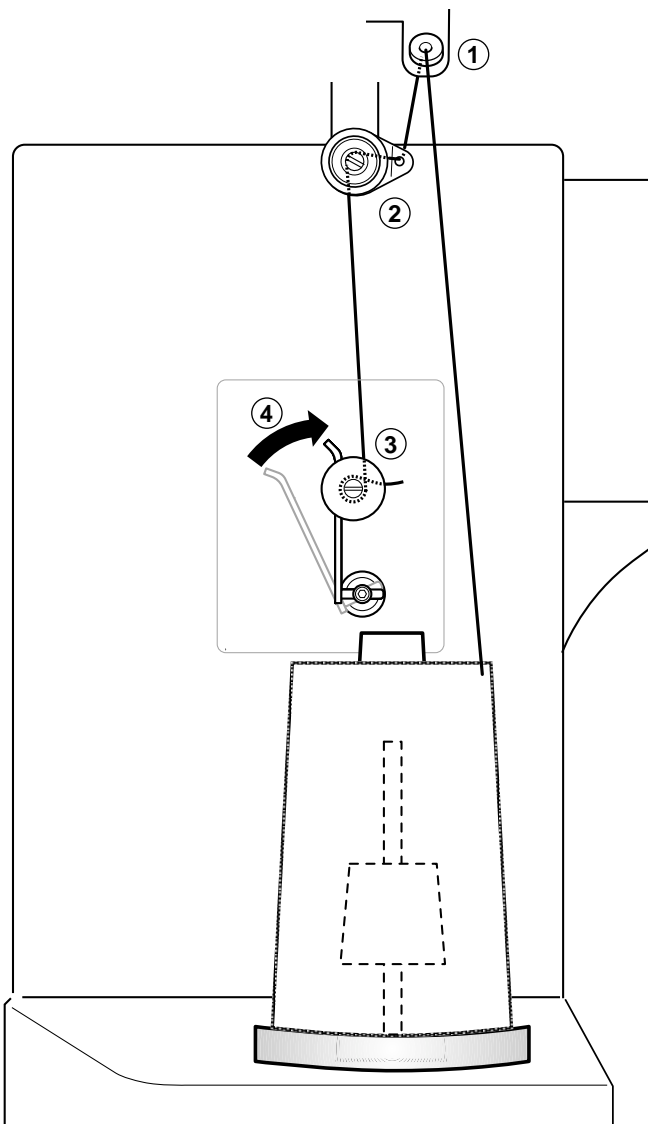

Tension




When adjusting bobbin winder tension:

- Ensure thread winds evenly on bobbin as shown.

Confirm that the bobbin is wound properly..

- Keep the tension constant while winding.


Tighten thread tension if thread winds too loosely.

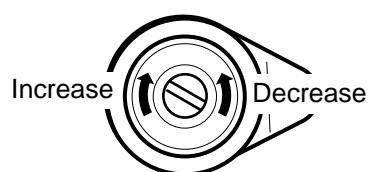

⚠ CAUTION: To prevent accidents.
Please watch out for the point of the rotary hook when you replace the bobbin.


● Removing the bobbin

1. Open hook cover (A) to front.
2. Grasp bobbin case latch (B) and withdraw bobbin case from hook taking care not to damage the thread keeper.

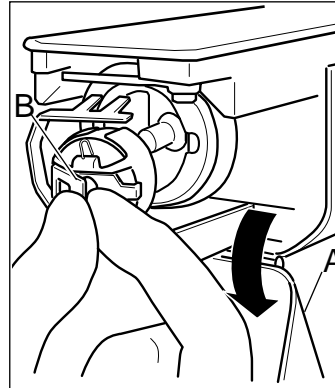


● Inserting the bobbin

1. Hold the bobbin case in left hand. Hold the bobbin in your right hand with thread on top leading from left to right.
2. Insert bobbin in case and draw thread up into slot in case.
3. Draw thread under tension spring (A) and wind into guide coil (B). The bobbin should turn clockwise in the case when the thread is pulled.

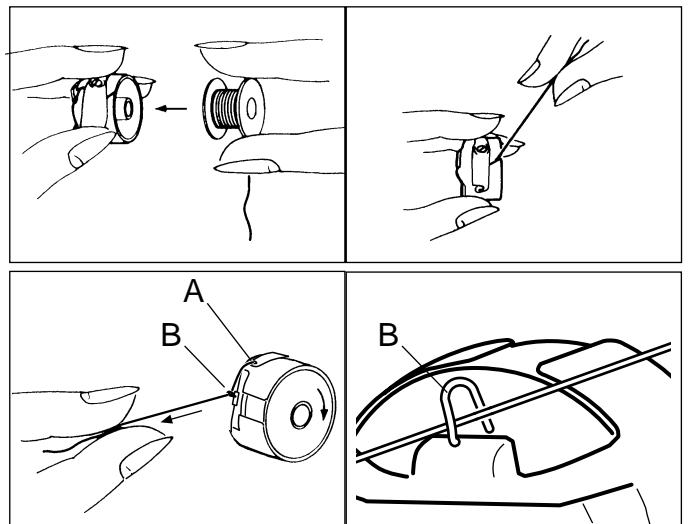


● Adjusting bobbin thread tension

1. Hold bobbin thread and jerk upward approx. an inch. Thread should unspool further approx. the same amount.
2. The screw on the tension spring is for adjusting bobbin tension. This adjustment is very delicate. Please turn the screw only a small amount. Only 1/8 of a turn maximum.

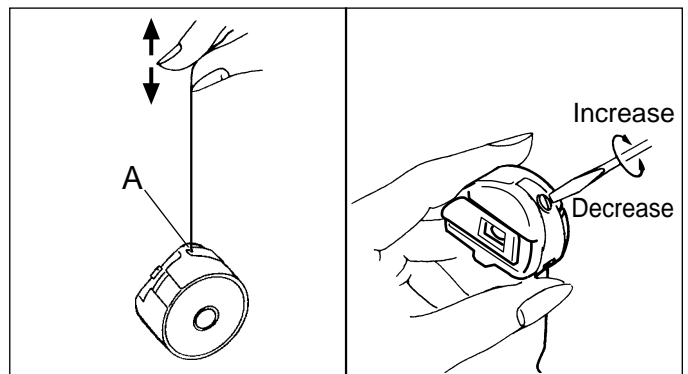


● Inserting the bobbin case

1. After threading bobbin in case, open bobbin case latch (A), grasping it in fingers as shown. Slip bobbin and case on stud of rotary hook body, and press in securely. Release bobbin case latch. Press the bobbin case in to be sure it is fully seated.
2. Close hook cover.

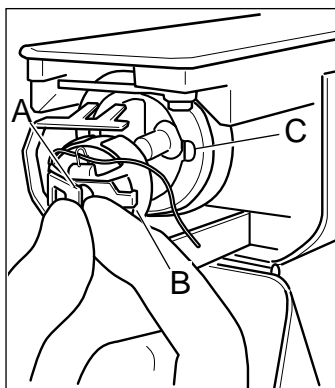


⚠ CAUTION: To prevent accidents.
Keep hook cover close and fingers away while the machine is running.


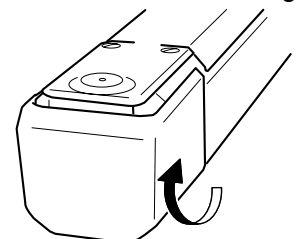


■ The attached bobbin case is available only for this machine. Thread may be caught in thread guide coil if other types are used.

●How to thread upper thread

Pass upper threads in order according to the figure:

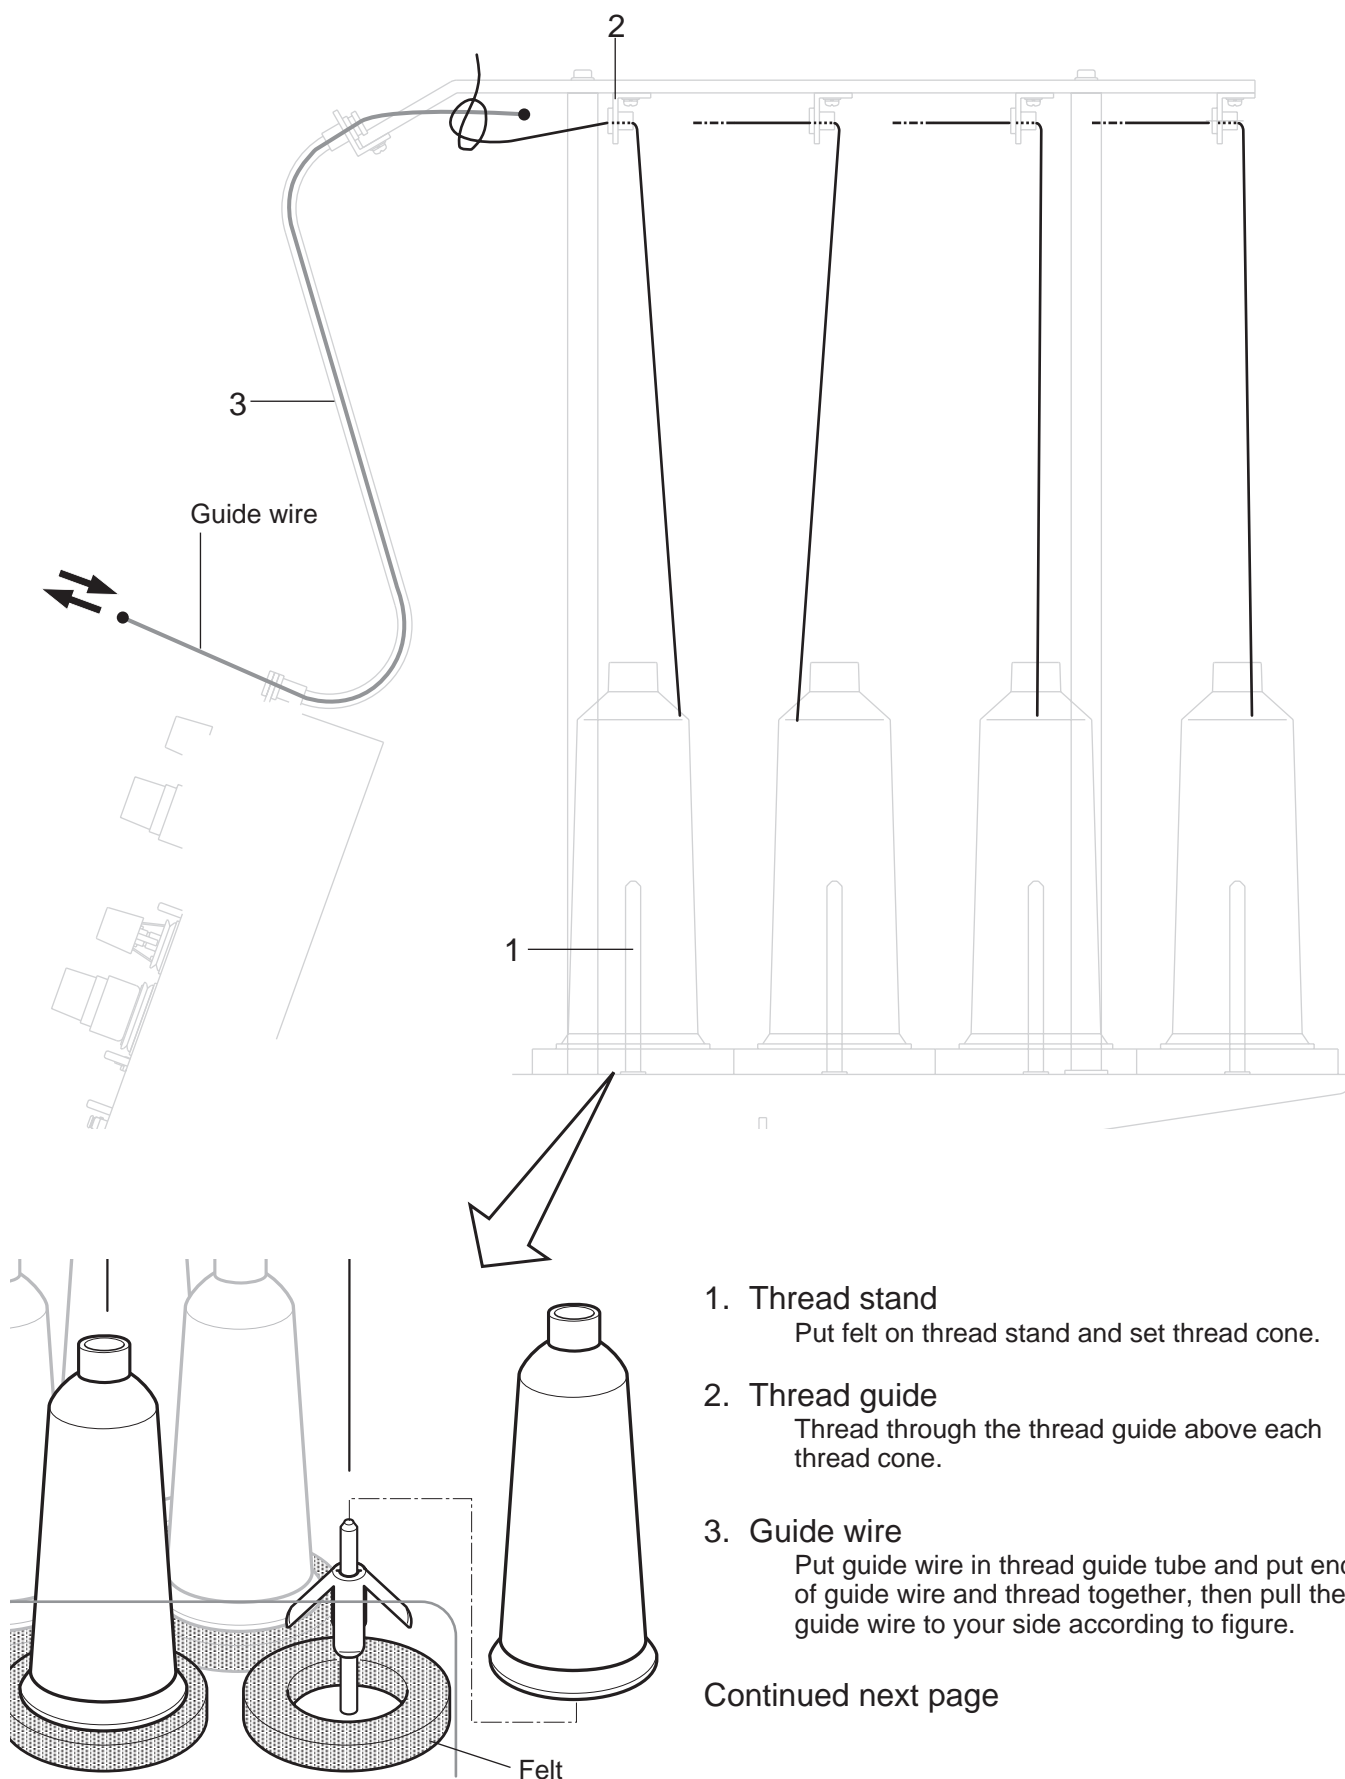

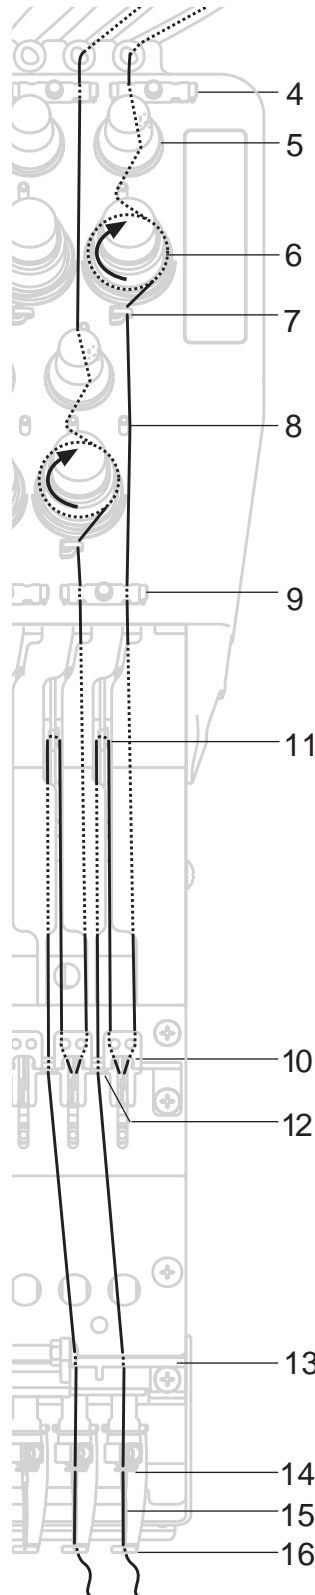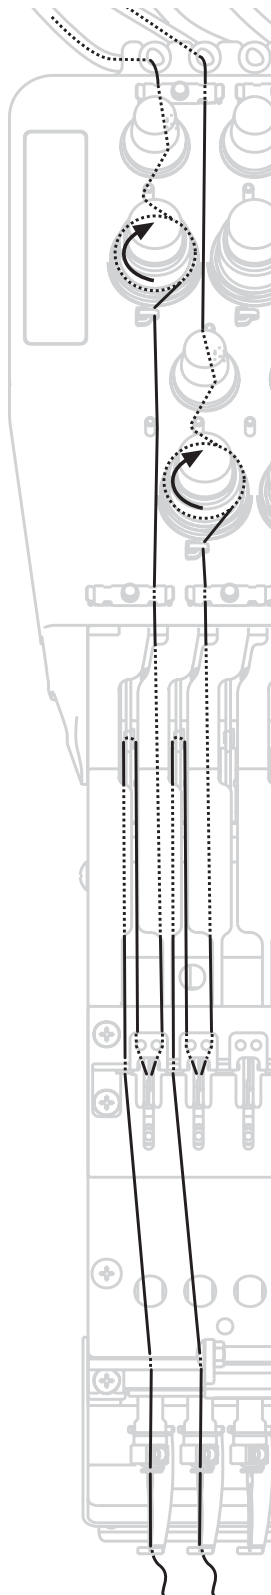

4. Upper rectifier

5. Minor thread tension

6. Thread tension

Wind upper threads one time around rotary tension disc clock-wise.

7. Thread guide

8. Guide pin

9. Lower rectifier

10. Thread adjusting spring

11. Take-up lever

12. Thread guide

13. Thread guide plate lower

14. Needle bar thread guide

15. Needle

Thread from front side of needle.

Pull upper threads slowly and see that the rotary tension disc moves smoothly by pulling the thread downward as much as possible.

16. Pressure foot

When checking thread, pull upper threads from needle and check if detecting roller moves smoothly.



CAUTION: To prevent accidents.



Please be careful of the sharp point of the needles when threading upper threads through the needle.


MACHINE SETTINGS

5-1

Before embroidering, check the basic settings of the machine.


The rest of the settings can be left at default values (as indicated by underline below).

No. Display	Setting <small>Default is underlined</small>	Contents
1 Fine mode	Yes..... <u>No</u>	The machine emphasizes stitch quality by controlling embroidery speed. By default it is set to "No".
2 Tightness level	- (Loose) <u>—</u> (Normal) + (Tight)	The machine adjusts thread tightness level by controlling the timing of frame move. By default it is set to "Normal".
3 TRD. break back	. 1 ~ 50 (<u>6</u>) ... 0	When thread is broken, the stitch will undo itself for the specified number of stitch. • The stitch undoes itself by the specified number of stitch in this setting. • The stitch does not undo.
5 Width data limit	1 - <u>13</u> mm (13=12.7)	When stitch length exceeds this length, the machine divides it by this jump length and creates multiple movements. Width data limit becomes 12.7mm only when setting value is set to 13. Please use a smaller number when you use thick and heavy material.
6 Quick start mode	. Yes..... <u>No</u>	If you set to "No", the machine will increase speed slowly. Please select "No." when you have a problem with skipped stitches on the beginning stitch after thread trim. • The machine sews up to 3 stitches slowly after thread cut. • The machine sews up to 5 stitches slowly after thread cut.
7 Auto thread cut	<u>Yes</u> No	This performs automatic thread cut after color change and stop.
8 Cut at jump data	. 1 ~ 8 (<u>3</u>)..... 0.....	When a set number of continuous jumps exists in pattern data, the machine cuts threads before jumping. • Machine trims the thread on setting number of constant jump. • Does not trim.
9 Cut at null jump	<u>Yes</u> No.....	This sets thread cuts before null jumps (isolated jumps with no net movement) • Does trim on empty jump data. • Does not trim on empty jump data.
10 CHG. always cut	Yes..... <u>No</u>	Forces a trim at every color change. • Always thread trim before color change. • If data does not have trim function at color change point, machine does not trim.
11 Length of TRD. cut	Max. Long <u>Normal</u> Short Min. Needle.....	The machine cuts upper threads to a longer length. • The upper threads of each needle will be cut off by registered length.  5-2b
13 Width data all	-1.0 ~ 1.0mm <u>0.0</u> mm.....	This is to alter the widths of all satin stitches for all the designs in the memory. • Adjust satin stitch width by selected amount. • Does not adjust width.
14 TRD. break detect	Quick 3 ~ ~ <u>Normal</u> ~ ~ Slow 3 Off Needle.....	Sensitivity selection of the thread break detect sensor. By default it is set to "Normal". • You can set sensitivity of thread break detection needle by needle.  5-3
15 Convert cap	Yes <u>No</u>	When you install the cap drive frame on the machine, the machine will convert (rotate) your design automatically.
16 Revers frame move	Yes <u>No</u>	Frame will be moved in the opposite direction of the arrow key.
17 STR. Auto Position	<u>Yes</u> No	Machine remembers & returns to last sewn position after sewing interruption even if operator has moved the frame after interrupt.
18 Embroidery weight	<u>Light</u> Middle Heavy	This setting for heavy duty material depends by material weight. Normally, please select "middle" or "Heavy" for Border frame. Machine speed is decreased automatically, when you select "middle " or "heavy".

No. Display	Setting <small>Default is underlined</small>	Contents
19 Expand cap limit	1 ~ 10mm <u>0</u> mm.....	<p>The direction of Y-axis of the embroidery area (standard) is extended in the direction of the brim of the cap.</p> <p> If the embroidery area is extended too much, there is a possibility that a needle and pressure foot may hit a frame and may be damaged. Before start sewing, please check carefully the embroidery area by trace function etc..</p> <ul style="list-style-type: none"> • The embroidery area is extended with the set-up size. • The embroidery area is not extended.
20 Frameout position	0 ~ <u>100</u> ~ 780mm	Set movement of frameout in the drive menu.
21 Display inch	<u>Yes</u> <u>No</u>	<ul style="list-style-type: none"> • Display the unit of dimensions at an inch. • Display the unit of dimensions by millimeters meter.
22 Trace speed	0 ~ <u>100</u> ~ 300	<p>You can change the Tracing speed. "100" mean the normal speed.</p> <p>If you change the number bigger, the speed decrease.</p>
23 Display off timer	<u>0</u> ~ <u>240</u> (min.)	<p>The machine turns off the display screen when the time without any operation exceeds the time entered in the parameter.</p> <p>Timer function is "off" when setting value is set to "0"</p>
24 Design disp mode	<u>All</u> Change	<ul style="list-style-type: none"> • When drive mode, highlight all color change number on the LCD Display. • Highlight only current color change number.
25 Drawing " Real Pattern"	<u>Yes</u> No	Display pattern with realistic image on the screen.
26 Operation Sound	<u>Yes</u> No	Make beep sound when button or key of touch panel is pressed.
27 Notification Sound	<u>Yes</u> No	Make beep sound when the machine is stopped.
28 FW/BW Lock Count(1st.)	<u>0</u> ~ 100	<p>In "Stitch number forward", set number of stitches until "Key lock" function is activated</p> <p>The "Key lock" function will be disabled when the number of stitches is set to "0".</p>
29 FW/BW Lock Count(10st.)	<u>0</u> ~ 100	<p>Set number of stitches until step of " Stitch number forward" is changed from one stitch to 10 stitches.</p> <p>The " Stitch number forward" function will be disabled when the number of stitches is set to " 0" .</p>


MACHINE SETTINGS

5-2a


1. When the machine is stopped, press  .



2. Select "OPTION".

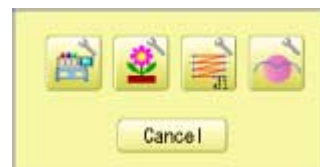

3. Select  .

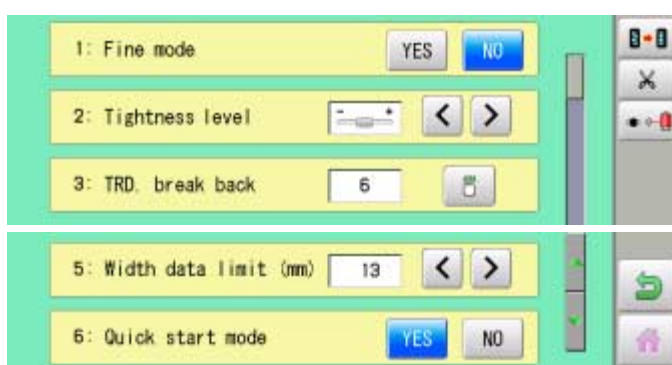

4. Select desired setting item and change the setting.

You can move to next page by pressing  .

Press  to return to Menu mode.

Press  to return to Drive mode.


Detailed explanation of machine settings



11 Length of TRD.cut


If you select "Needle" with this setting, the upper threads of each needle will be cut off by registered length.

The length of each thread can be set up taking the following steps.


1. Follow the steps 1.- 3. on the previous page and the display shows machine setting page.


2. Press .

3. Change the setting on the needle number you would like to change with  .


Press  when returning the setting on all the needle numbers to default.

Needle number

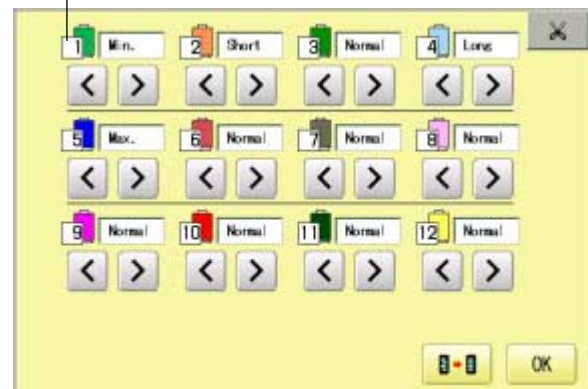

4. Press .

13 Width data all

This function adds additional width to all satin stitches in a design.  12-3


This is otherwise set in the "Settings" function, in which case any changes made to the setting from this screen will have no effect.



15 TRD. break detect


If you select "Needle" with this setting, you can set sensitivity of thread break detection needle by needle.


You can be set up taking the following steps.


1. Follow the steps 1.- 3. on the page 5-2 and the display shows machine setting page.

2. Press .

3. Change the setting on the needle number you would like to change with  .

Press  when returning the setting on all the needle numbers to default.

4. Press .

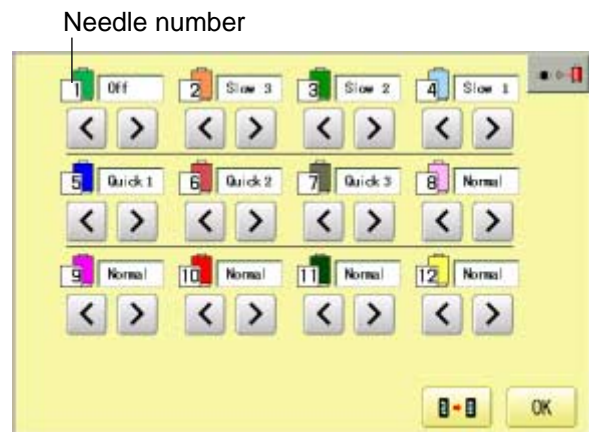


LOCK STITCHES

5-3b


Settings to lock stitches.

SETTING ITEM	SETTING RANGE	CONTENTS
1 Cut Lock stitch	OFF ON <u>AUTO</u>	: Remove lock stitch when the machine cuts threads. : Add lock stitch per SETTING ITEM 2 and 3 when the machine cuts threads. : Add lock stitch when length of the stitch before thread cut is longer than length set at SETTING ITEM 2.
2 Cut Lock Length	0.4~ <u>0.5</u> ~1.2mm	: Set lock stitch length when "ON" or "AUTO" on SETTING ITEM 1 Cut Lock stitch is selected.
3 Cut Lock Count	1 ~ <u>2</u> ~ 3	: Set number of lock stitch when "ON" or "AUTO" on SETTING ITEM 1 Cut Lock stitch is selected.
4 STR. Lock stitch	OFF ON <u>AUTO</u>	Add Lock stitch when the machine starts sewing. : Remove lock stitch when the machine starts. : Add lock stitch per SETTING ITEM 5 and 6. : Add lock stitch when length of the stitch before the machine starts sewing cut is longer than length set at SETTING ITEM 5.
5 STR. Lock Length	0.4~ <u>0.5</u> ~1.6mm	: Set length of lock stitch when "ON" or "AUTO" on SETTING ITEM 4 Cut Lock stitch is selected.
6 STR. Lock Count	1 ~ <u>2</u>	: Set number of lock stitch when "ON" or "AUTO" on SETTING ITEM 4 Cut Lock stitch is selected.

1. When the machine is stopped, press .



2. Select "OPTION".

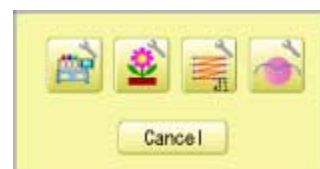

3. Select .



4. Select desired setting item and change the setting.

Press  when returning the setting to default.



Press  to return to Menu mode.


Press  to return to Drive mode.

SEQUIN SETTINGS option

5-3c


Settings to sequin device.

SETTING ITEM	SETTING RANGE	CONTENTS
1 Empty sequin detection(L)	<u>Yes</u> No	: Detect empty left sequin reel status before sequin is completely empty.
2 Sequin A size / color (L)	3 ~ <u>4</u> ~ 9mm	:  Select sequin size used for left sequin device.
		:  Select sequin color displayed on control box.

1. When the machine is stopped, press  .




2. Select "OPTION".

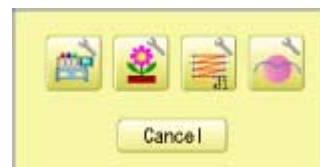



3. Select  .



4. Select setting item and change its setting.

Press  to reset all the sequin settings to default.

Press  to return to Menu mode.

Press  to return to Drive mode.


●Connecting to a PC

This embroidery machine will allow you to read design data from a connected PC.
A USB cable or a LAN cable can be used for the connection.


Install the clampfilter

In order to avoid unexpected trouble caused by electric noise, install attached clamp filter on the embroidery machine side on USB cable or LAN cable.

Install attached clamp filter when also using other cable than attached cable.

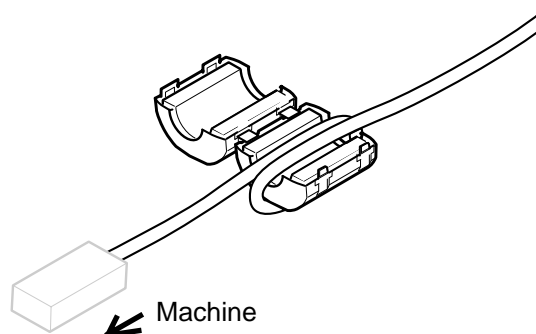

1. Please set clampfilter on new cable as picture.
Clampfilter should be located close to machine.
Cable should be turned around clampfilter as picture.

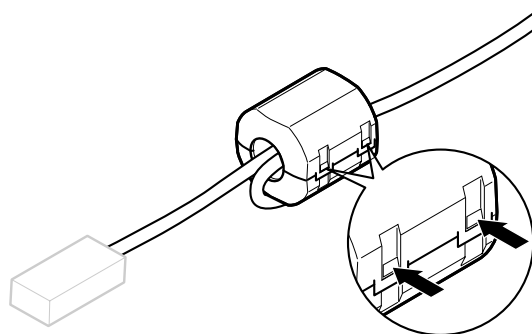

2. Please confirm filter is closed completely.
When the filter is removed, please press latch (2 positions) on clampfilter by thin rod.
Clampfilter opens and it can be removed from cable..


USB connection (based on the USB 1.1, 2.0)

Connect by USB cable between USB port (Standard-B receptacle) of the machine and USB port of the PC.

When you connect the USB cable, make sure that the machine is powered and set into drive mode, and that the PC is also turned on.

After recognizing USB in your PC, start-up the "Happy Link".

Please refer to instruction book of "Happy Link" for more precise information.


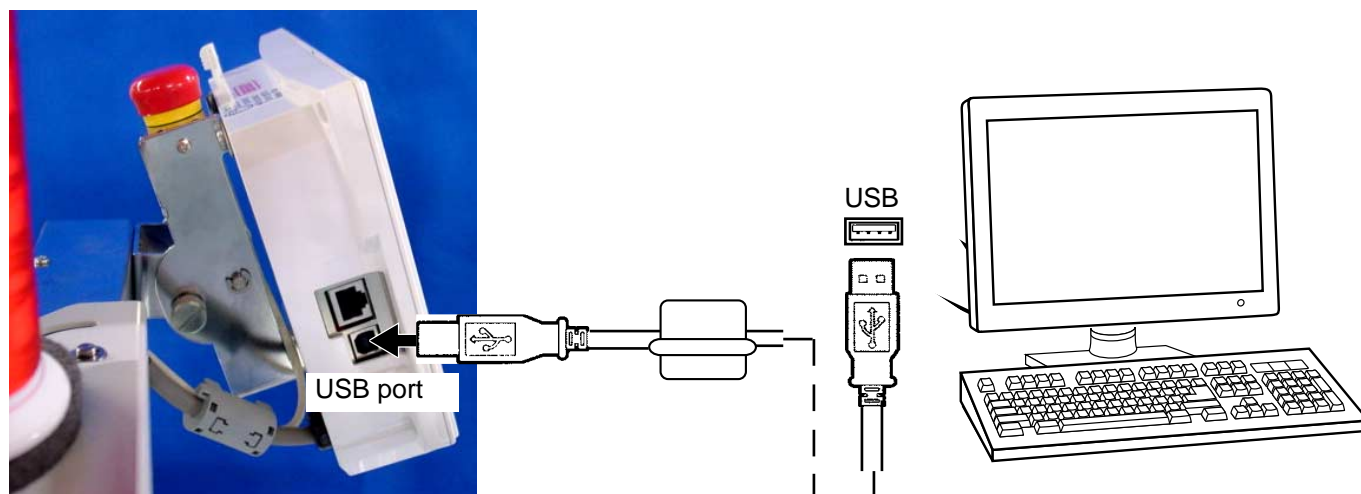


LAN connection

Connect the LAN cable between the LAN port of the machine and the network of the PC.

Multiple and different type of machines can be connected to a PC which has Happy Link LAN software installed.

Please refer to instruction book of "Happy Link LAN" for more precise information.

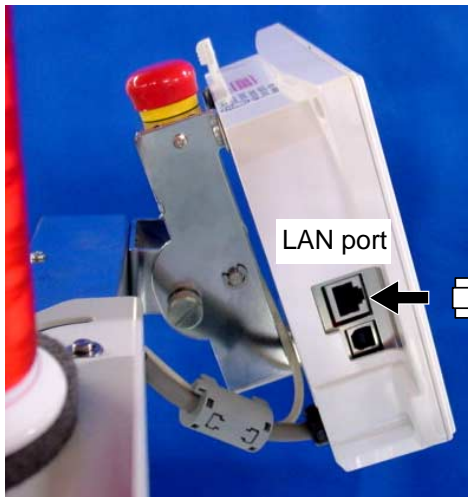

Connect to the Switching HUB or the Wireless LAN device.
Please refer to instruction book of "Happy Link LAN" for more precise information.

●Reading embroidery pattern data from the PC

Designs can be transferred to the machine along with some functions by using the "Happy Link LAN" software.

Please refer to the "Happy Link" or "Happy Link LAN" software manual for instructions.

●Read embroidery pattern data

Read the pattern to be embroidered from the memory media.

These types of memory media can be used.

This machine is able to read different kinds of memory media, which are generally used.

- USB memory

■ If you initialize the memory media with your PC, please proceed with FAT or FAT32 format.



Handling note of memory media.

Do not bend, drop, disassemble, charge or heat the memory media.
Keep away from humidity or direct sunlight.

To insert a USB memory

1. Insert the USB memory all the way into the USB memory port of the machine (right side of controller).
2. Read embroidery design data according to following “Memory card reading” in the next section.



To remove a USB memory

Please handle USB memory carefully.

Reading pattern data

This reads pattern data and writes into memory.



When the HAPPY format pattern data with *various function settings are read in memory, various functions such as needle bar selection, pattern data adjustments and etc. will be set automatically. (It is necessary to set "etc.func read". [P 14-4](#))

In addition to memory media, this machine can read pattern data saved in the PC connected with "Happy Link LAN".

Design folder settings on the "Happy Link LAN" is required before reading pattern data.

Please refer to "Happy Link LAN" System INSTRUCTION MANUAL regarding the settings method.


The pattern data can be read through the designated folder and sub-folders by accessing from the machine.

■ If the Happy or Tajima pattern data has Barudan or ZSK *data. (Tajima file :  DSB [Barudan] or  DSZ [ZSK])

The machine can read HAPPY and Tajima pattern data normally when "Auto" is selected at SETTING RANGE of SETTING ITEM 7 data format of Pattern read settings on page 14-4.

If the machine dose not read pattern data cannot at "Auto", please try with other data format such as Brd (Barudan) or Zsk (Zsk). The machine might be able to read the data. [P 14-4](#)



1. Insert the USB memory into the machine as described in "Inserting USB memory".

2. When the machine is stopped, press .

3. Select "READ".




Un-recognized device will be shown with gray color.

4. Select  (USB memory) or  (Pattern data in the PC).


Indicates pattern data.

 TAP : HAPPY

 DST : Tajima


 DSB : Tajima (Barudan)

 DSZ : Tajima (ZSK)

 Folder : Contents of folder will be displayed when you select this icon.

--- Serch pattern ---

Folder

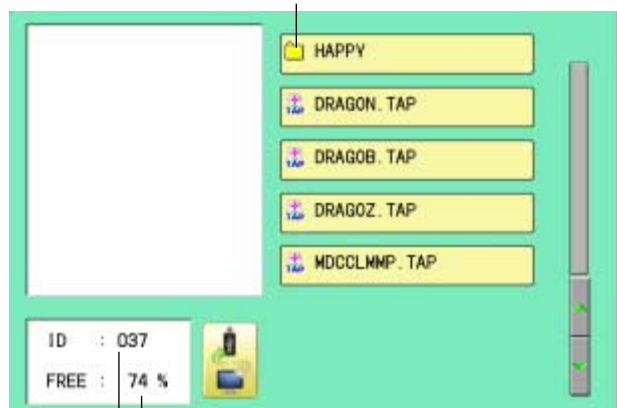

Free memory

The designs new ID number in the machines memory.

5. Select pattern data.

1 % of free memory is equivalent to about 400,000 stitches.
If there are more stitches than remaining space, you may need to delete some designs to make room for the new patterns.

Once design is read.

Enable to read other pattern data.

If you wish to read another design, continue to read other pattern data.

If you press , the display will return to step 3.

Switch the source you would like to extract pattern data from.


Press  to return to Menu mode.


Press  to return to Drive mode.


--- Reading ---


--- Check pattern data ---



When the screen displays pattern data in the folder,  is displayed.

When  is pressed, the screen moves off from the current folder.

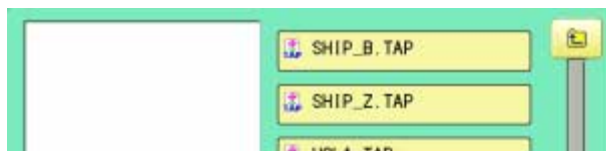


The icon  allows you to read the all designs at once which are located in the currently opened folder or directory.



● Selection of folders


The pattern data memory is consist of 20 individual folders.
Select desired folder to choose or input pattern data.

1. When the machine is stopped, press .




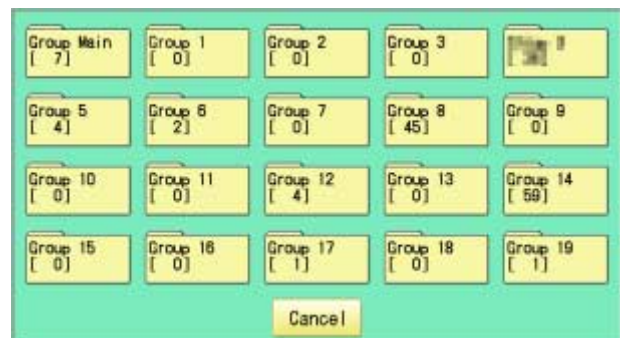
2. Select "PATTERN".

The pattern data of the selected folder will appear on the display.

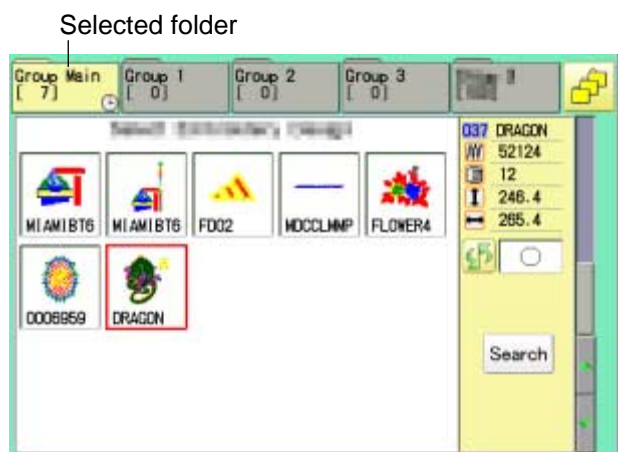

3. Go on to step 4, if you want to select pattern from displayed folder.


Press  to select from whole folders.



4. Select desired folder.

The selected folder has been switched.

You cannot switch to the folder without pattern data.

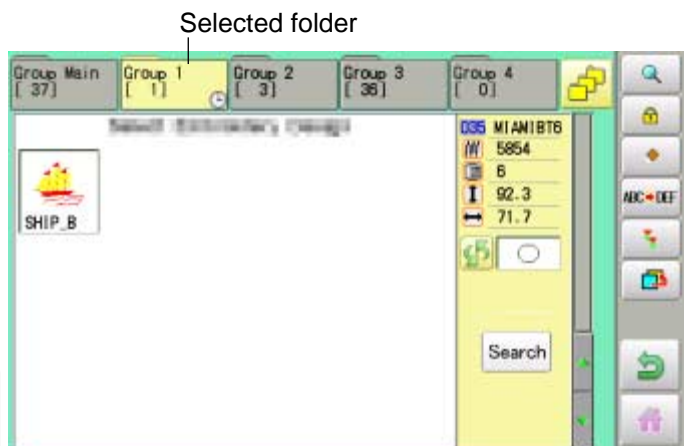


Press  to return to Menu mode.

Press  to return to Drive mode.

●How to select patterns from memory





To select an embroidery design previously stored into the machine memory.


1. When the machine is stopped, press  .



2. Select "PATTERN".


The display indicates the current pattern.
The right side of display shows the number, name and details for the current pattern.

-  Number of stitches
-  Number of Color change number
-  Height
-  Width

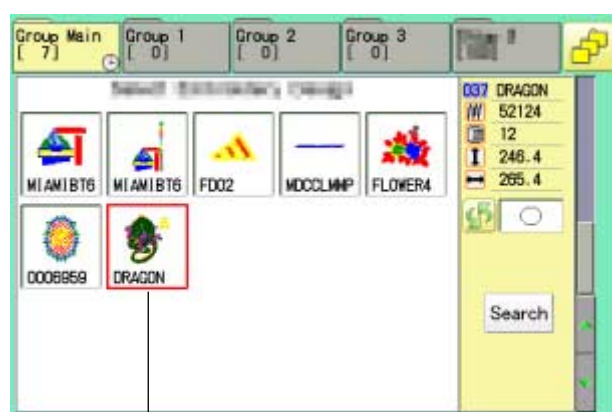

Selected pattern data

3. Select pattern data.
This pattern will be selected.

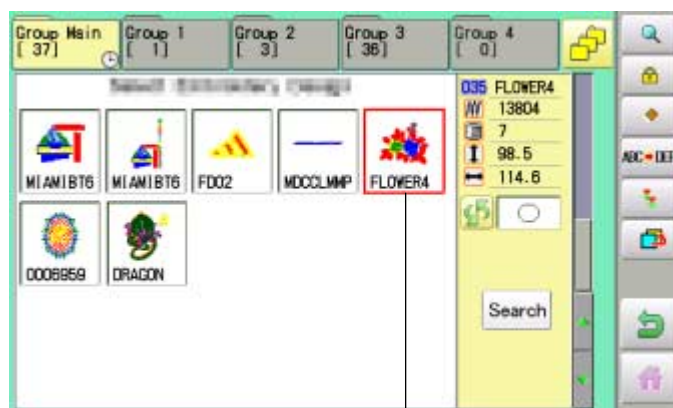

Selected pattern data


Press  to return to Menu mode.

Press  to return to Drive mode.

●Erasing patterns from memory


This is to erase an unnecessary design data from the machine memory.

 Pattern data cannot be erased if the lock is set.


1. When the machine is stopped, press .



2. Select "PATTERN".


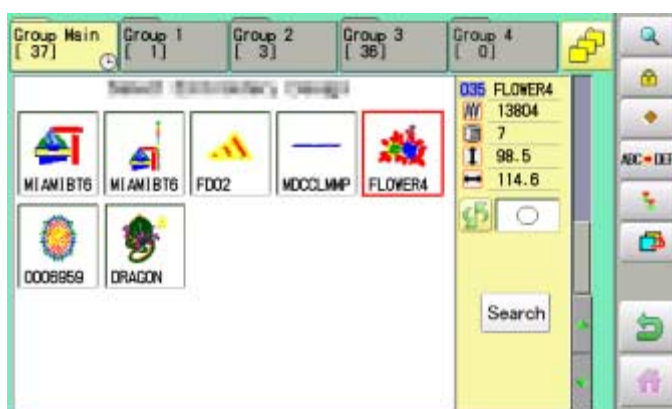



3. Press  from right submenu.

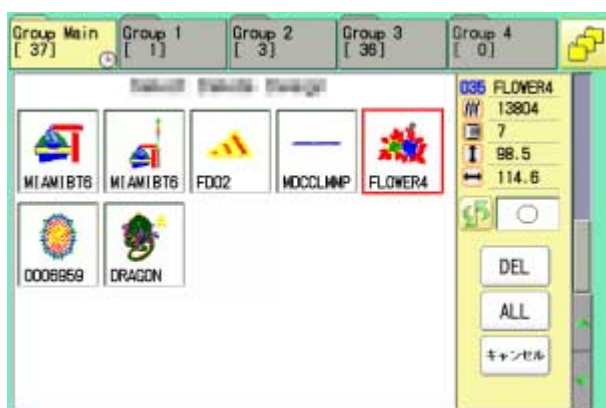


4. Select desired pattern.

Mark will appear left of the pattern.
Mark will be cleared by press it again.
Multiple pattern data can be selected.


 : Select all the pattern data
 : Cancel pattern data erasing

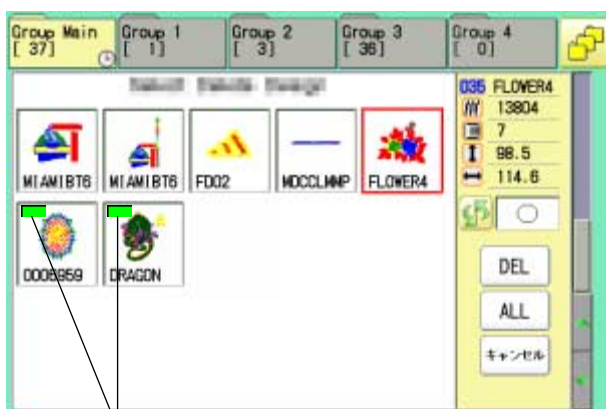

Mark

5. Press .

Showing number of delete design(s)

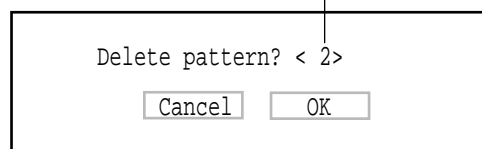


6. Push "OK" to delete.

The item will be deleted.

To delete other patterns, repeat steps 3 to 6.

Press "Cancel" to cancel the delete.

The display will return to step 2.

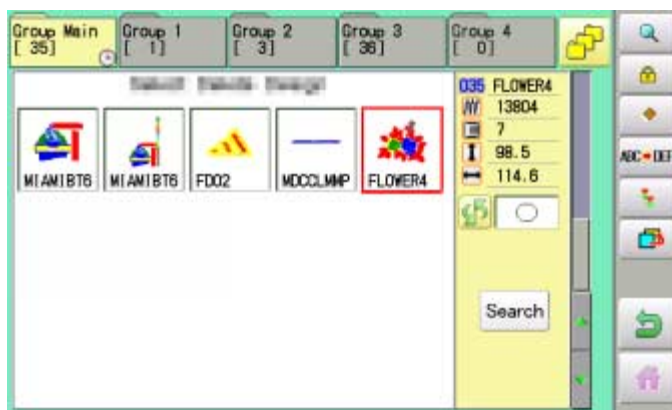


Press  to return to Menu mode.

Press  to return to Drive mode.

Erasing all patterns from memory

This is to erase alldesign data from the machine memory.


 Pattern data can be erased if the lock is set.

1. When the machine is stopped, press



Please note that this function can not be activated through "PATTERN" icon at "Quick menu".

In this case, open normal ÅgMENUÅh by

pressing  and follow the procedure as below.



2. Select "PATTERN" while pressing the



3. Press .

The item will be deleted.


NEEDLE BAR SELECTION

5-E

For each color change in a given pattern, the needle number loaded with the correct color thread is assigned by the operator. When this is set, the machine automatically changes to the programmed needle when the design reaches that point in the course of sewing the design.

 You can not setting "NEEDLE" for selected "LOCK" design.

Please release "LOCK" from design.  11-1

1. When the machine is stopped, press .




2. Select "NEEDLE".

The screen of color number 1 selection is displayed.

The current color number is showed in the pattern data display portion.

Color change number
Needle number
Current color change number
Number of color change number

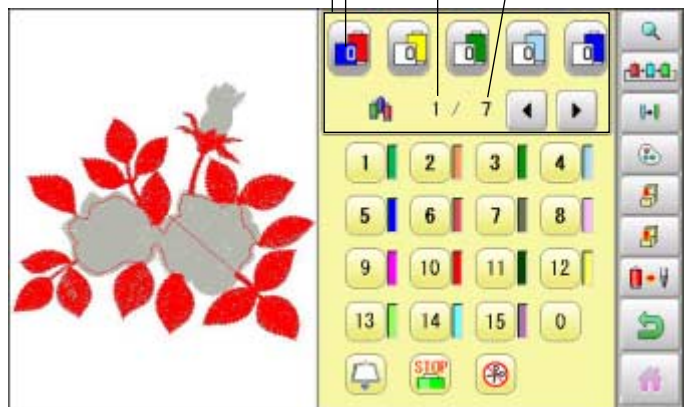

3. Select the needle number.

After setting the needle number on color number, the following color number selection is displayed.


You can also select color number directly.


You can switch color change numbers with




if the color change number has more than 5.

4. Select the needle number on all the color change numbers.

Press  to return to Menu mode.

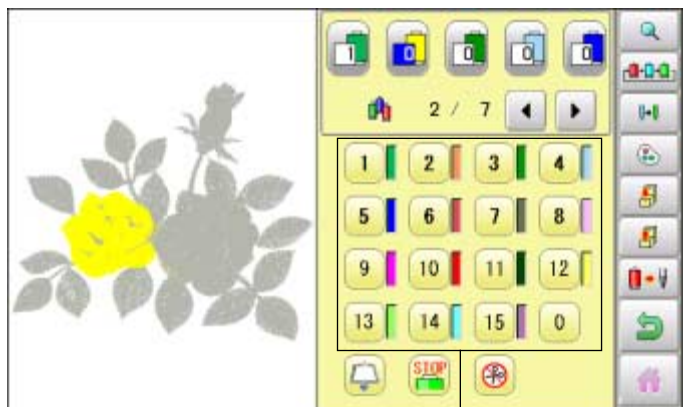


Needle number

Press  to on the sub menu to check the setting.




No thread cut mark Frame out mark Color change stop mark

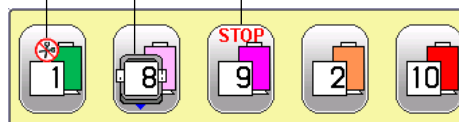

Color change stop function

When a color change stop is set to a color change number, the machine will stop after it finishes sewing the marked needle number, then following message will be shown:

When you wish to start again, Press  (Start/Stop button).

1. Select a color change number and press .

The mark is displayed on the color change number.


2. Set it to the same on other color change number if necessary.



Selection of color change number

Set Color change number to execute frameout.

A frame out command can be added to a design. By setting frameout to a *Color change number in a design, you can move the frame to a desired position automatically and stop it after the machine finishes sewing of that color change number.

When you resume operation, the frame has an automatic return to previous position and you can continue sewing.  12-D

1. Select a color change number and press .

The mark is displayed on the color change number.

2. Set it to the same on other color change number if necessary.

■ When you turn frameout "On" without setting the move distance of frameout, this results in the same action as color a change stop.




No thread cut after color change

When "no thread cut after color change" is set on a color change number, thread cut is not done after color change at the specified color change number and the machine switches to the next color change number.


"No thread cut after color change" function can be set by combining color change stop or frame out function.

● Installing and removing the Tubular frame arm


Please attach the Tubular frame arm to the carriage when you wish to use a tubular embroidery hoop. Please remove it in the reverse order of installation.

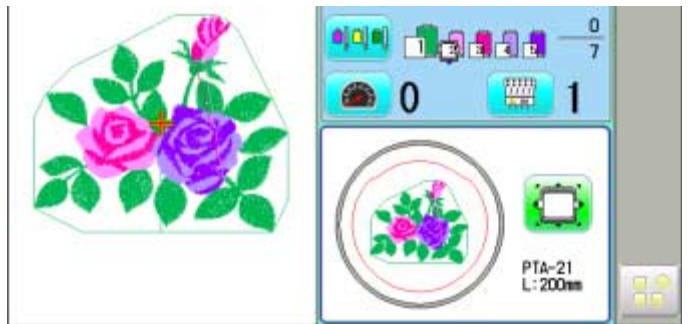


1. When the machine is stopped, press

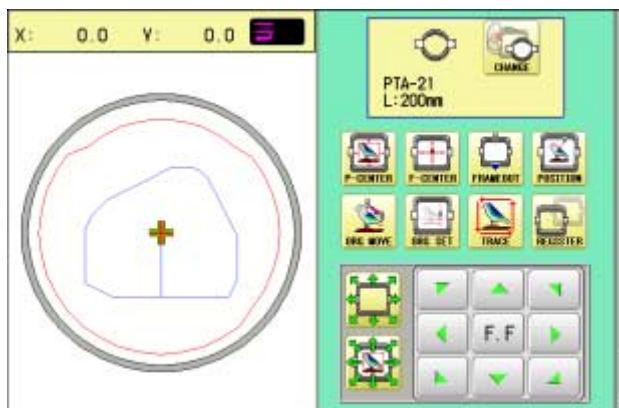



2. Press

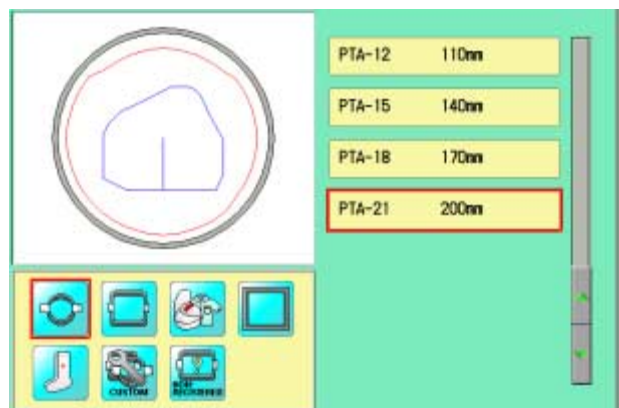


3. Select   or .

 : Tubular round frame



 : Tubular square frame

 : User-defined frame

4. Select desired type of frame.

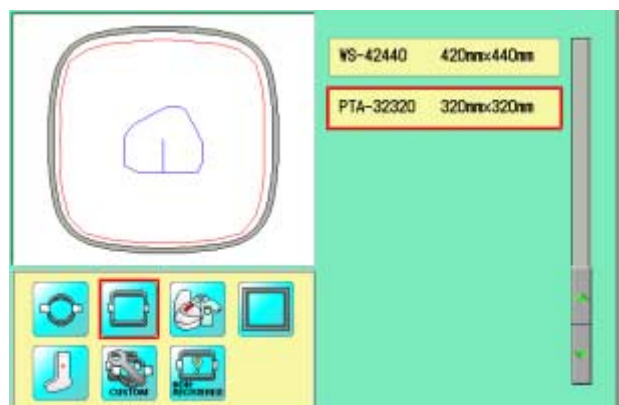

●How to hoop

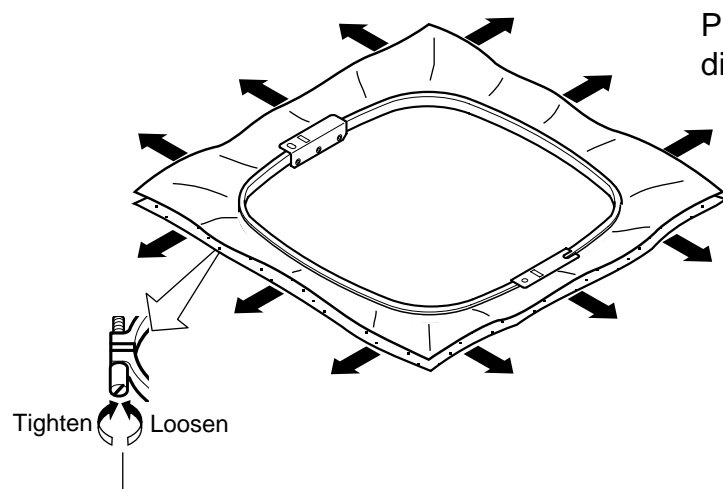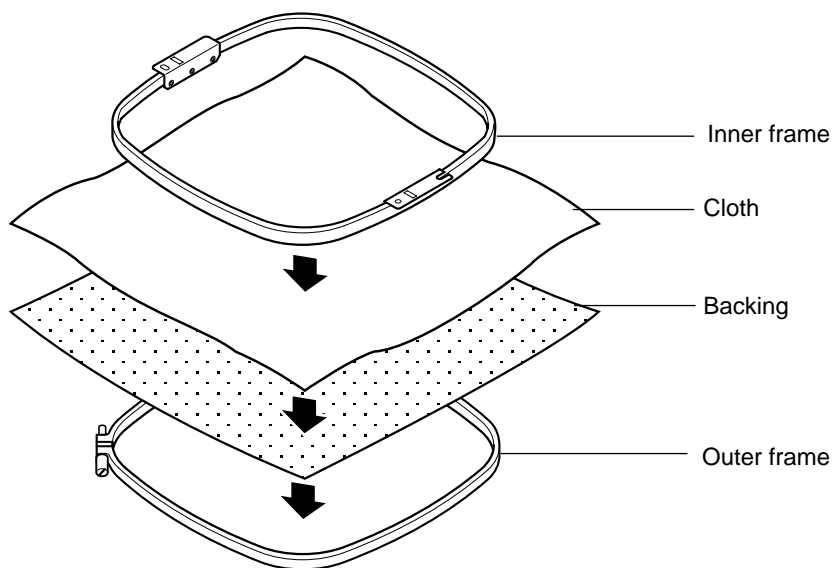

Please stretch the embroidery cloth in the directions of the arrow to smooth the cloth.

Please smooth the embroidery cloth while adjusting tightness of outer frame.

Do not stretch the elastic cloth too much.

● Mounting the hoop on the machine


1. Move the Tubular frame arm to the approximate center position before inserting the tubular embroidering frame.



Tubular frame arm

2. Insert the embroidery frame.

Make sure that the holder pins are inserted into the positioning holes of the frame base on each side.

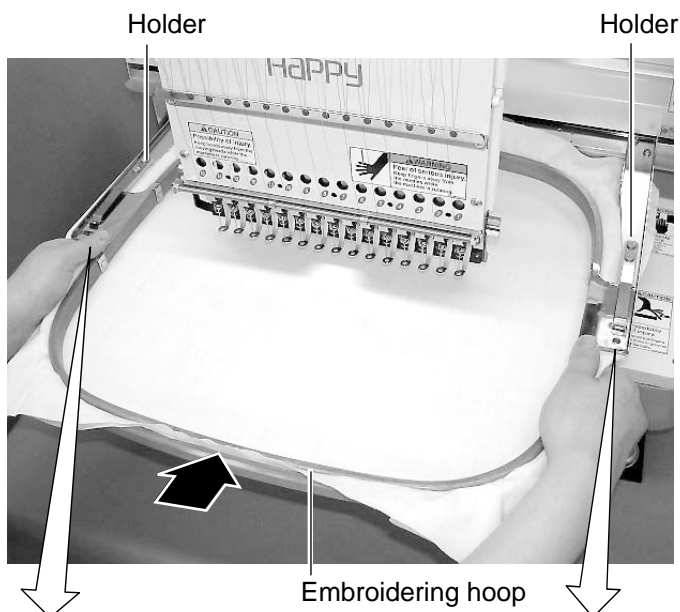

Positioning hole
Positioning pin



Positioning hole
Positioning pin

Use TAJIMA made tubular frame

You can use TAJIMA made tubular frame which has the same installation width (space between left and right positioning pin) as HAPPY's frame by changing the position of both left and right hold springs and left and right hold spring bases.

Follow the procedure below after removing tubular frame.


1. Loosen screws (2 each at both left and right).
2. Move both left and right hold spring bases deep into screws.
3. Move both left and right hold springs forward until the spring touches screws and stops moving.
4. Tighten screws (2 each at both left and right).
5. Install tubular frame and check if the tip of both left and right hold springs enters receiving hole on tubular frame.

If the tip dose not enter receiving hole, loosen screw, rotate hold springs left or right so that the tip can enter the hole, and tighten screw.


Please reverse the procedure above when returning to the position of something before change has been made.

HAPPY

TAJIMA

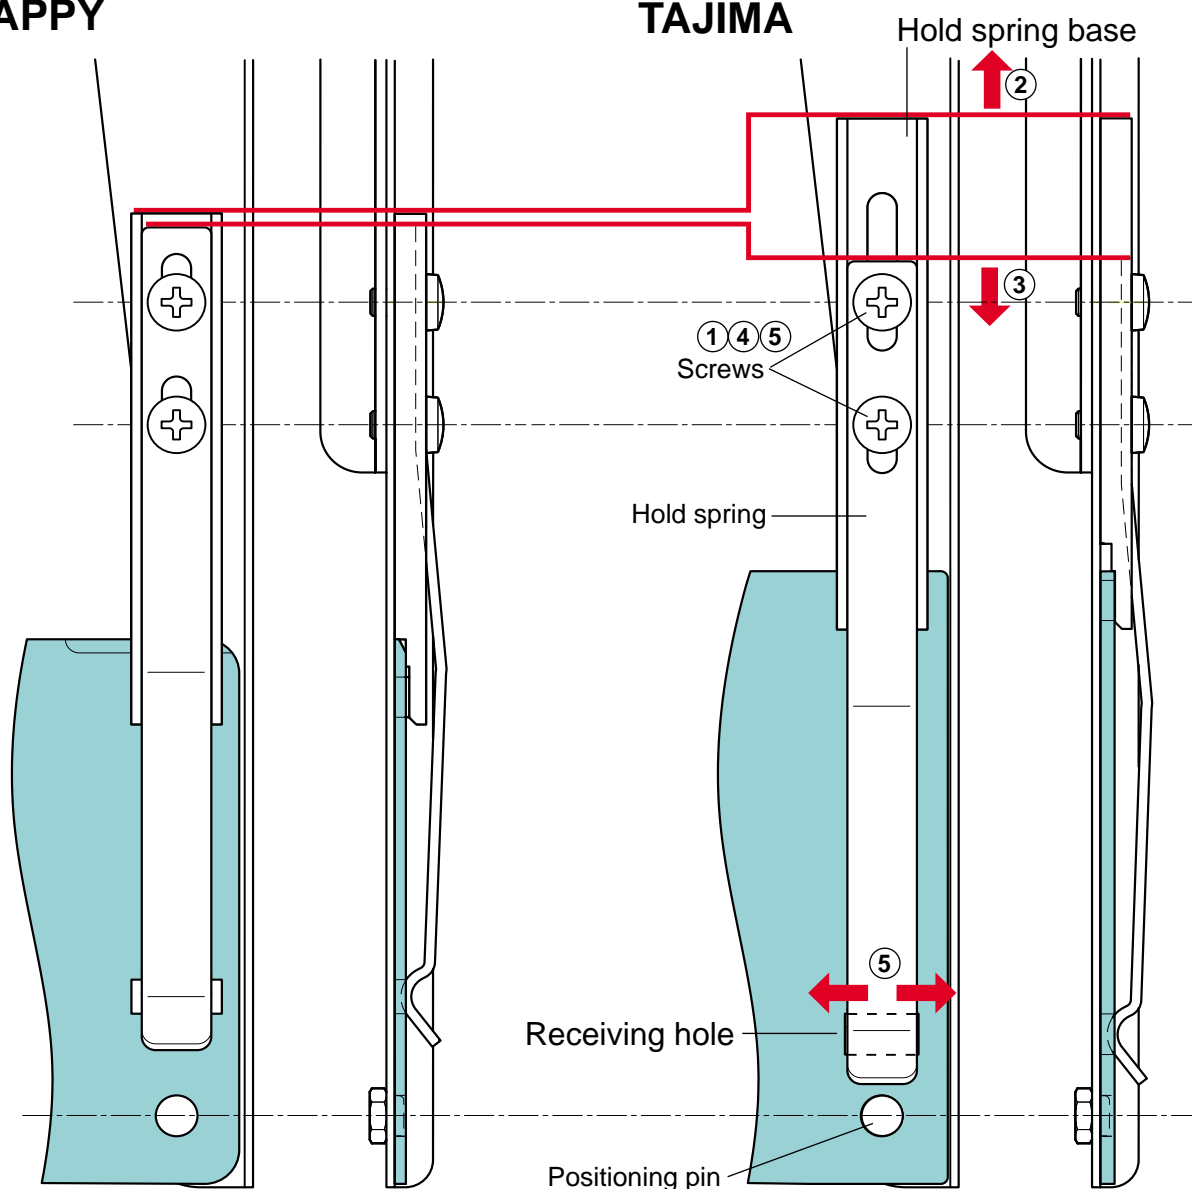


●Starting to embroider

1. Press  and move the frame to the



original point with the

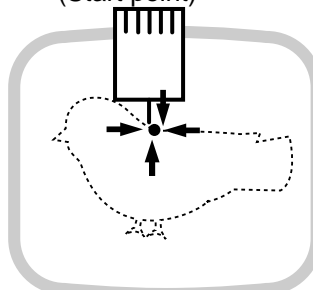


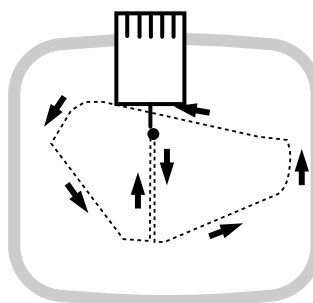
- : Original point (Start point)




2. Press .

Press , and the embroidering frame moves for the design trace.  14-5
Make sure that the pressure foot and needle do not touch the frame.

Press , and trace is stopped.




Backward only when pressing
Forward only when pressing

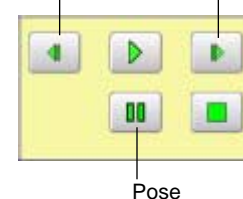

You can confirm outline trace and the position of the design.


Go on to step 4 if you want to start embroidering without tracing.

3. Press  after the trace is completed.

The embroidering frame has moved to the first stitch point of the pattern.

4. Press .


The embroidery will start.

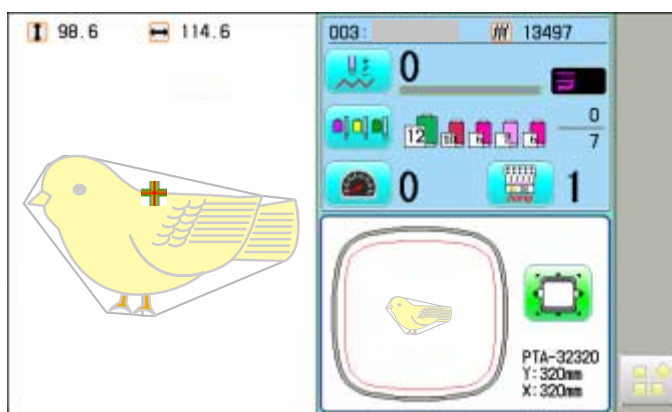

5. After embroidering your design is complete, show ">>End" and the machine will stop.

The embroidery frame returns to the original point automatically if the "Auto origin" function has been activated.

>>End

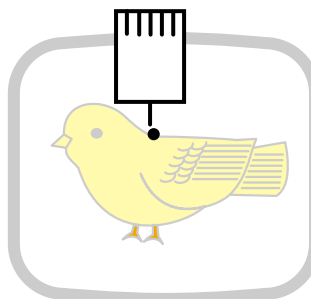

●Cap frame settings

2 types of cap frames, Normal and Wide, are available with this model. When you embroider by using a cap frame, please ensure that a correct setting is selected according to each.

CAUTION: To avoid problems.
The machine and/or cap frame may be damaged if the incorrect frame settings are used.

1. When the machine is stopped, press



2. Press



3. Select "Cap and One-point frame".

4. Select desired type of frame.
Then Cap frame will be set.

5. Press



and







The embroidery frame will move to the center .

CAUTION: To prevent accidents.
The embroidery frame and carriage will move.
Please keep hands clear for your safety.

Press



to return to Drive mode.

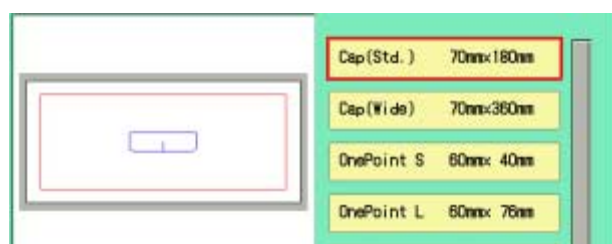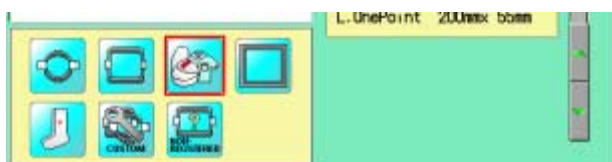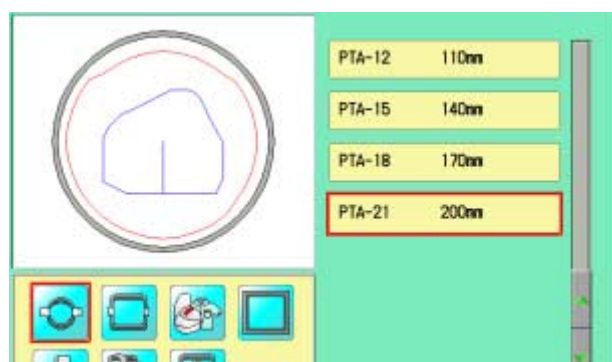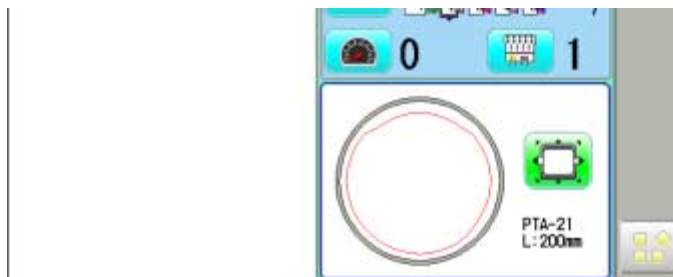

●Installing and removing the cap drive frame

The cap drive frame must be installed onto the carriage to embroider a cap.
Please remove by reverse order of these step.

1. Turn on the power switch.

Push the power switch firmly so it will remain on.



Confirm that there are “Cap (Std.)” or “Cap (Wide)” in the display.

If these icons are not in the display, please return to "How to turn on the machine" on previous page and change the cap frame.



2. Press **Next**.

The carriage and frame will move slightly and then the embroidery frame will return to the previous position automatically.



CAUTION: To prevent accidents.

The frame moves quickly.
Keep hands away from the frame.



3. Press  and Press .

The embroidery frame will move to the center.



CAUTION: To prevent accidents.

The frame moves quickly.
Keep hands away from the frame.




4. Turn off the machine.



Removing Tubular frame arm


Make sure that both left and right arms are removed from connecting plate before installing cap drive frame. The arms can be removed by loosening screws shown by the arrows and pulling both arms.

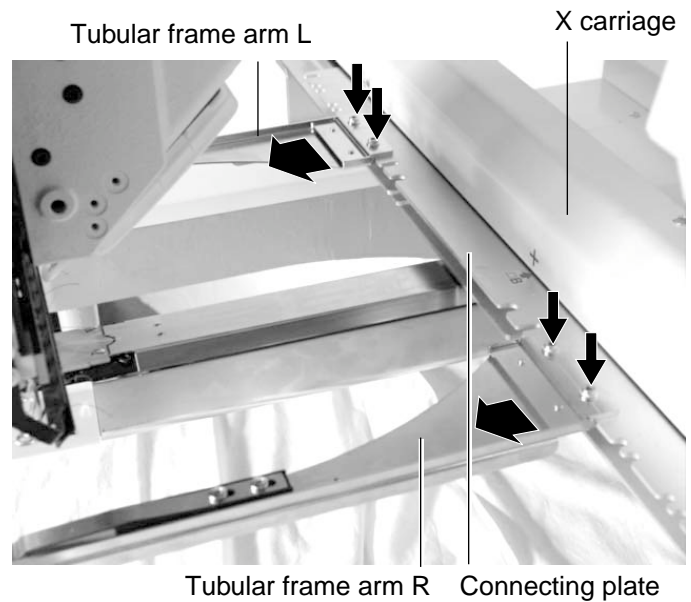


5. Mount the cap drive frame assembly on the bed.

Temporarily fix both left and right fixing brackets with knob screws as indicated in the picture on the right.


When holding the cap drive frame assembly, be sure to also hold onto the rotary cylinder. If you hold the rail bracket, fingers may be caught between the rail bracket and rotary cylinder or the rail bracket may be knocked out of place.

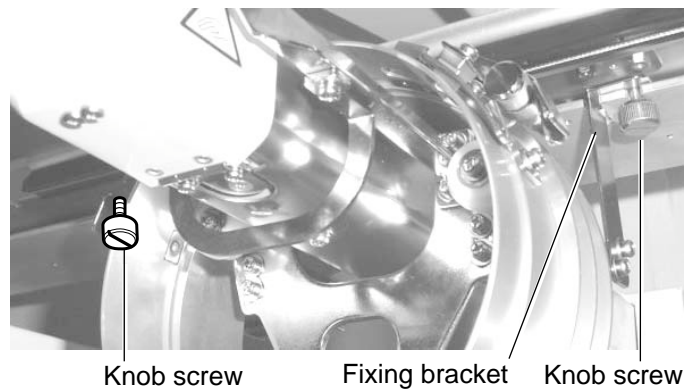


Drive frame connecting bracket

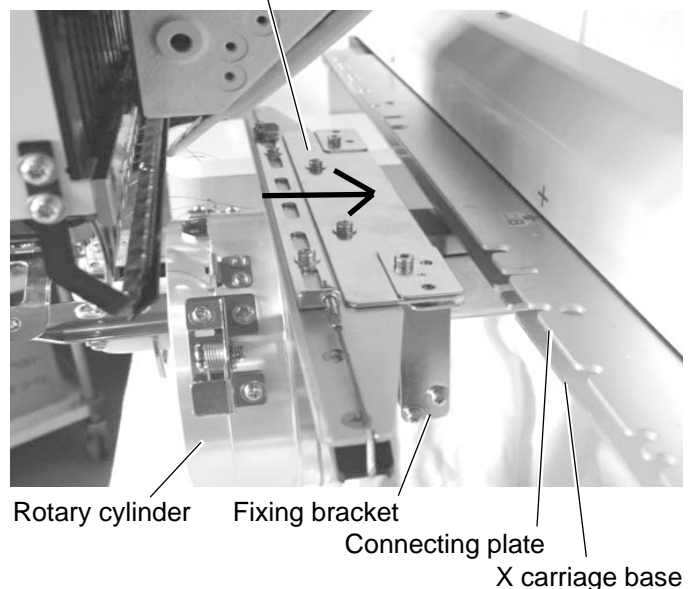


6. Temporally fix both left and right fixing Drive frame connecting bracket with knob screws. Push Drive frame connecting bracket to the carriage side (direction of the arrow in the picture on the right.) so that position pins fit slots of connecting plate. Fix firmly drive frame connecting bracket and connecting plate with the knob screws.

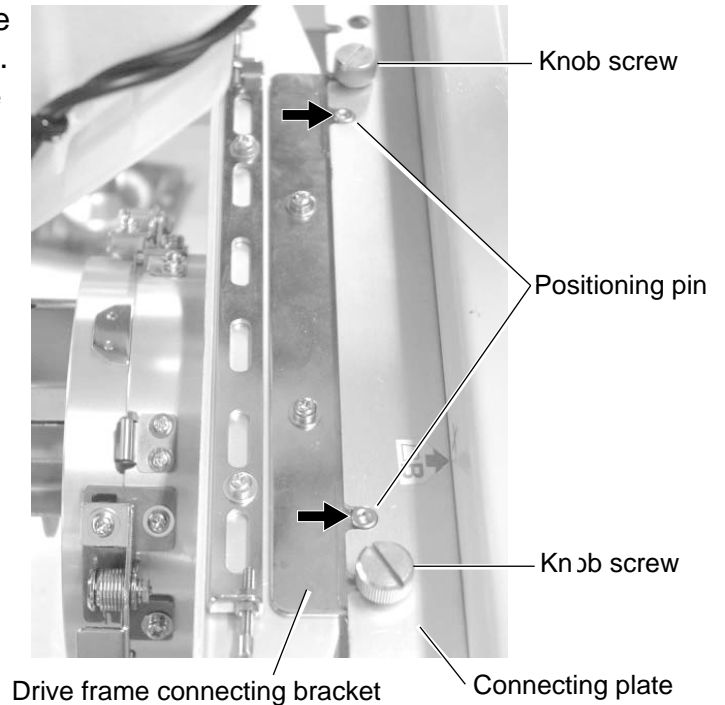

7. Fix firmly X carriage base with both left and right lower knob screws while pushing left and right fixing brackets in the direction of the arrow.

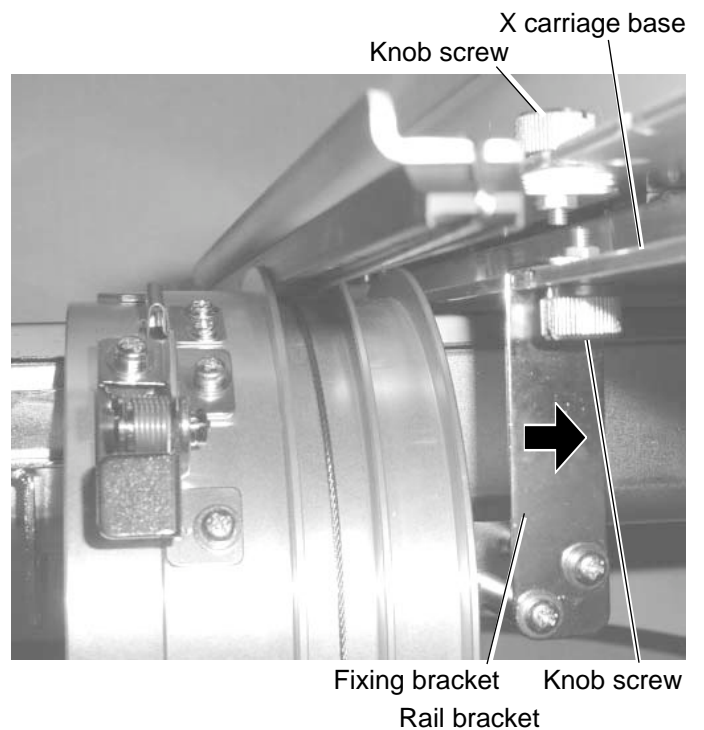

8. Move the rail bracket completely right and left to confirm that the rails are in the grooves of the rotary cylinder.

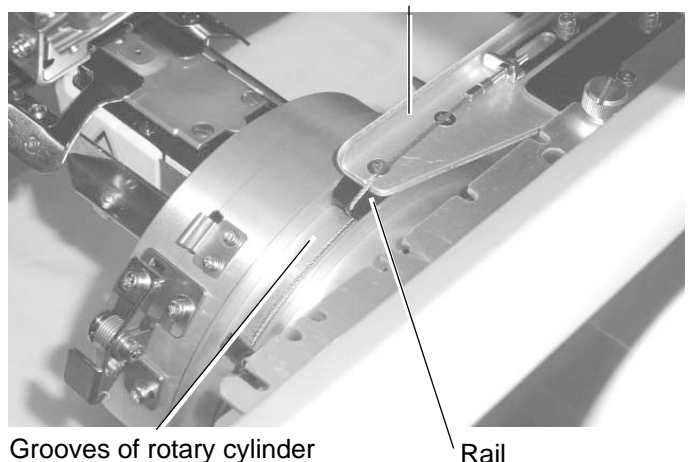

●Normal cap frame

Adjustment

When you hoop a cap on the cap frame, please adjust in the following manner:

1. Adjust position of clamp support to the height of the cap. (Fig. 1)
Adjust the height by removing the inner screws at left and right.

If you adjust position of clamp support and shorten distance H, embroidery area will be reduced in Y direction (depth).
2. Adjust the clamp to fit the clamp support. (Fig. 2)
Loosen wing nuts at left and right to adjust.

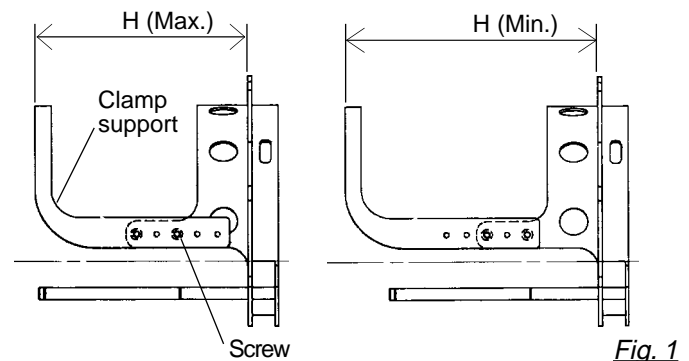


Fig. 1

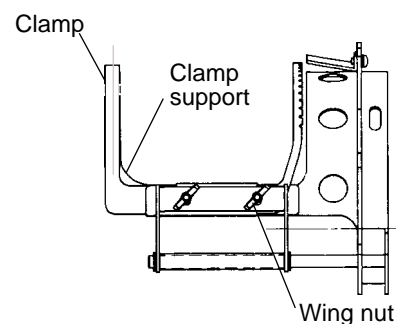


Fig. 2

3. Adjust up and down position of the hook according to the thickness of the cap to adjust clamp tension. At this moment, the hook should open and close without feeling too tight.
(For adjustment, proceed to procedure 5 below).
Use the wing nuts for adjustment. (Fig. 3)

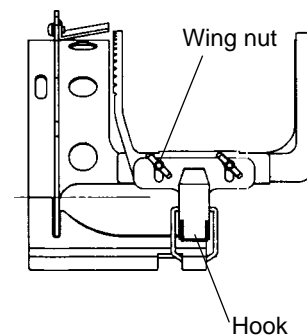


Fig. 3

If the hook is extremely tight, it will damage the cap frame permanently.

4. Put the cap frame without a cap to cap drive on the machine.
(Please refer to operation 8 "Hooping caps" on next page for mounting).
At this time, adjust so that guide on cap drive frame doesn't strike clamp support and gap is reduced as small as possible.
Remove screws at left and right to adjust. (Fig. 4)

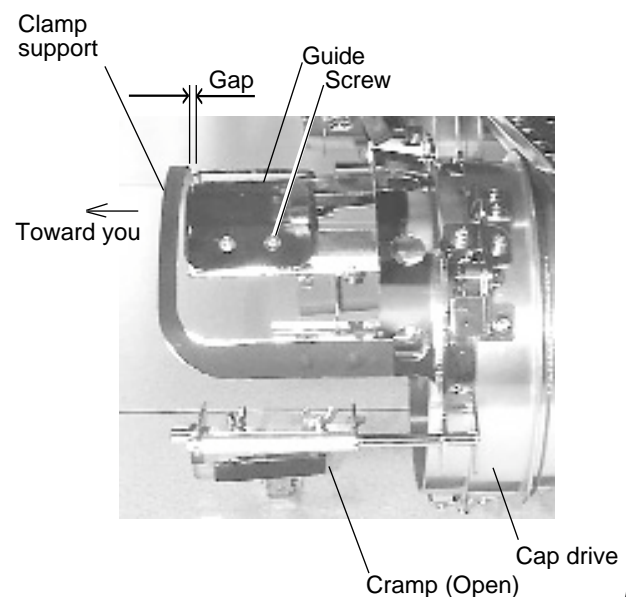


Fig. 4

CAP FRAME (OPTION)

7-6

Hooping caps

1. Place cap stretcher securely on a sturdy work bench.
2. As shown in Fig. 5, hold cap frame with both hands and place on cap stretcher. By pushing locking levers at 2 places with fingers, place cap frame so that center guide of cap stretcher fits in concave area of cap frame.

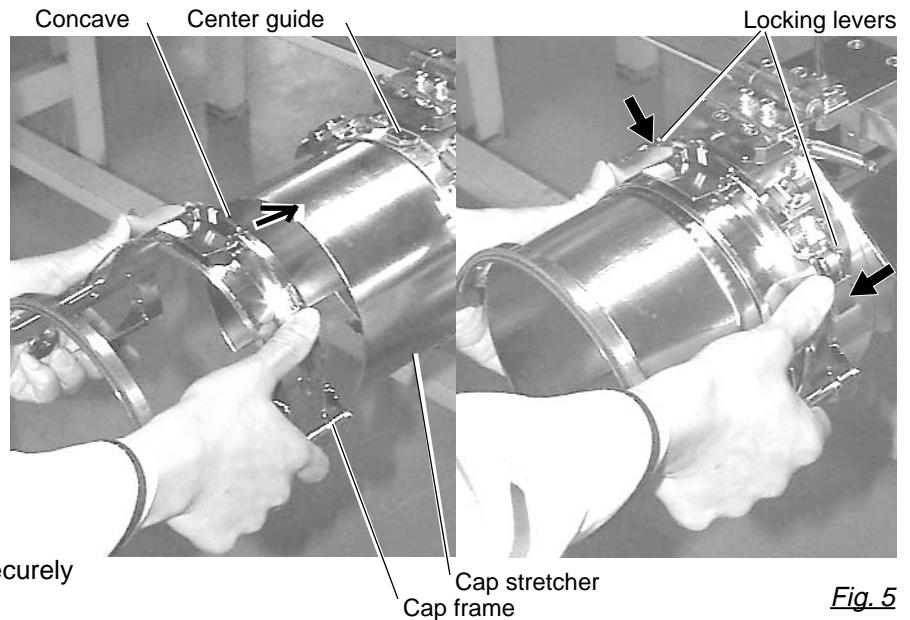


Fig. 5

3. As shown in Fig. 6, open clamp and keep open to the right.
4. Take the front half of the sweatband out of the cap and cover the cap stretcher with the sweatband. Cover the cap stretcher with the sweatband so that the edge of the sweatband contacts the flange of the cap frame.

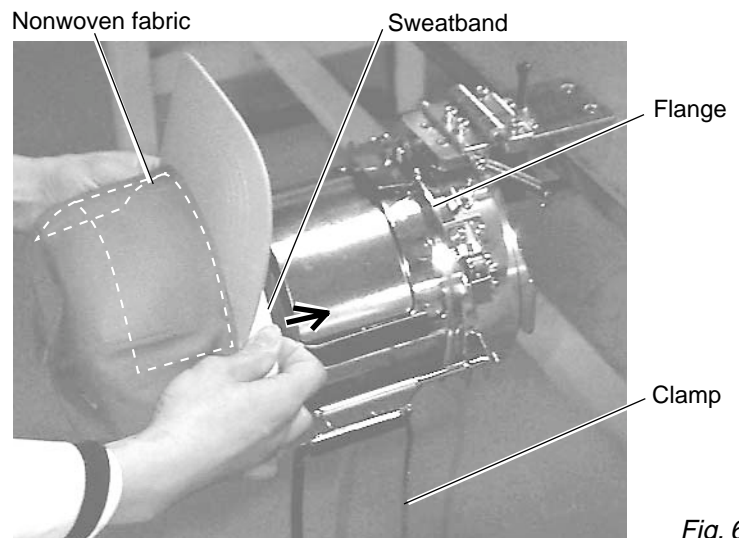


Fig. 6

5. As shown in Fig. 7, pull back part of cap and hook it temporarily on the hook and smooth out wrinkles on cap. At this time, align the center of the cap to the center mark on the cap frame so that notched portion of the clamp fits into the seam of the visor of the cap.
6. Latch the hook, taking care not to cause wrinkles in the cap.

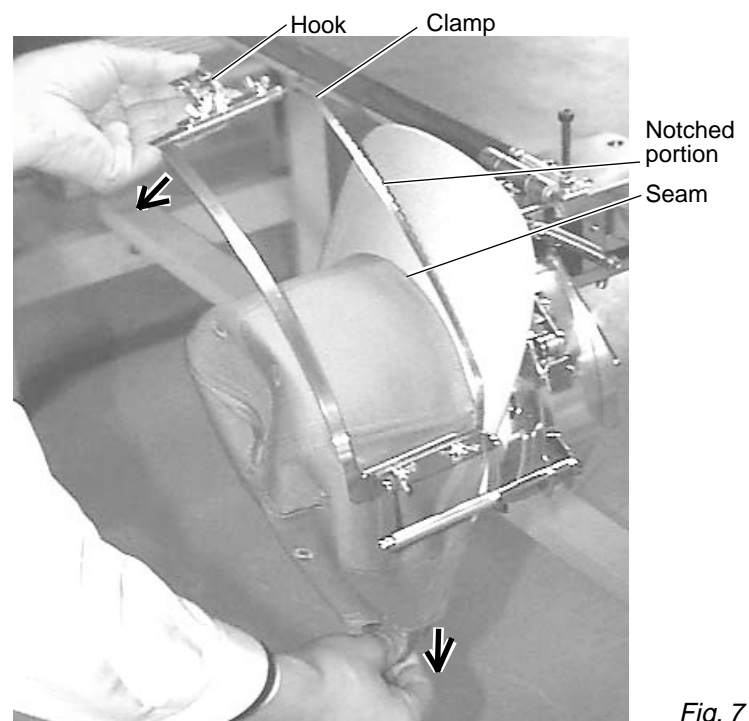


Fig. 7

If you can't get rid of wrinkles on the cap, adjust the cap frame again according to "Adjustment" of the previous page.

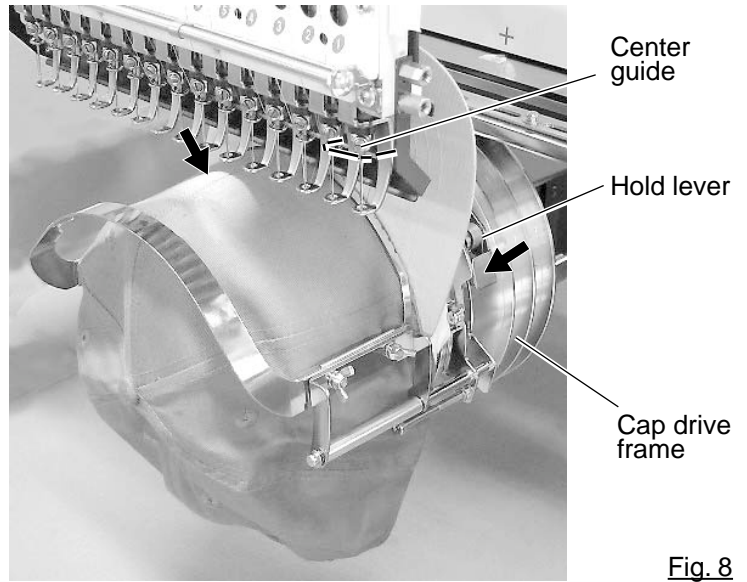
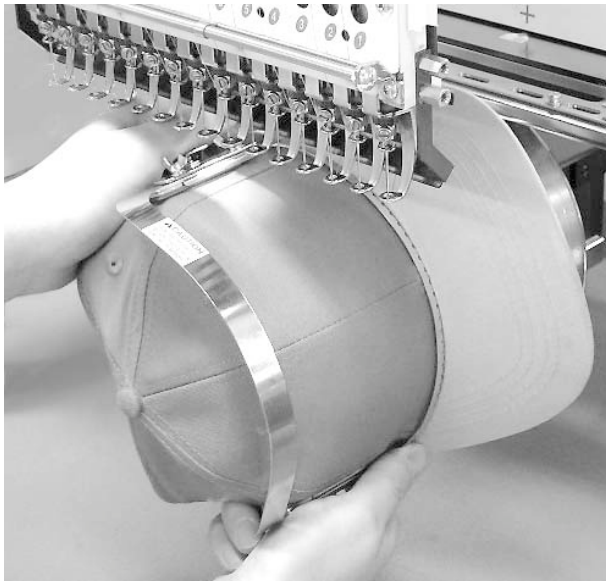


Fig. 8

7. Remove the cap frame from the cap stretcher.
8. As shown in Fig. 8, install the cap frame on cap in the drive frame.
Rotate the cap frame as show in the Fig 8 so that the brim of the cap cannot hit the machine.
Then, push the holder lever in the 2 places shown in the arrow in Fig. 8, and install the cap frame in the cap drive frame so that so that the center guide of the drive frame fits the concave area of the cap frame.

Confirm that the cap frame is firmly installed on the cap drive frame without any gap.
If there is a gap between the cap frame and the cap frame drive or the holder lever does not fit the hole of the cap frame, adjust loosen the set screw on the hold lever to adjust the position.

●Wide cap frame

Adjustment

When you fix cap to cap hold frame, please adjust in the following manner.

Make sure to do the adjustment of the cap hold frame. If it is not adjusted properly, it may cause the deformity, damage of the cap, damage of the cap hold frame and break of the cap grip.

After adjusting the cap hold frame, make sure the cap to be set properly.

1. Adjust the length of the cap grip to suit the thickness of the fabric. At this moment, hook should open and close without feeling heavy.
(For the adjustment follow the next page "Hooping caps" item 1 to 5.)
The adjustment to be done by two adjusting screws. (Fig. 1)

If the cap grip is loose, even after hooked the cap is not fixed tightly and the cap is moving. (Fig. 2)

If the cap grip is too tight, you feel heavy when it is hooked and the grip bites into the cap too much. (Fig. 3)

If you feel hook extremely heavy in opening and closing, there is a case that cap hold frame will lose its shape or damaged.

2. Adjust the guide position to suit the height of the cap.
Remove screws at left and right to adjust. (Fig. 4)

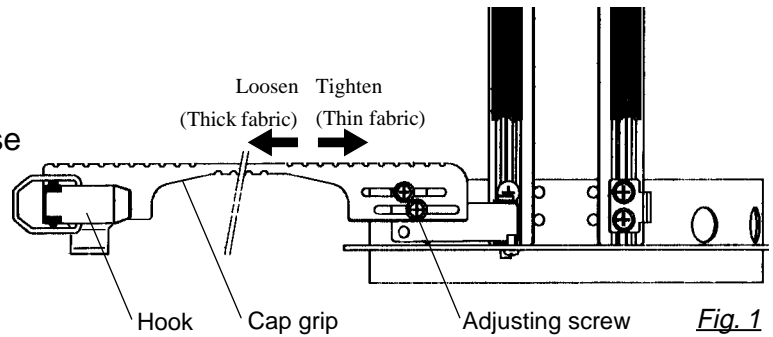


Fig. 1

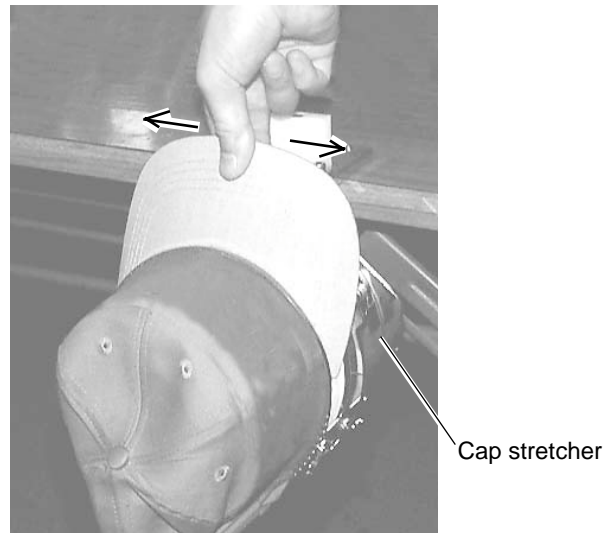


Fig. 2



Fig. 3

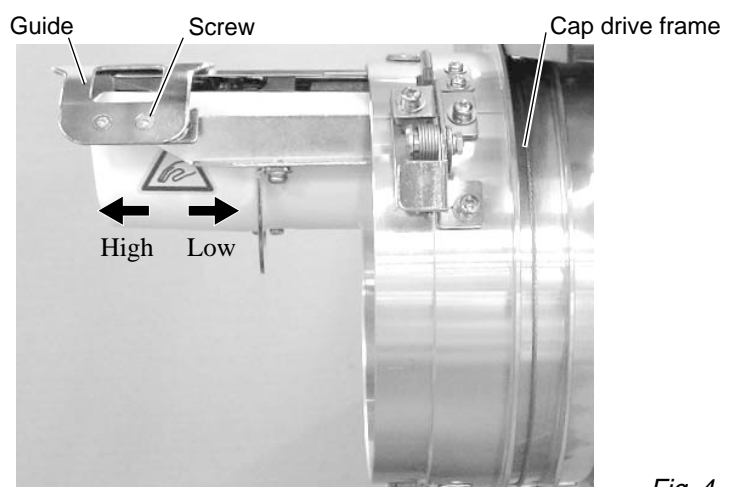


Fig. 4

Hooping caps

1. Place cap stretcher securely on sturdy work bench.
2. As shown in Fig. 1, hold cap hold frame with both hands and place on cap stretcher. By pushing hold lever at 3 places in arrow marks with fingers, place cap hold frame so that center guide of cap stretcher gets in concave of upper cap hold frame.

Confirm that cap holder frame is securely placed on cap stretcher without gap.

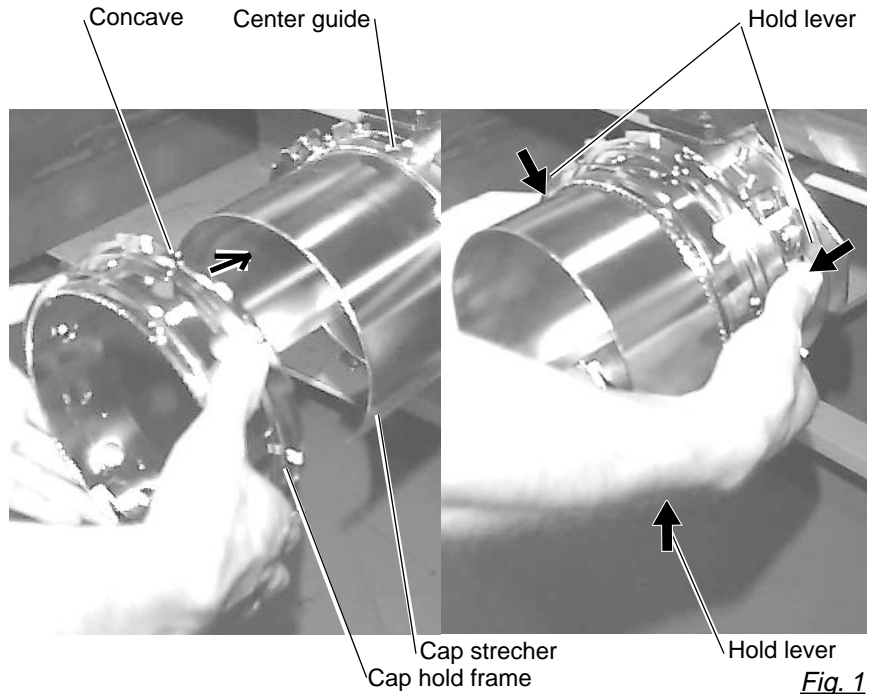


Fig. 1

3. As shown in Fig. 2, remove cap grip and keep open to the left.
4. Take the front half of the sweatband out of the cap and cover the cap stretcher with the sweatband. Cover the cap stretcher with the sweatband so that the edge of the sweatband contacts the flange of the cap frame.

Please place one or two sheets of nonwoven fabric (backing) of standard thickness under unstructured caps. The length of nonwoven fabric should be the same as one of round of cap.

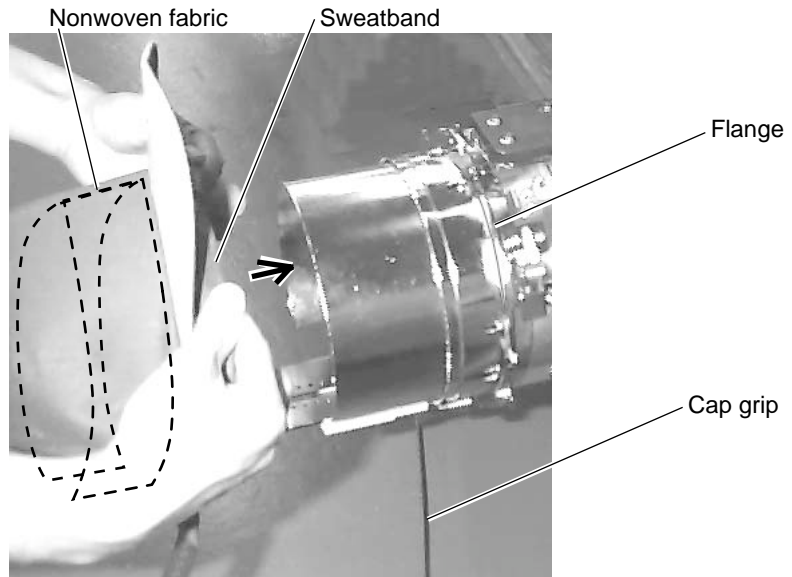


Fig. 2

5. Place hook of the cap grips. At this time, align the center of the cap to the center mark on the cap frame so that notched portion of the clamp fits into the seam of the visor. Close hook.

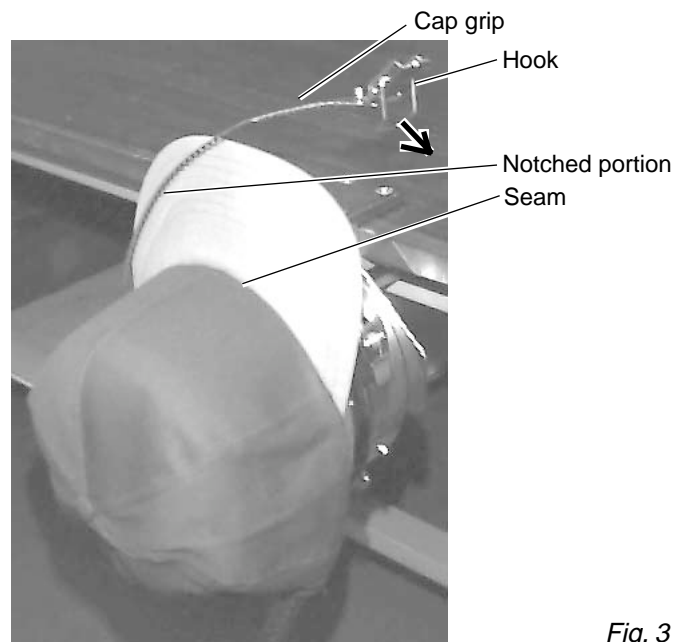


Fig. 3

CAP FRAME option

7-A

6. As shown in Fig. 4, tip the cap stretcher forward. Clip the back of the cap and nonwoven fabric in two places.

Make the clip levers face each other.

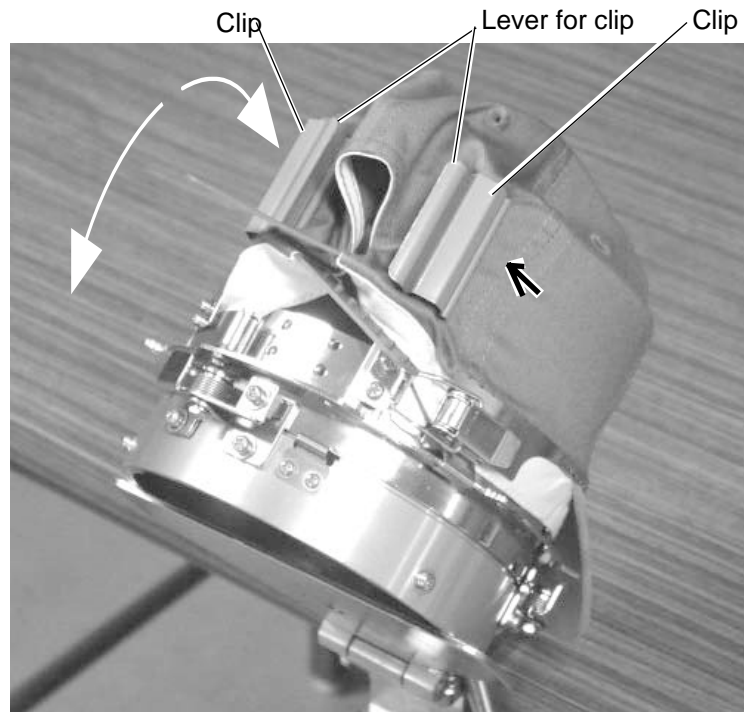


Fig. 4

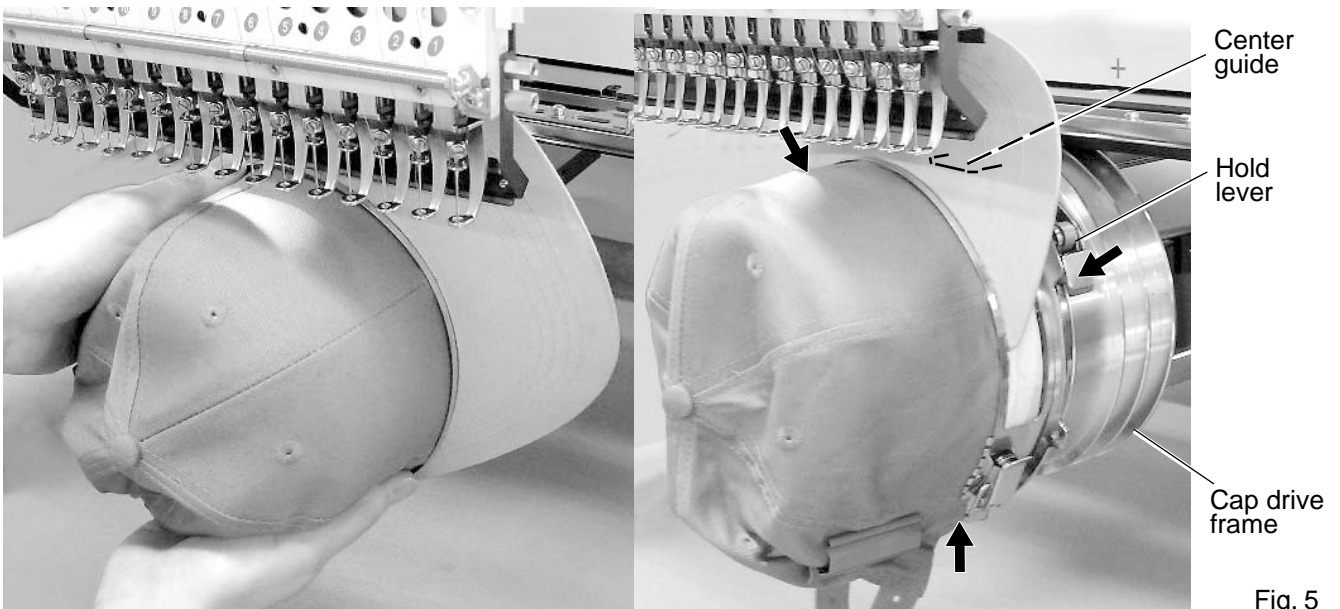



Fig. 5

7. Remove the cap holder frame from the cap stretcher.
8. As shown in Fig. 5, install the cap frame on cap in the drive frame. Rotate the cap frame as shown in Fig. 5 so that the brim of the cap cannot hit the machine. Then, push the holder lever in the 3 places shown in the arrow in Fig. 5, and install the cap frame in the cap drive frame so that the center guide of the drive frame fits the concave area of the cap frame.


Confirm that the cap frame is firmly installed on the cap drive frame without any gap.

If there is a gap between the cap frame and the cap frame drive or the holder lever does not fit the hole of the cap frame, adjust/loosen the set screw on the hold lever to adjust the position.

● Starting to embroider

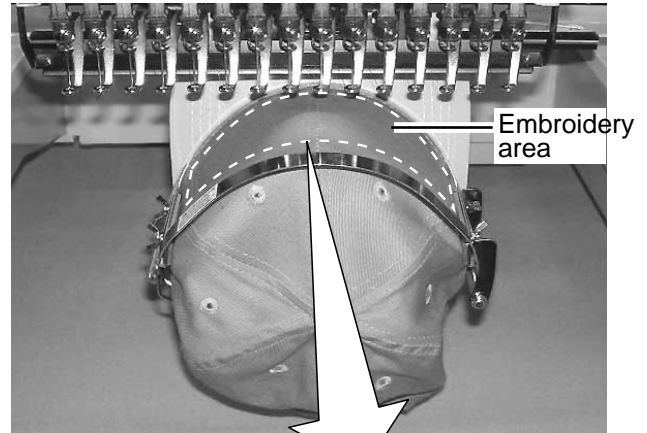


Embroidery area (Max. *1)

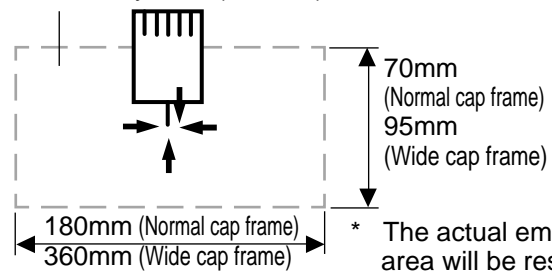


* The actual embroidery area will be restricted by the design and shape of a cap.

●:Original point (Start point)

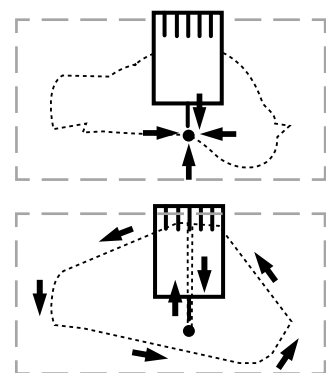

You can confirm the outline and position of design.





1. Press  and move the frame to the

original point of pattern data by




2. Press .

When you Press , the frame will start moving for the design trace.  14-5
Make sure that the pressure foot and needle does not touch the frame.


When you Press , the machine will stop.

Go on to step 4 if you want to start embroidering without tracing first.

3. Press , the design trace finished.

The cap frame will return to the original point.




4. Press the .


Embroidery will start.

5. After finishing your design, the display will show ">>End" and the machine will stop.



>>End

The embroidery frame will return to the original point automatically if the auto origin function has been activated.  12-7

●:Original point (Start point)

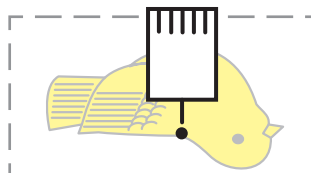


1. With the thread going through the hole of the pressure foot, pull it out slowly toward the front.

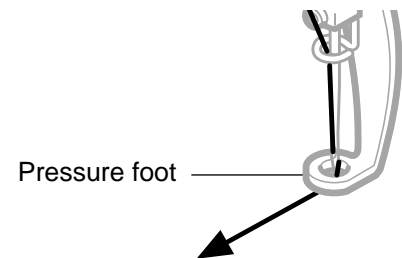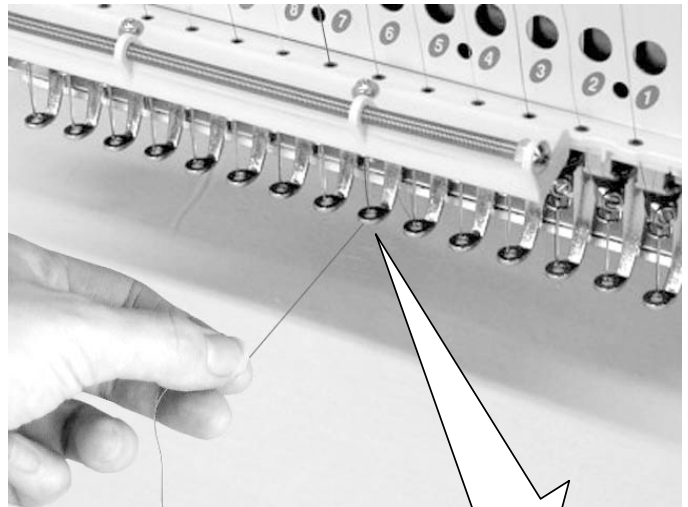

2. Adjust the Minor thread tension by the first tension knob and then the second Thread tension knob.

According to the type of upper thread and cloth.

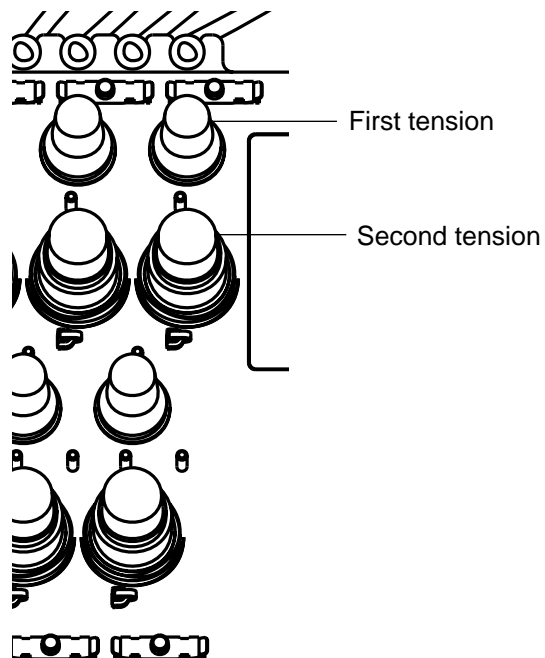


ADJUSTING THE LASER POINTER (OPTION) 8-2


Laser pointer indicates the needle position.


The beam of laser is coming from right upper side, thus the position of laser pointer can be changed depending on the height of surface of fabric.

Please adjust the angle of laser pointer depending on thickness of fabric and type of frame.

1. For switch ON laser pointer, Press 


and Press  on the submenu.

For switch OFF laser pointer, Press .

 **CAUTION: Laser beam (Class 1)**
Do not stare into the beam.



2. Press  to return to Drive mode, and


press  and set a position of moving head to needle No. 1.





3. Set fabric on the frame, then put white paper to the position of needle and fix by Scotch tape.


4. Press  and Press




5. Press .

6. Press  to cancel "Jump".

7. Press  and keep until needle reaches to the paper and make hole.

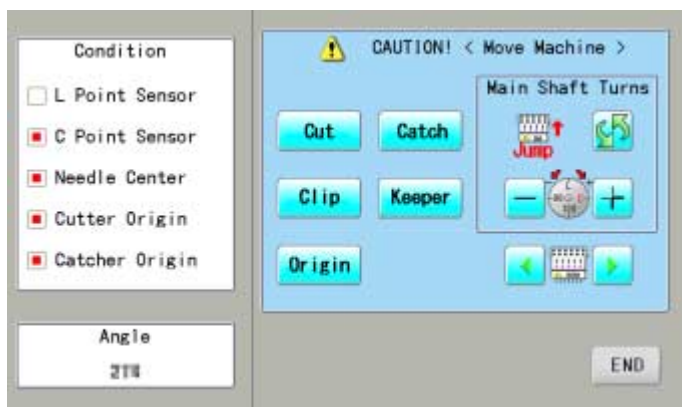

 **CAUTION: To prevent accidents.**
The needle will penetrate the fabric.
Please keep your hands clear for your safety.


ADJUSTING THE LASER POINTER (OPTION) 8-3

8. Unscrew a fixing screw for X direction slightly and change angle of support(X).


9. Unscrew a fixing screw for Y direction slightly and change angle of support(Y).

10. Fix the fixing screw for X and the fixing screw for Y.

11. Check the hole position on paper and the point of laser beam, and take paper out.

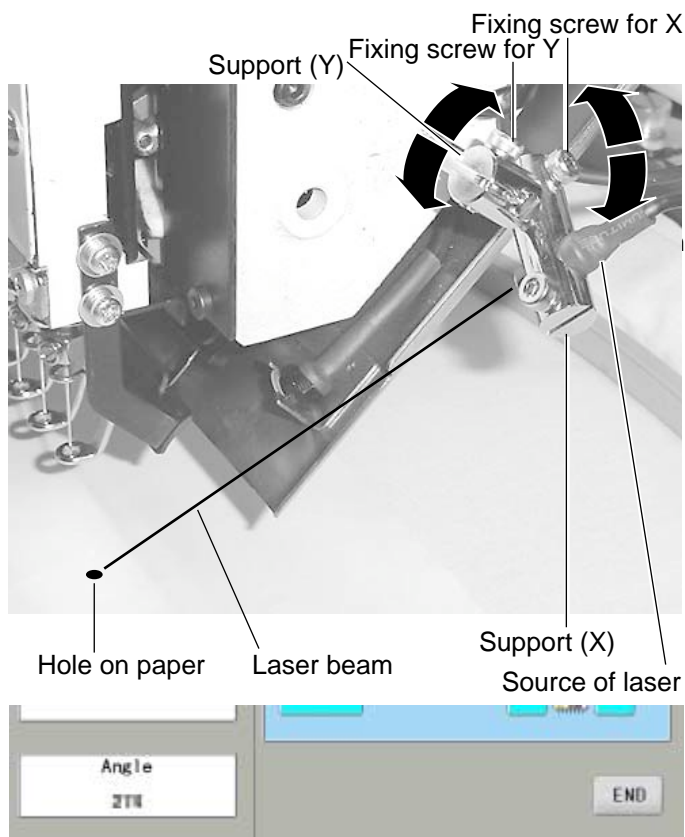

12. Press **END**.

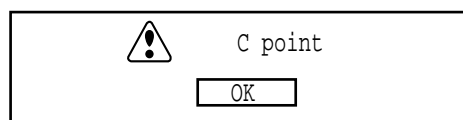

13. Press **OK**.



CAUTION: To prevent accidents.
The needle will penetrate the fabric.
Please keep your hands clear for your safety.

14. Press **END**.



Press  to return to Drive mode.

●What to do if the thread breaks while sewing

If the thread breaks or runs out while sewing, the machine senses the break, stops, and moves back several stitches from the break point.

(This prevents open sections in the design when sewing is resumed. See the thread break section. P5-1)

If the upper thread breaks

Thread the upper thread again.

(Refer to P4-6)

In case bobbin thread breaks

Thread lower thread again.


(See bobbin winding P4-5)

●Stopping and resuming sewing



Even if you need to turn off the machine in the middle of embroidering, you will be able to resume sewing from the stop point after turning on the machine back on.

■ If you leave the machine off for too long, the fabric may distort which will create gaps in the embroidery design.






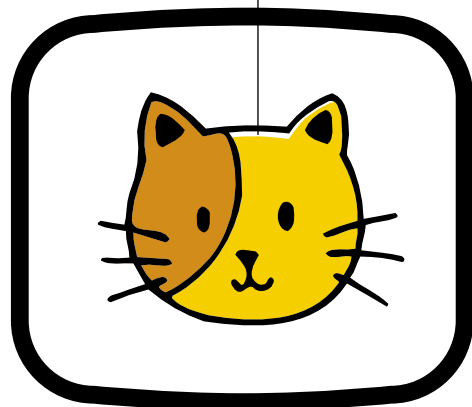Example: An unsatisfactory gap between lines because the machine stopped at a half point in embroidery and the material shrunk.



To suspend sewing

1. Stop the sewing by pressing the  button.
2. Press  button.
The needle will go down and trim the thread.
3. Turn off the power switch.

To resume sewing from the last sewn position:

4. Turn on the power switch.
5. Press  button.
After the carriage and frame move slightly, the embroidery frame will return to the previous position automatically.
6. Press  and back up several stitches from the stop point by pressing the  3-4 times.
7. Press .
8. Start sewing again by pressing the .

>>Stop Switch



WELCOME

KEEP CLEAR : CARRIAGE WILL MOVE!

NEXT



CAUTION: To prevent accidents.
When performing a thread trim, be careful of the needle which will pierce the fabric.



CAUTION: To prevent accidents.
The frame moves quickly.
Keep your hands and body clear of the machine.


● Loss of power while embroidering

If you have a power failure while embroidering, follow these instructions and you can restore the position of the frame and the pattern data to its state before the failure.

1. Turn on the power switch.



2. Press **Next**.




3. Press **OK**.



4. Press **Auto**.

The main shaft will make one rotation and stop at the "C" point (proper stop position).






5. Press .


The needle will go down and trim the thread.

6. Press **Next**.

After the carriage and frame move slightly, the embroidery frame will return to the previous position automatically.

7. Press  and back up several stitches from the stop point by pressing the  3-4 times.

8. Press .

9. Start sewing again by pressing the .




CAUTION: To prevent accidents.
When performing a thread trim, be careful of the needle which will pierce the fabric.




CAUTION: To prevent accidents.
The frame moves quickly.
Keep your hands and body clear of the machine.

●Moving the hoop while embroidering and then returning to the correct location (Position)

If you wish to move the embroidery frame in the current sewing position, follow these steps:

1. Stop the sewing by pressing the  while embroidering.

>>Stop Switch


2. Press  and move frame with



3. Press .

The frame will automatically return to the current sewing position.




 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep hands away from the frame.

4. Press .


●Moving back to the starting point (Origin)



The frame returns to the origin point (beginning position of design).

 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep hands away from the frame.


1. Press  and press .



The frame will move to the origin point and the pattern data will return to the start point.

 (Top) will be shown on the display.
If you would like the frame to be restored to the previous state of origin point (before

pressing , press  again.

 (Top) will be cleared on the display.

2. Press .

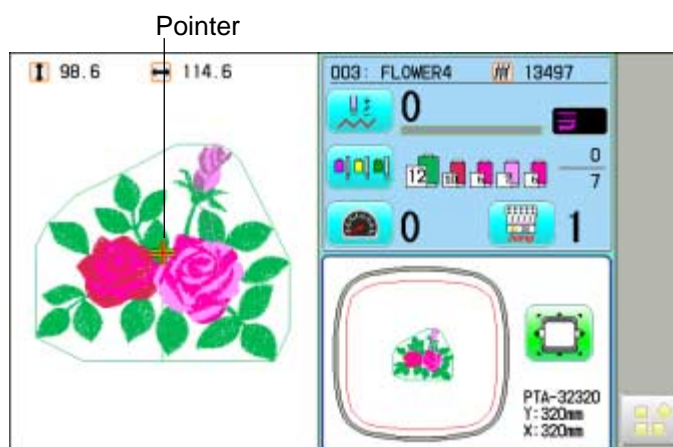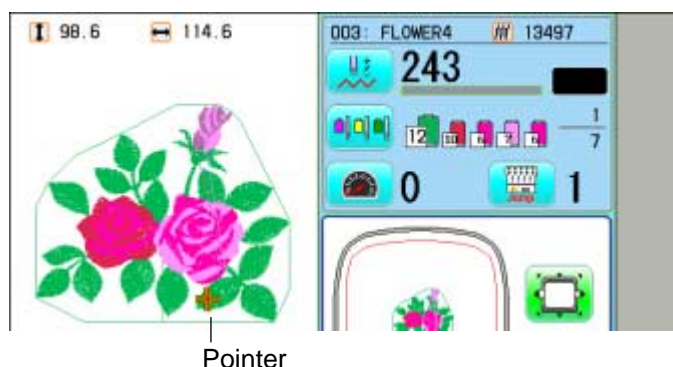

●Going back to the beginning of the design (Top)

Stopping sewing in the middle of a design, changing the design's location in the hoop, and then restarting from the beginning.

If you use "Top", you will return to the start point the frame position left where it is.





1. Press  and Press .




2. Press .

The pattern data will return to the start point.

 (Top) will be shown on the display.

3. Press .

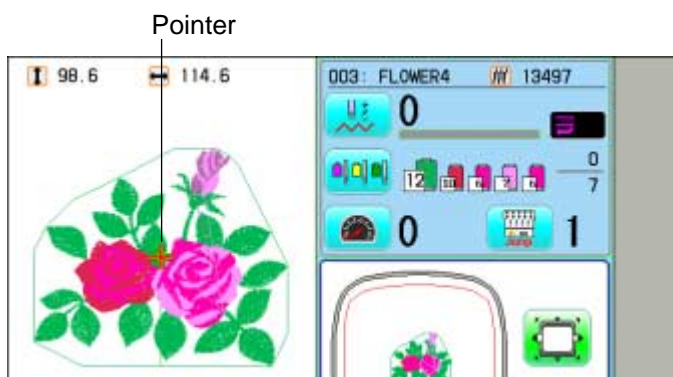

●Placing the design in the center of the selected embroidery frame (Center)

Move embroidery frame position to the center automatically.



CAUTION: To prevent accidents.

The frame moves quickly.

Keep hands away from the frame.

1. Press  and Press .


The embroidery frame will move to the center automatically.

If you want to get back to the previous status

from "Center". Do procedure of  "Position".

 9-3

2. Press .

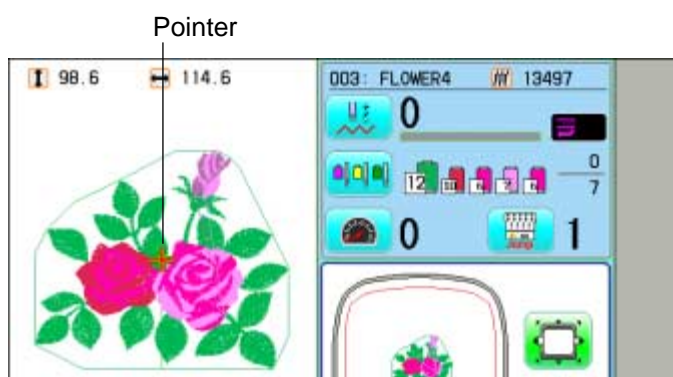

●Rotating and mirroring designs (Convert)

Convert selected pattern data.

Setting example




Normal




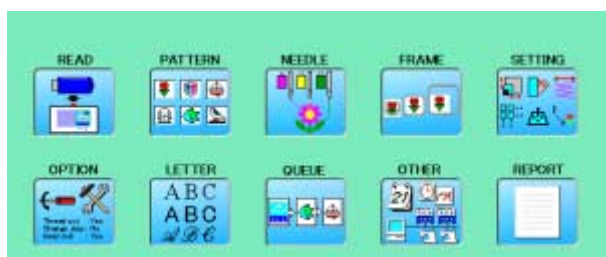
Mirror reverse + 90°

With the start point of pattern as a pivot, the machine changes the angle in 90 degree increments.


● : Start point of pattern

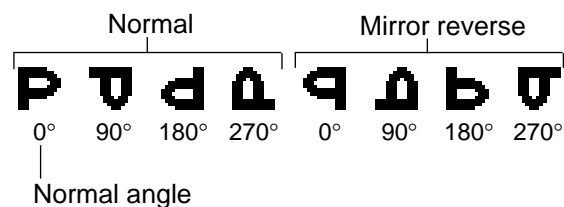

1. When the machine is stopped, Press .




2. Press  "SETTING".

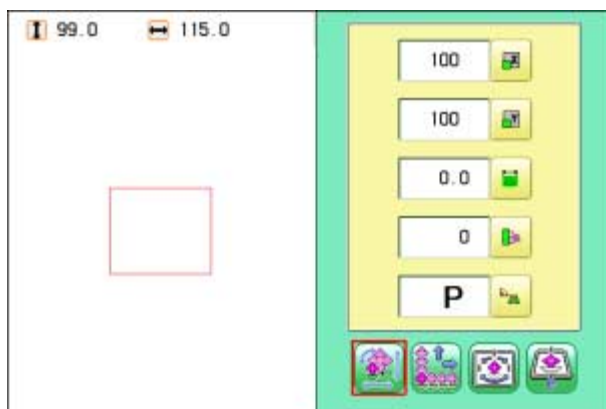


3. Press .



4. Press  to select conversion of position required.

The setting is fixed.

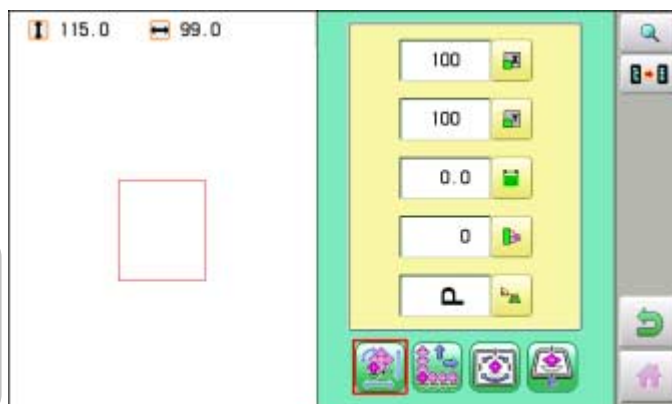

Press  to return to Menu mode.


Press  to return to Drive mode.

●Starting in the middle of a design (POSITION)

This function allows you to go directly to a stitch number or a color change and positions the hoop correctly.

Stitch (Number of stitches)


This moves the frame to any stitch number desired.

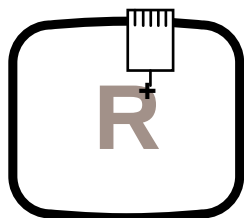

+ : Any stitches

Change (Color position)


This moves the frame to the beginning of any Color change number.

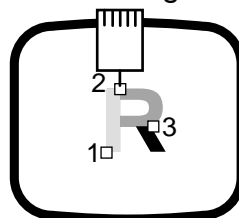

□ : Beginning of any colour number

Stitch

1. Press  "Frame forward".

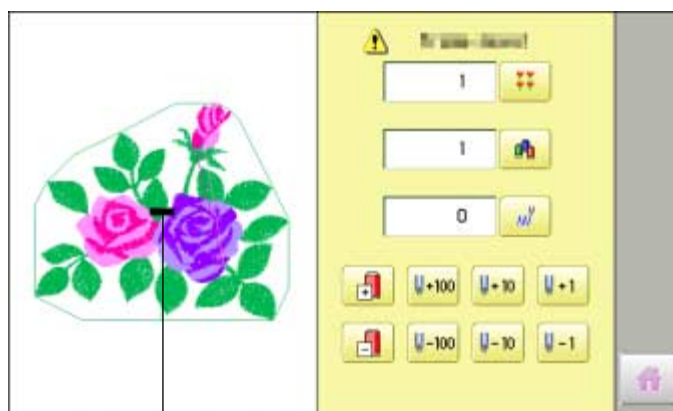

Pointer shows you the current position of the frame.

2. Press .




3. Input the stitch number and press .

The frame will move to the selected stitch number position.




CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.

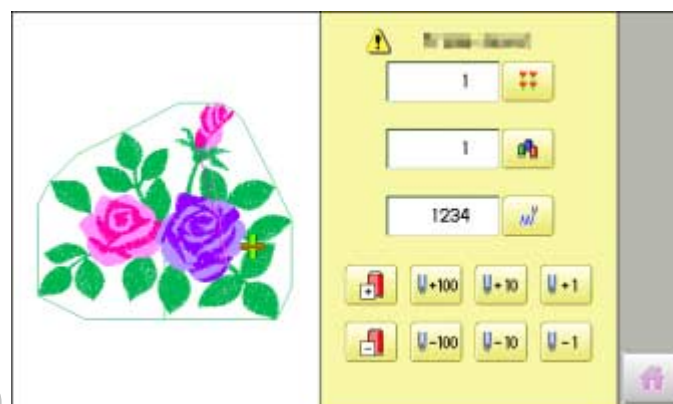

Press  to return to Drive mode.

Change

1. Press  "Frame forward".

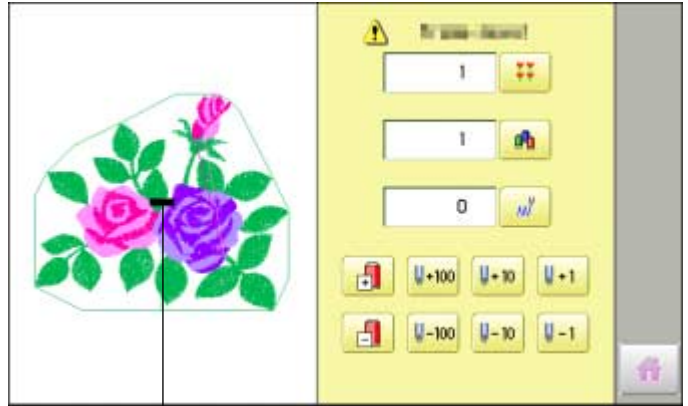

Pointer shows you the current position of the frame.


2. Press .




3. Input the color change number and press




The frame moves to the selected color position.


 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep hands away from the frame.

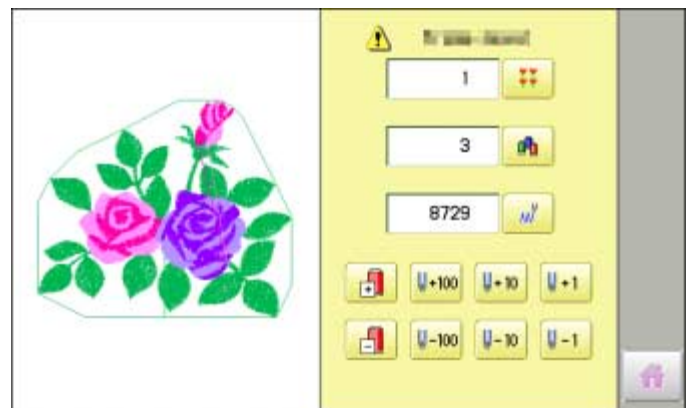

Press  to return to Drive mode.


DISPLAYING THE PATTERN IN SETTING MODE 10-1


When there is  shows on the right side menu, the pattern data may be shown on the screen.

1. When the machine is stopped, press .




2. Select desired menu.

Icon of  will be shown in sub-menu.

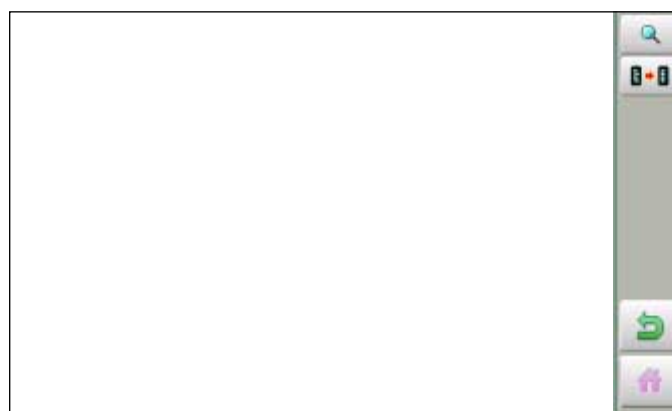

3. Press .

Illustration of the pattern selected will be displayed.
Right side of display shows the detail information of the current pattern data.

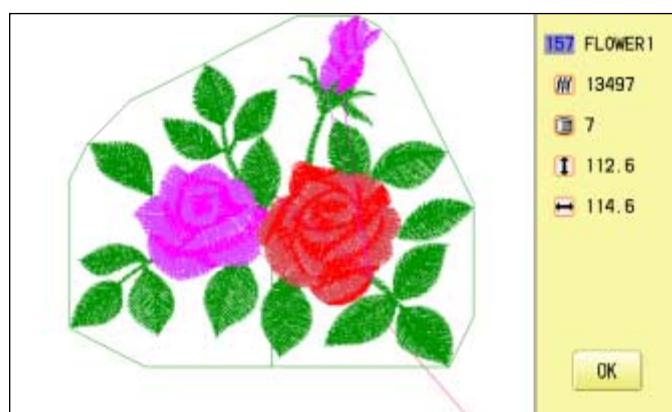

4. Press .

The display returns to the view of Step 2.




Press  to return to Menu mode.

Press  to return to Drive mode.


● Locking pattern data

Locking pattern data stored in the machine memory will prevent deletion and changes in settings.

1. When the machine is stopped, press .



2. Select "PATTERN".

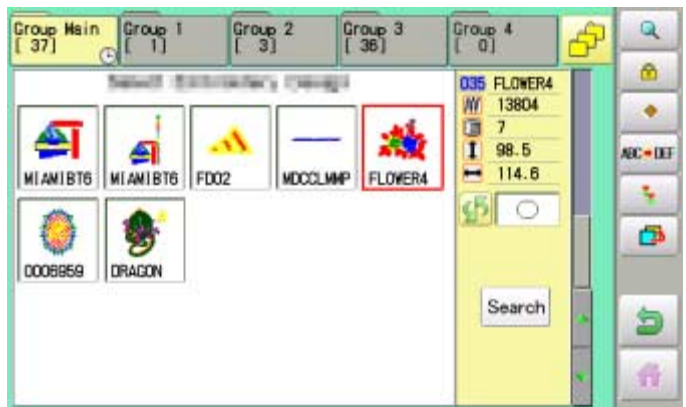


3. Press  from right submenu.




4. Select desired pattern.


Mark will appear right of the pattern.
Make will be cleared by press it again.
Multiple pattern data can be selected.

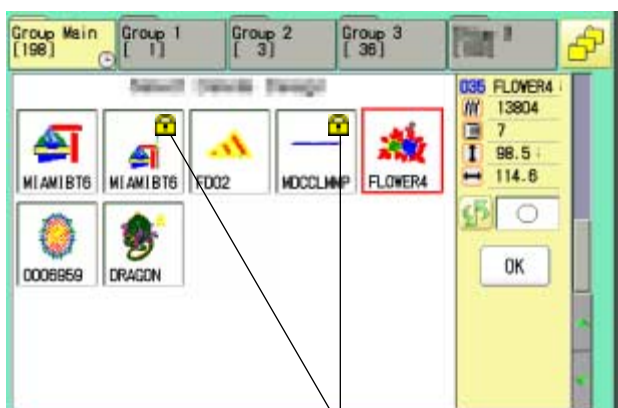



Mark

5. Press .

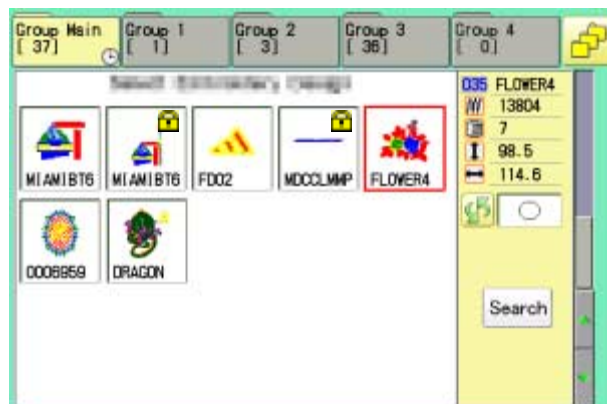Repeat steps 3 and 5 to unlock.



Press  to return to Menu mode.

Press  to return to Drive mode.

● Trace type

Changing the trace type of the pattern data in the machine memory. 14-5


1. When the machine is stopped, press .



2. Select "PATTERN".

3. Select desired pattern.

- Maximum embroidery area of pattern
 Outline of pattern

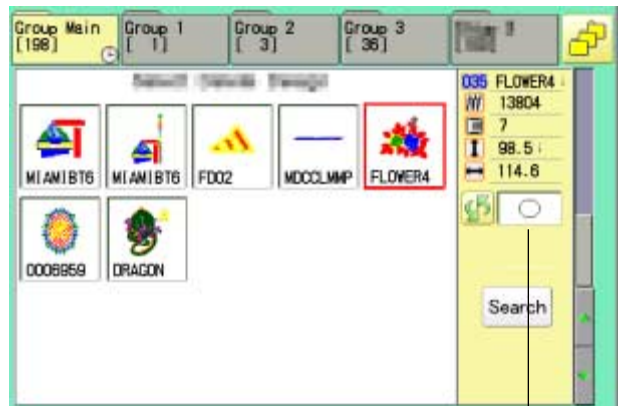


Trace type

4. Press and select or .

Trace type is changed.

--- Calculating ---

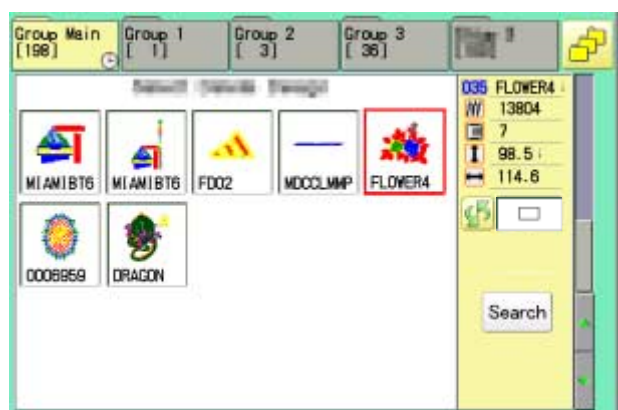


Press to return to Menu mode.

Press to return to Drive mode.


●Export

You can write out of machine memory to a memory media.

1. When the machine is stopped, press  .




2. Select "PATTERN".

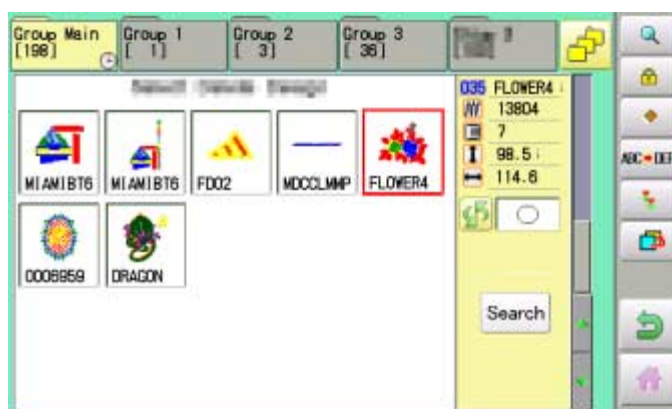

3. Select desired pattern.

4. Press  from right submenu.

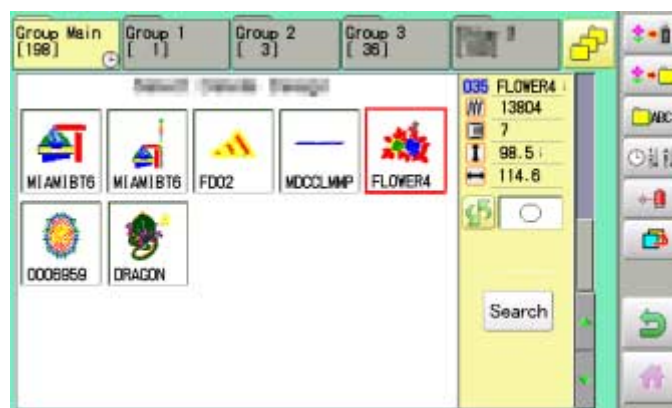

5. Press  from right submenu.

The name of the pattern will be shown.



7. Press **SAVE** if the pattern name is not to be changed.
The pattern data will be written.


Choose the column with **◀ ▶**.
Then select each digit in the existing name.
Select word and press **SAVE**.

The pattern data will be written.
The maximum number of characters in a design name is eight letters or numbers.

- CLEAR** All the letters and/or numbers are deleted.
- DEL** Selected letter or number is deleted.
- CANCEL** Changing name is cancelled.



The display returns to the view of Step 5.

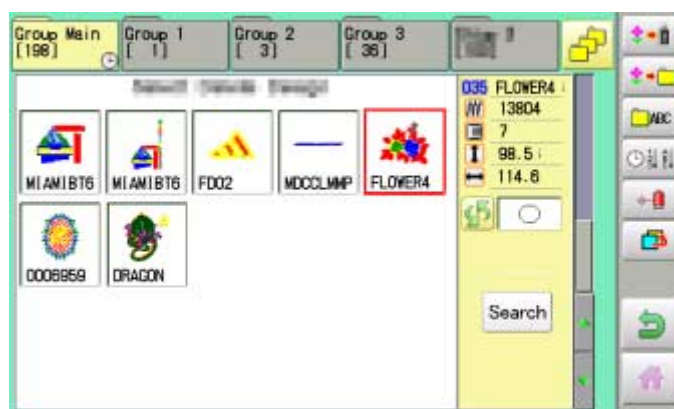


Press **↶** to return to Menu mode.

Press **🏠** to return to Drive mode.


●Renaming patterns

Rename pattern in memory.

1. When the machine is stopped, press .



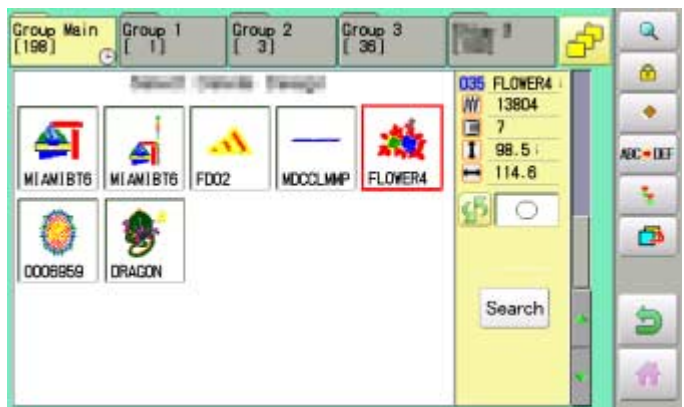

2. Select "PATTERN".






3. Select desired pattern.

4. Press  from right submenu.



5. Choose the column with  . Then select each digit in the existing name. Select word.

The maximum number of characters in a design name is eight letters or numbers.

-  All the letters and/or numbers are deleted.
-  Selected letter or number is deleted.
-  Renaming is cancelled.





PATTERNS IN MEMORY


11-5b

6. Press  .

The pattern name will be changed.

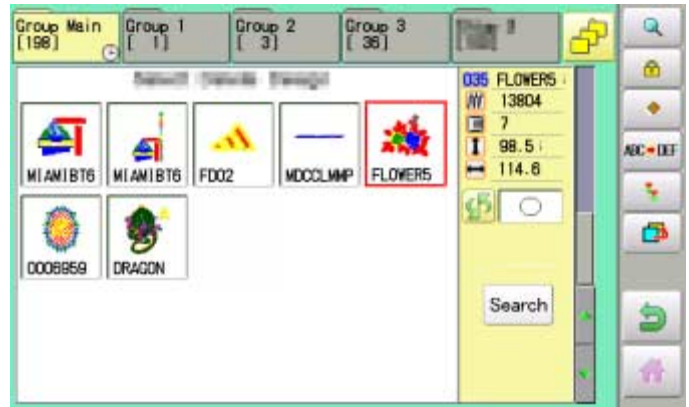


Press  to return to Menu mode.

Press  to return to Drive mode.


●Copying pattern data

Copying of the pattern data stored in the machine memory is available.

1. When the machine is stopped, press .




2. Select "PATTERN".

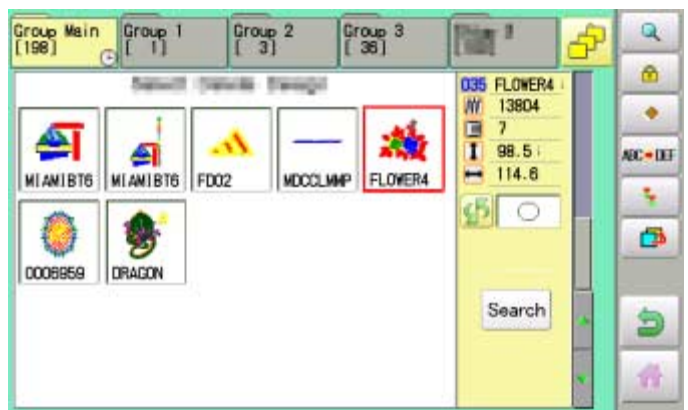

3. Select desired pattern.

4. Press  from right submenu.

Copy of the selected pattern will be made.

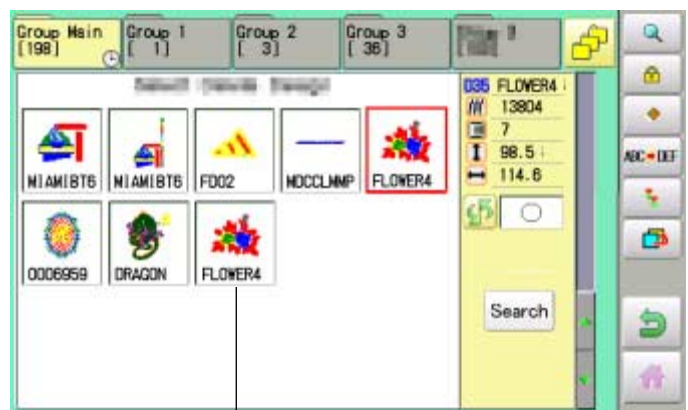


Copied pattern data

Press  to return to Menu mode.

Press  to return to Drive mode.


●Moving pattern data

Export pattern data into the other folder.


1. When the machine is stopped, press .




2. Select "PATTERN".

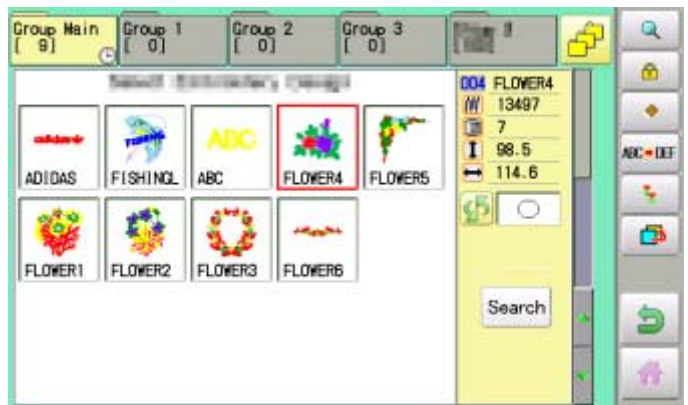

3. Press  from right submenu.

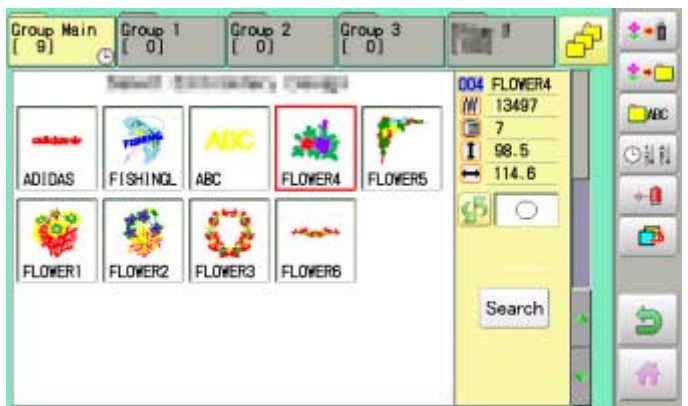


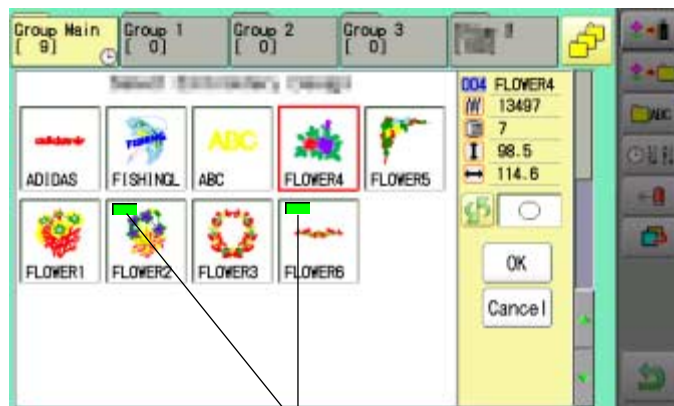
4. Press  from right submenu.

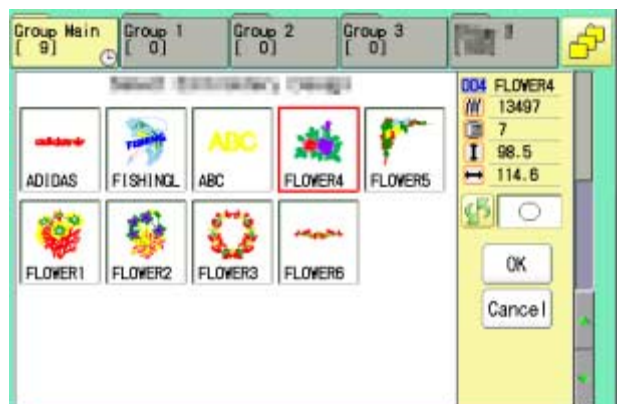

4. Select desired pattern.


Mark will appear left of the pattern.
Make will be cleared by press it again.
Multiple pattern data can be selected.

 : Cancel pattern data moving



Mark


5. Press .

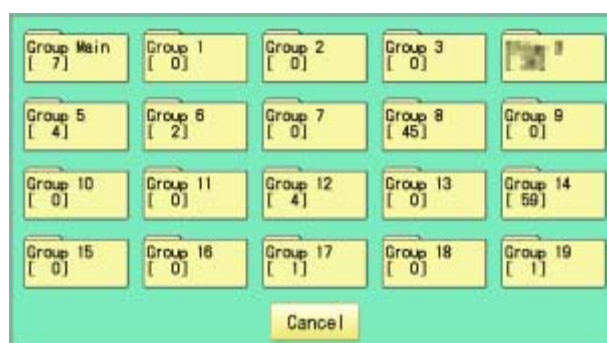

6. Select the importing folder.

The pattern data will be transferred.


Importing folder

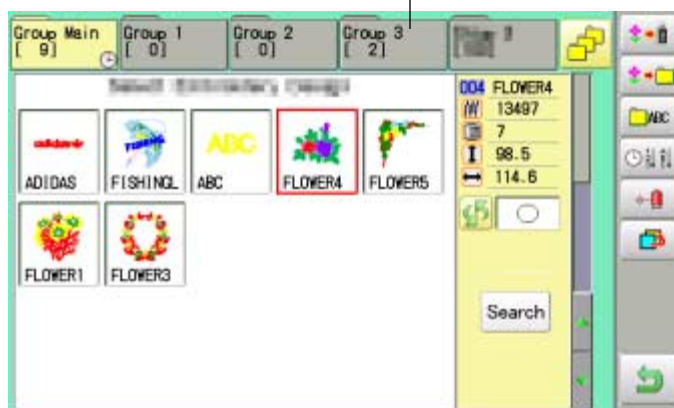

Press  to return to Menu mode.


●Renaming folders

Rename folder in memory.


1. When the machine is stopped, press .




2. Select "PATTERN".

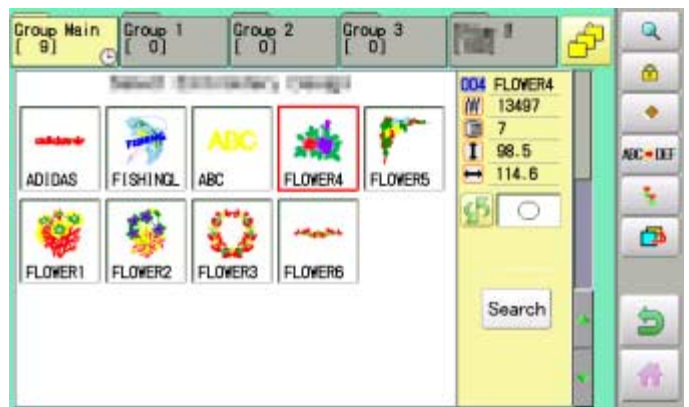

3. Press  from right submenu.

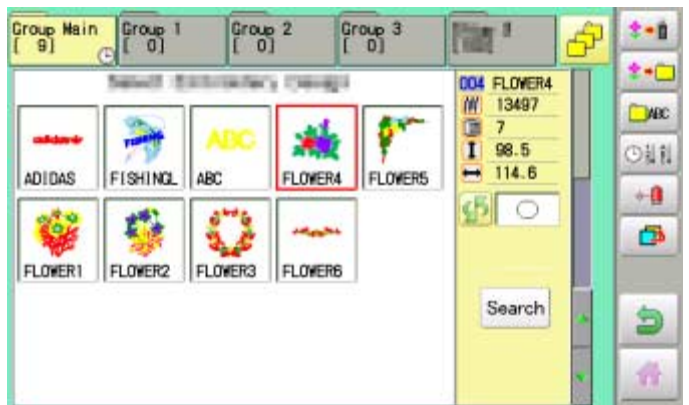

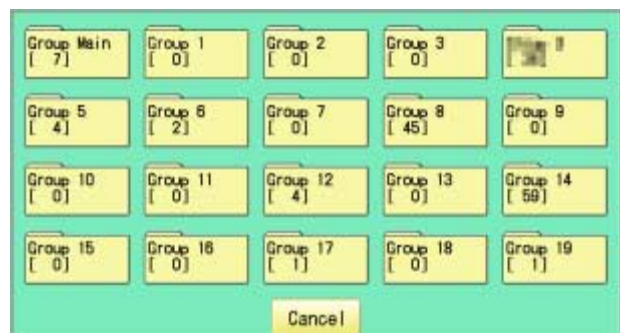

4. Press  from right submenu.







5. Select desired folder.



6. Choose the column with   .
Then select each digit in the existing name.
Select word.

The maximum number of characters in a design name is 12 letters or numbers.


-  Uppercase and lowercase letter are switched.
-  All the letters are deleted.
-  Selected letter or number is deleted.
-  Renaming is cancelled.



7. Press  .

The folder name will be changed.

Renamed folder

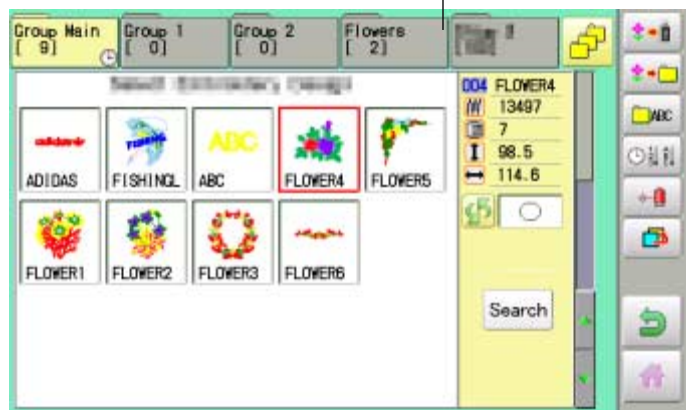


Press  to return to Menu mode.

Press  to return to Drive mode.


●Sort

Ordinate the pattern data in the displayed folder.

1. When the machine is stopped, press  .



2. Select "PATTERN".

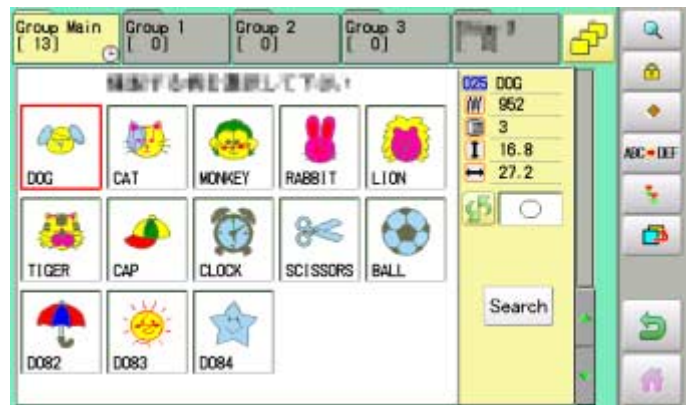

3. Press  from right submenu.



4. Press  from right submenu.



To sort in ascending order of loading



To sort in descending order of loading



To sort in ascending order of pattern number




To sort in descending order of pattern number



To sort in ascending order of name of pattern




To sort in descending order of name of pattern

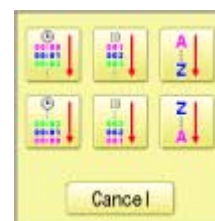


5. Select sorting method.

Sort will be carry out.




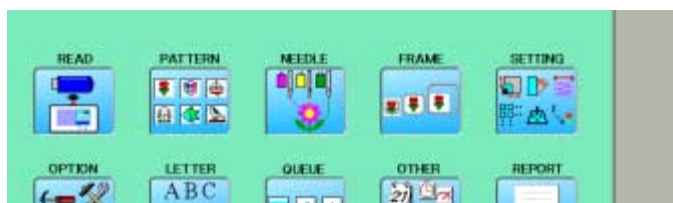
Press  to return to Menu mode.

Press  to return to Drive mode.

● Thread break report


This function will show recorded thread break of pattern data. The machine detects break thread during operation and records by pattern the number of stitches at the stopped position. If thread break is happening at same number of stitches, please check construction of stitch design.

1. When the machine is stopped, press  .




2. Select "PATTERN".

3. Select desired pattern.

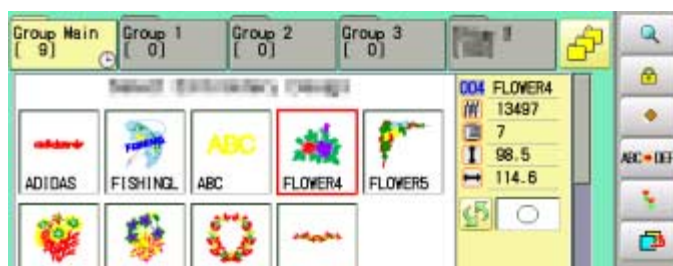

4. Press  from right submenu.

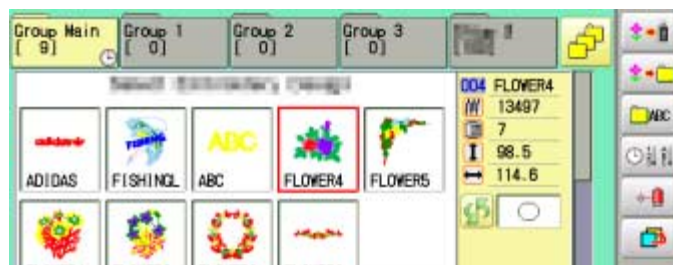

5. Press  from right submenu.

Thread break report will appear in the window.
The maximum memory is up to No. 30.
If the record exceeds No. 30, the new records will be added to the latest 29 records.

 To delete the record

Pattern number
Pattern name
Number of stitches

009: FLOWER4 (13497)					
No		No		No	
1:	0	11:	0	21:	0
2:	0	12:	0	22:	0
3:	0	13:	0	23:	0
4:	0	14:	0	24:	0
5:	0	15:	0	25:	0
6:	0	16:	0	26:	0
7:	0	17:	0	27:	0
8:	0	18:	0	28:	0
9:	0	19:	0	29:	0
10:	0	20:	0	30:	0


Clear

OK

Number of stitches at the stopped position by thread break

6. Press  .

Exit the mode.

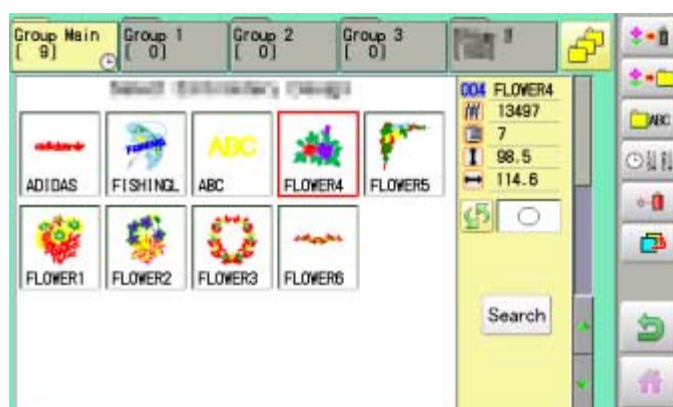

Press  to return to Menu mode.

Press  to return to Drive mode.

●Retrieve built-in data from machine


100 pattern data are built-in in machine and you need to retrieve built-in pattern data from machine memory to design data folder. These pattern data are stored in the [Group 4] folder on the PATTERN screen.

Empty the [Group 4] folder before built-in pattern data are retrieved from machine memory.

Built-in pattern data cannot be retrieved if there is any pattern data in the [Group 4] folder.


Built-in pattern data can be moved to other folder and/or deleted like monogramming data made on LETTER screen and other pattern data imported from outside of machine. [p 11-7](#), [p 5-B](#)

You can retrieve the pattern data from machine memory again after deleting the built-in data.


1. When the machine is stopped press .



2. Select "PATTERN" .

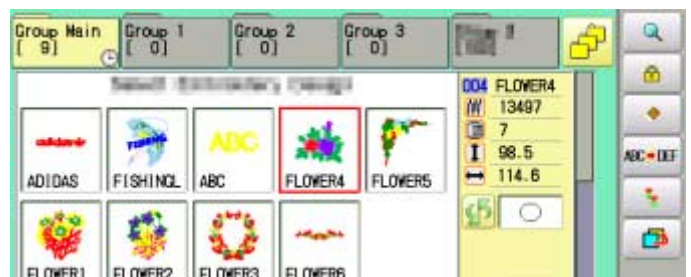


3. Press  from right submenu.

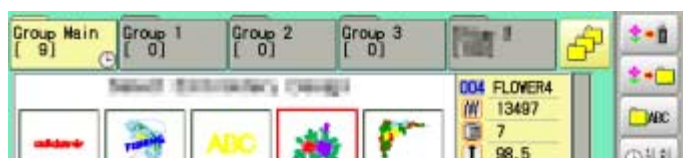

Right side folder

4. Press  from right submenu.

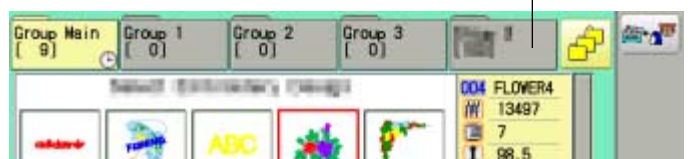


5. Press  from right sub-menu.

Retrieving pattern data is started.
It takes several minutes to complete data retrieving.
100 built-in data is shown on page 26-4.


Press  to return to Menu mode.

Press  to return to Drive mode.

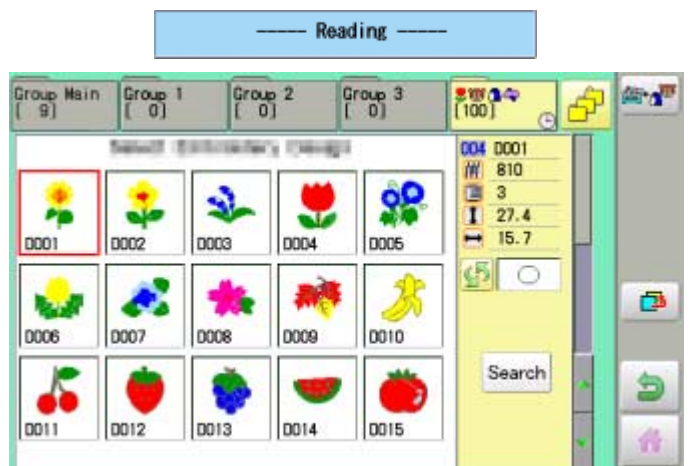


● Searching pattern data

Searching of the pattern data stored in the machine memory is available.

1. When the machine is stopped press .



2. Select "PATTERN" .

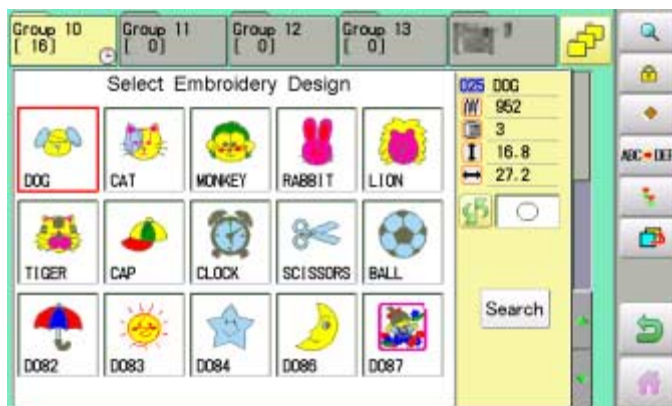


3. Press .

All pattern data stored in the machine memory will be displayed.



Search from designated folder.

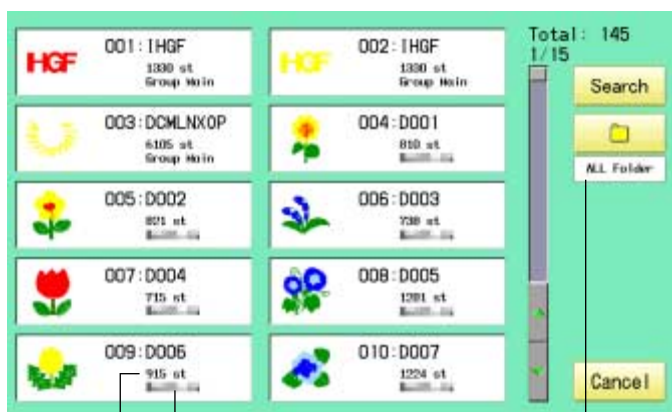

Stitches of pattern


Display the folder name to search

The folder name which the pattern is saved

Cursor

4. Press .

In this keyboard for searching, all design names are checked beforehand and only candidate alphabets will be highlighted along respective digits.

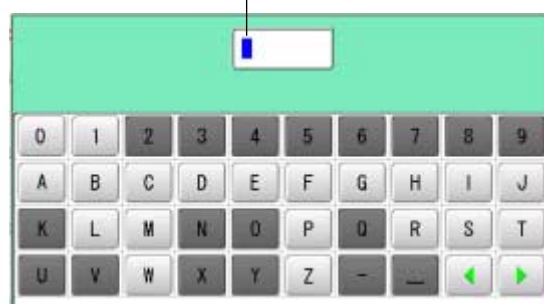

- Enter the whole or a part of the pattern name.

The maximum number of characters in a design name is eight letters or numbers.


CLEAR	All the letters and/or numbers are deleted.
DEL	Selected letter or number is deleted.
CANCEL	Searching is cancelled.



- Press **Search**.

In this example, "CA" is entered as first 2 characters of the design name. Then, all design name which start from "CA" is displayed.


Number of searched pattern data

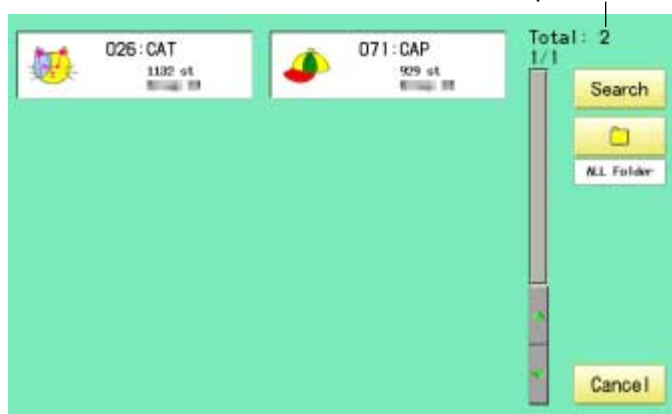

- Press displayed pattern icon to confirm your selection.

Press **Cancel** to leave from searching menu.

Selected pattern data

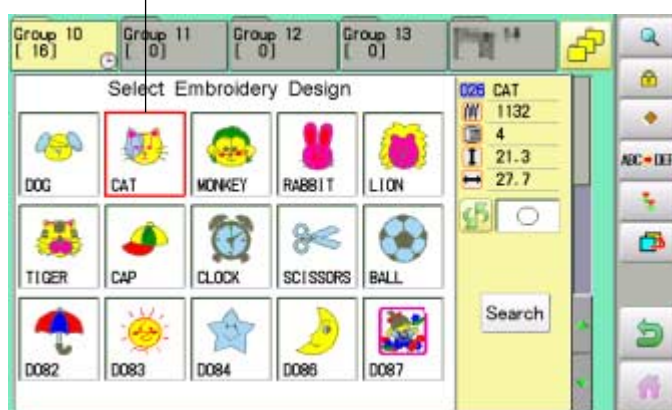

Press  to return to Menu mode.

Press  to return to Drive mode.

Various settings such as the scaling, repeat sewing, offset and frame out can be applied to a pattern.

Adjust

This menu contains settings such as scaling, width adjustment, angle and convert design.

Repeat sewing

The machine repeats the pattern a number of times in the X and Y directions as set by the user.

Offset

Sets the start point of the frame in the selected pattern.

Frame out

Inserts a frame out command in the selected pattern.

■ Various settings are executed in assortment.

● **Adjust**

Scaling

This adjusts the scale of the selected pattern.

Width adjustment

This adjusts the width of the selected pattern.

Angle

This adjusts the angle of the selected pattern.


Convert design


This sets the rotation of the selected pattern in increments of 90 degrees, normal or reversed.

Scaling

The pattern's scale can be increased or decreased in 1% increments.


Setting example

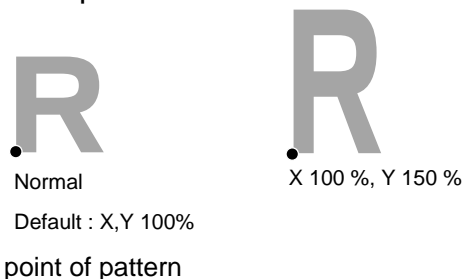


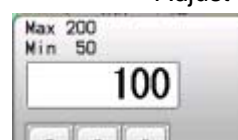
1. When the machine is stopped, press .




2. Select "SETTING".

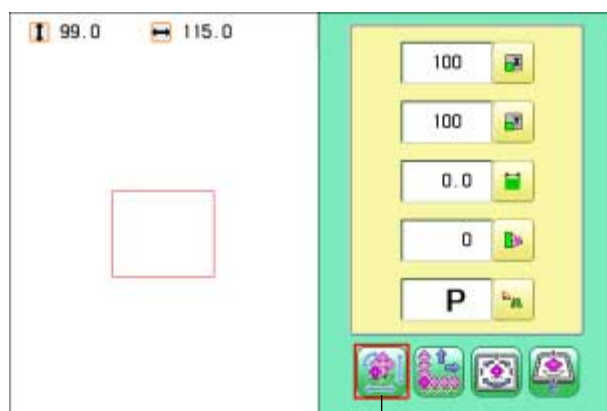

3. Select  (Scaling X) or  (Scaling Y).




4. Select the number.



5. Press .

The setting is fixed.

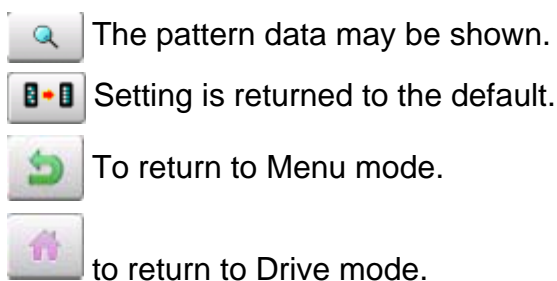

148.0 115.0





Width adjustment

This setting adjusts stitch width (L) in a pattern in a range of -1.0 ~ +1.0mm in increments of 0.1mm.

■ In case "Width" (Width adjustment) is set and embroidery is made, there is a case that error occurs at end point. In such a case, please return setting figure of stitch width to "0.0".


Setting example

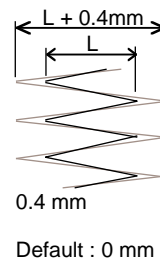

1. When the machine is stopped, press .



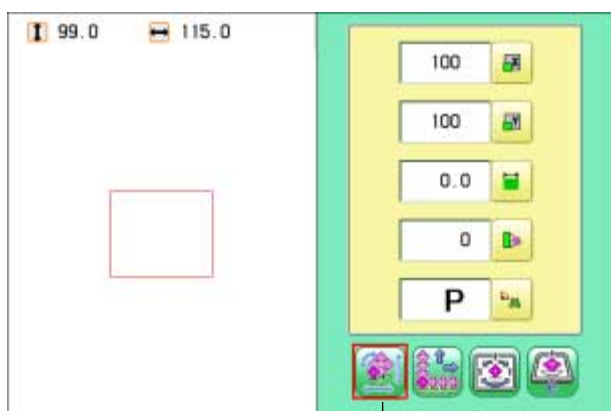

2. Select "SETTING".



3. Select  (Width adjustment).



4. Select the number.

 Changing is cancelled.
 Numbers are deleted.







5. Press .

The setting is fixed.

99.0 115.0



-  The pattern data may be shown.
-  Setting is returned to the default.
-  To return to Menu mode.
-  to return to Drive mode.

Angle

With the start point of the pattern as a pivot, the machine rotates the angle clockwise.

Setting example




Normal

Default : 0°




30°


● : Start point of pattern

1. When the machine is stopped, press .



2. Select "SETTING".

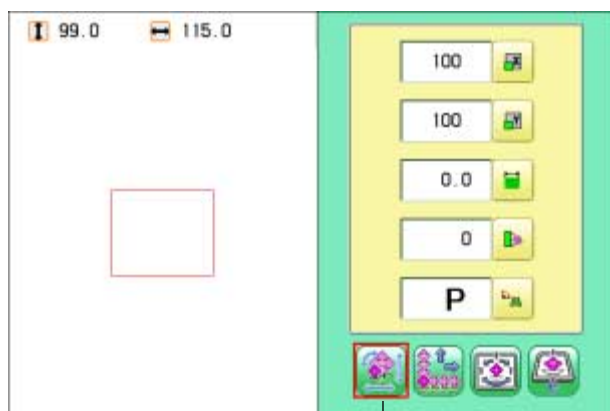

3. Select  (Angle).

Adjust

4. Select the number.




 Changing is cancelled.


 Numbers are deleted.


5. Press .

The setting is fixed.

 The pattern data may be shown.

 Setting is returned to the default.

 To return to Menu mode.

 to return to Drive mode.


110.0 120.0








● Repeat sewing

The machine embroiders a user-specified number of copies in the X and Y directions.

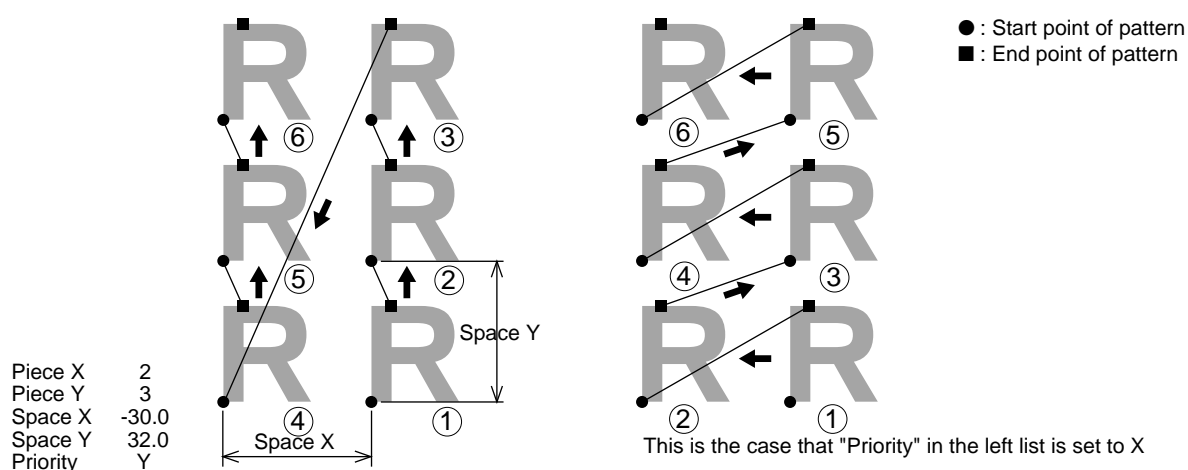
Setting example




SETTING ITEM	SETTING RANGE	DEFAULT	
 Piece X	1 ~ 30	1	This sets number of pieces side wise and length wise when you perform repeat.
 Piece Y	1 ~ 30	1	The number of pieces to be embroidered is product obtained by multiplying numbers in X and Y.
 Space X	-999.9 ~ 999.9 mm	0	This sets side wise distance between start point of each pattern when you perform repeat. When plus number is input, the machine makes repeat toward right. In case of minus number, toward left.
 Space Y	-999.9 ~ 999.9 mm	0	This sets length wise distance between start point of each pattern when you perform repeat. When plus number is input, the machine makes repeat upward. In case of minus number, downward.
 Priority	X (Side)• Y (Length)	X	When you set more than 2 pieces for repeat length wise and side wise, this selects direction to embroider 2nd piece.

PATTERN SETTINGS


12-6

1. When the machine is stopped, press .





2. Select "SETTING" and select  (Repeat).

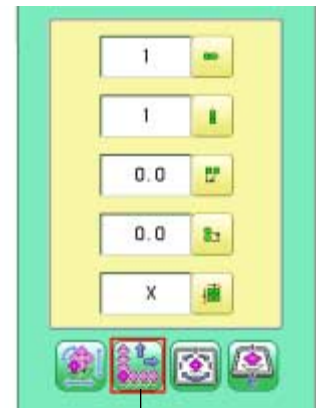99.0 115.0



Repeat

3. Select each setting item and select the number.


 Changing is cancelled.
 Numbers are deleted.



4. Press .



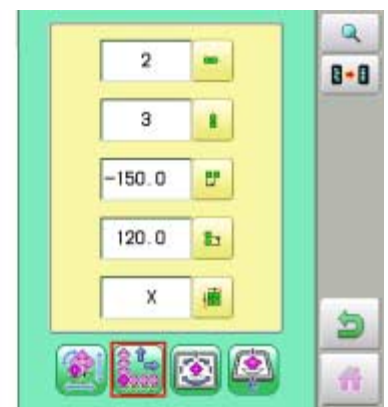

The setting is fixed.

339.0 265.0




5. Set necessary item by performing procedure no. 3 to no.4.


Set all the necessary items.

-  The pattern data may be shown.
-  Setting is returned to the default.
-  To return to Menu mode.
-  to return to Drive mode.


● Auto origin

When a pattern has different start and end points, the frame returns to the start point.

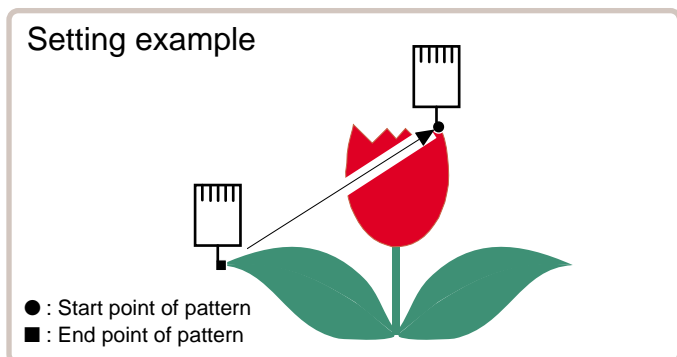


1. When the machine is stopped, press .






2. Select "SETTING" and select  (Offset).

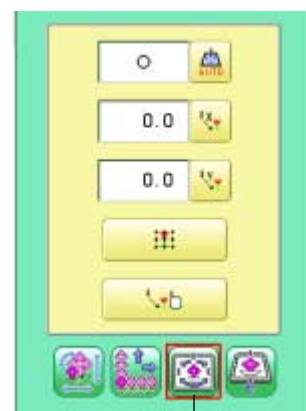99.0 115.0







Offset

3. Press  (Auto origin) and select  (ON) or  (OFF).

99.0 115.0



The setting is fixed.


-  The pattern data may be shown.
-  Setting is returned to the default.
-  To return to Menu mode.
-  to return to Drive mode.

● Offset

Setting the offset point designates a place for the frame to rest before moving to the start point of the actual embroidery.

When used together with the "Auto origin" (P 12-7) feature, the machine will return to the offset when it is finished embroidering as well.

This allows you to send the frame to a place where it will be easier to handle, when you will need to change hoops for example.

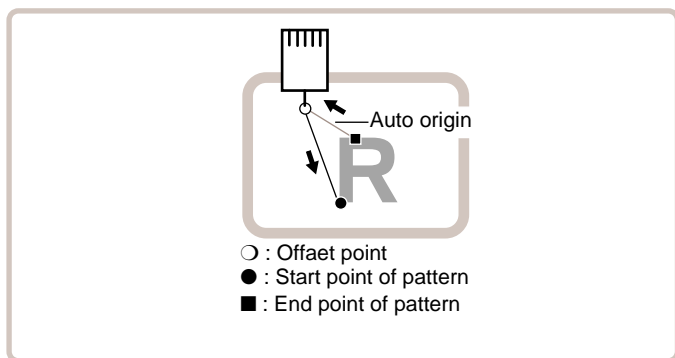

Direct input


You can move the offset point manually and save the position with "Teaching input".

Preset

There are 9 preset points that can be used for offsets around and in the center of the pattern.


Teaching input

You can set the offset point manually.

- When you Press  (Original point return) or use "Auto origin" (P 12-7) with an offset, the frame will return to the offset point.

Direct input

You can move the offset manually and save the position with "teaching input".

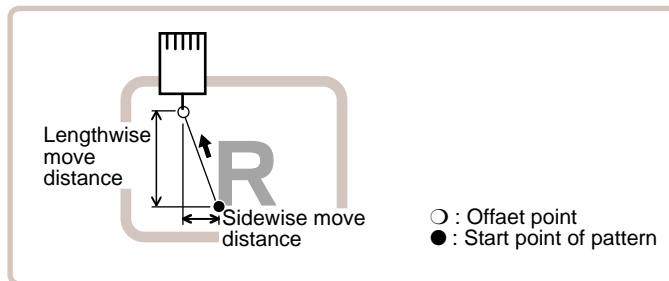

1. When the machine is stopped, press



2. Select "SETTING" and select (Offset).



Offset

3. Select (X axis distance) or (Y axis distance) and select the number.


Changing is cancelled.

Numbers are deleted.




4. Press .

The setting is fixed.

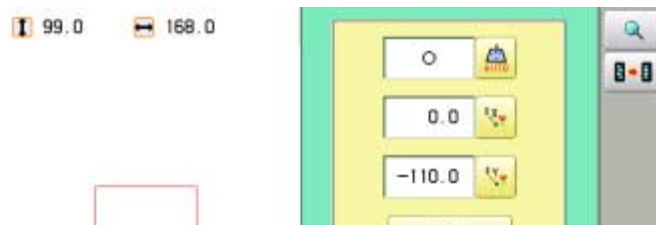


Offset point

- The pattern data may be shown.
- Setting is returned to the default.
- To return to Menu mode.
- to return to Drive mode.

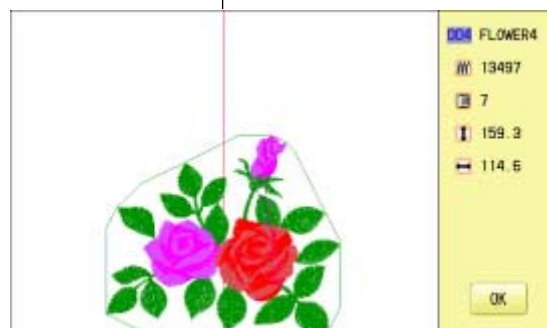


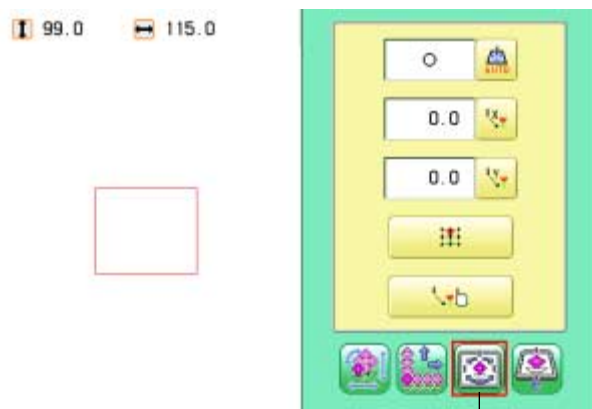
Preset

There are 9 preset points that can be used for offsets around the or in the center of the pattern.

1. When the machine is stopped, press .



2. Select "SETTING" and select  (Offset).



Offset

3. Select .







4. Select the offset point and press .


The setting is fixed.

 Setting is unset.




Offset point


-  The pattern data may be shown.
-  Setting is returned to the default.
-  To return to Menu mode.
-  to return to Drive mode.

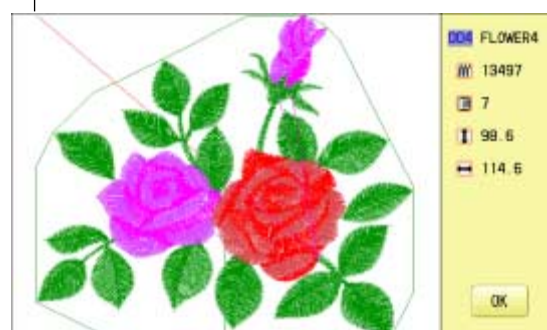


Teaching input


You can set the offset position manually.

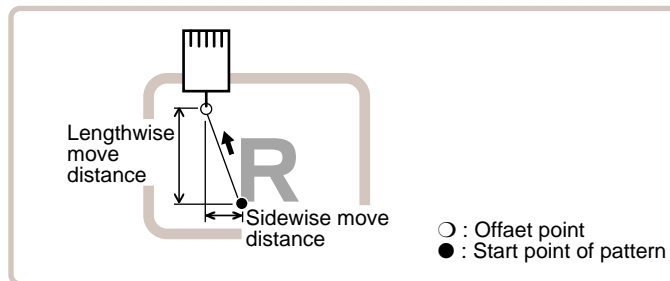

1. When the machine is stopped, press .




2. Select "SETTING" and select  (Offset).

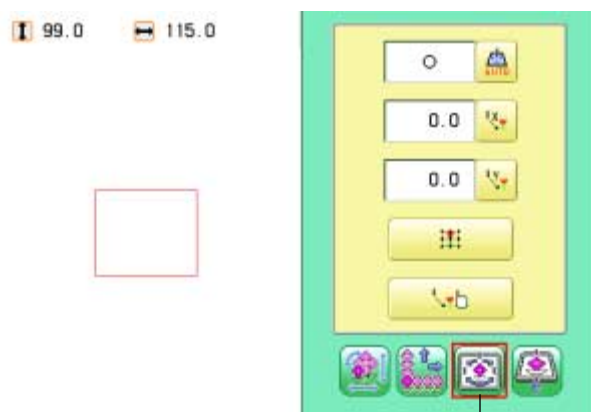


Offset

3. Select .




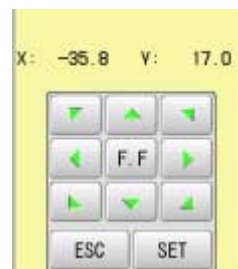
4. Press .

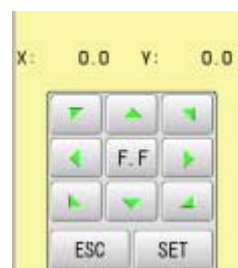

CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.


5. Move the frame to the pattern start point.

 Setting is cancelled.




6. Press .

The setting is fixed.

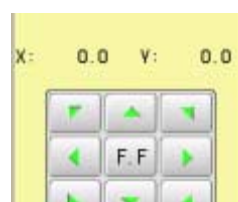

7. Move the frame to the offset point.

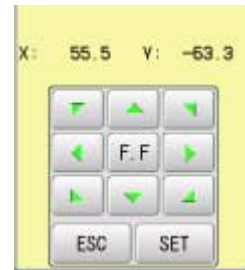





8. Press **SET**.

The setting is fixed.

Complete



-  The pattern data may be shown.
-  Setting is returned to the default.
-  To return to Menu mode.
-  to return to Drive mode.




Offset point

●Frame out

A frame out command can be added to a design. By setting frameout to a *Color change number in a design, you can move the frame to a desired position automatically and stop it after the machine finishes sewing of that color change number.

When you resume operation, the frame has an automatic return to previous position and you can continue sewing. (Fig.1)

This function will be convenient for trimming threads while embroidering or for sewing applique etc.

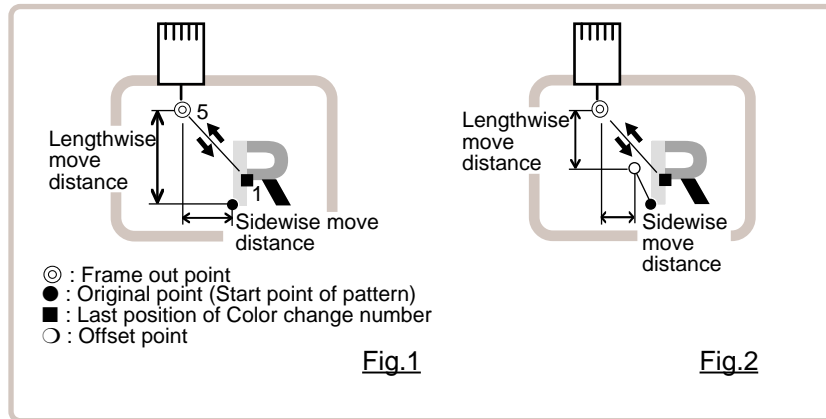

Selection of color change number 5-F

Set Color change number to execute frameout.

Teaching input

Set position of frame out and the distance of movement will be the frame out distance.

Usually move distance to frame out point is input, with original point as pivot.(Fig.1)

In case offset is set, the move distance is input with offset point as pivot.(Fig.2)

- You can set number of stitches or Color change number to make frame out in plural, but frame out point is limited to one place. The point set finally becomes good for making frame out. The point set finally becomes good for making frame out.


Direct input


You can set the position of frame out directly by inputting by the number keys. You can also change the position of a frame out set by "Teaching input".

Normally, the distance to the frameout point is input with the original point as a pivot. (Fig. 1) In case where an offset is set, the move distance to frameout position is input with offset point as pivot. (Fig.2)


Teaching input


Move the frame and the position will be saved as the frame out.

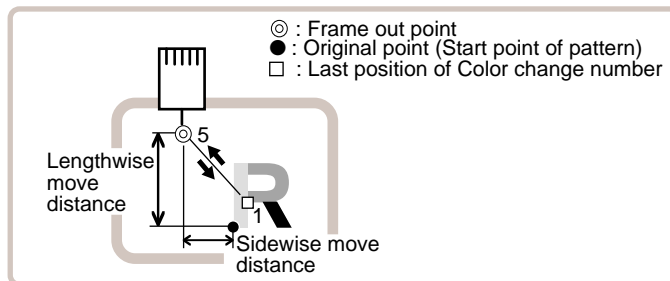


1. When the machine is stopped, press .




2. Select "SETTING" and select  (Frame out).

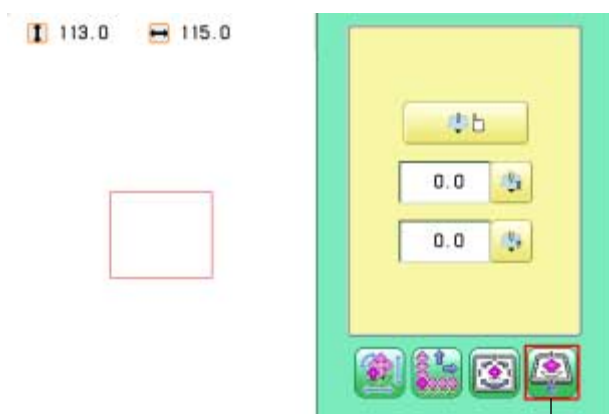



3. Select .

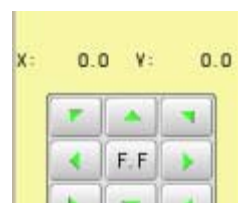



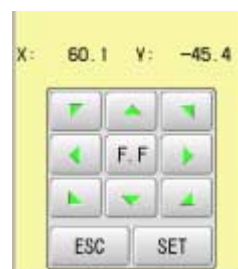

4. Move the frame to the frame out position.


 Setting is cancelled.



5. Press .


The setting is fixed.

-  The pattern data may be shown.
-  Setting is returned to the default.
-  To return to Menu mode.
-  to return to Drive mode.

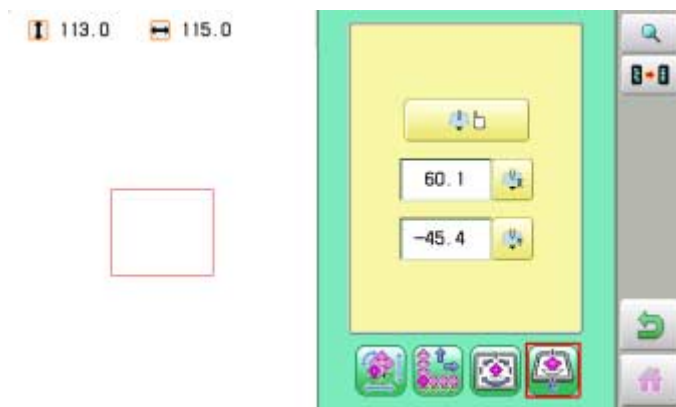

Direct input


You can change the position of your frame out by using this function. You can change the moving distance of the frame out and change the frame out position, which saved by "Teaching input".

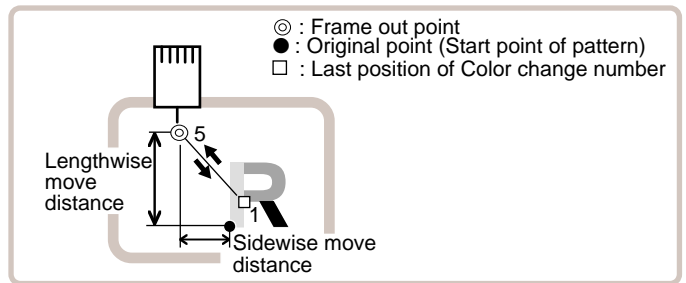

1. When the machine is stopped, press



2. Select "SETTING" and select (Frame out).

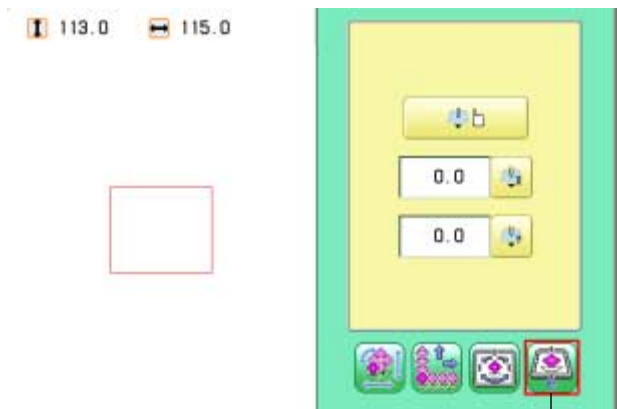

Frame out

3. Select (X axis distance) or (Y axis distance) and select the number.

Changing is cancelled.
 Numbers are deleted.



4. Press .

The setting is fixed.

113.0 115.0



- The pattern data may be shown.
- Setting is returned to the default.
- To return to Menu mode.
- to return to Drive mode.

Needle number settings 5-E

A needle number can be assigned to a *color change number.

When the needle number is assigned, the machine will embroider and automatically switch to the programmed for each color change number.

Color change stop function 5-F

A *color change stop can be assigned to a color change number.

When this is done, the machine embroiders the stitches for that color change number and then stops, displaying the following message:

>>Change Stop

Auto setting

Changes all designated needle numbers at once.

Thread color

This sets the background color or color assigned to each needle bar to be shown in the display.

Color change data registration, Color change data read

You can use the color change data from a saved pattern, register it, and then export the registered data to the selected pattern for use.

Repetition of color group setting

If your design has repetition of the group of the same color sequence, only set first sequence and set other automatically by following steps.


NEEDLE BAR SELECTION

13-2

●Auto setting

This changes all designated needle numbers at once.

For example, if you want to change all needles numbered "3" to "5", just select one of the color change numbers in which "5" is set, then all color change numbers can be changed into "3".

1. When the machine is stopped, press .



2. Select "NEEDLE".




3. Press  from right submenu.



4. Select the current needle number you would like to change.




5. Select the needle number to be changed.

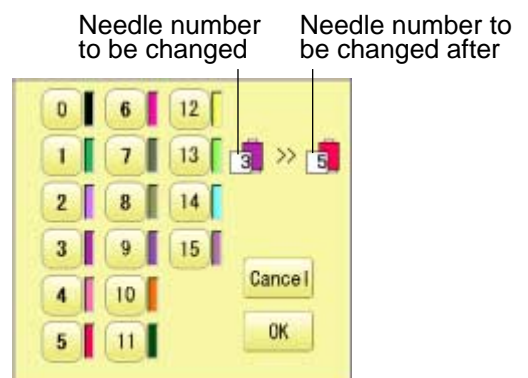


NEEDLE BAR SELECTION

13-2b

6. Press .

 Setting is cancelled.


 Preview screen is displayed.





The needle number has been changed from 3 to 5.

7. Press .

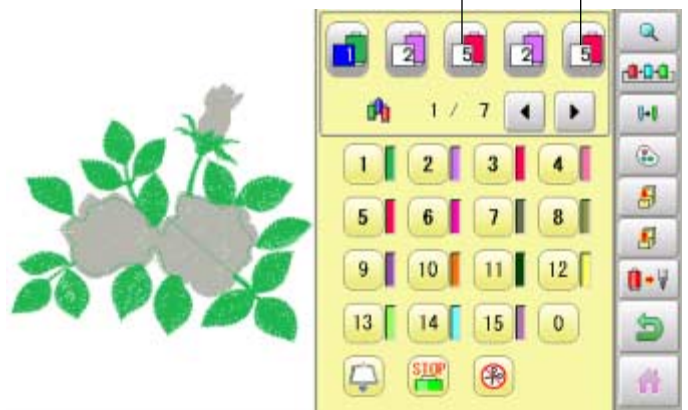The setting is fixed.




Press  to return to Menu mode.

Press  to return to Drive mode.

● Thread color

This sets the background color or color assigned to each needle bar to be shown in the display. This is useful to help confirm the correct color setup of a pattern. (128 colors are available)

- You will find difficulty to see the pattern if you set same color on both pattern and background.

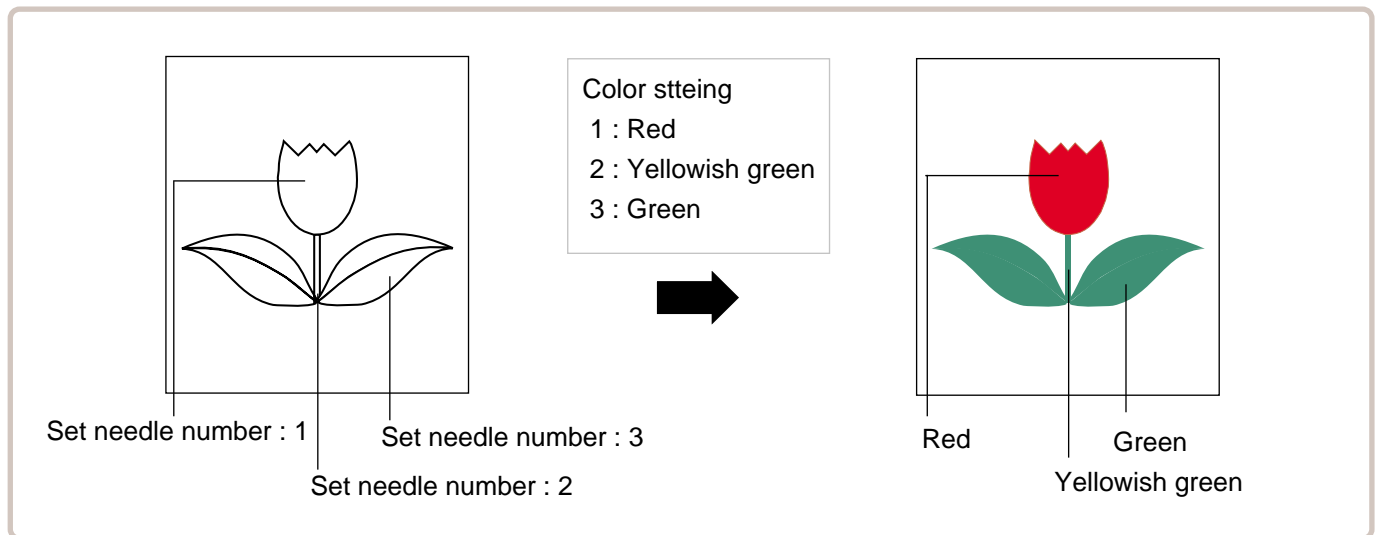

1. When the machine is stopped, press



2. Select "NEEDLE".




3. Press from right submenu.



- Select the needle number or cloth (background color).



You can change the color palette.

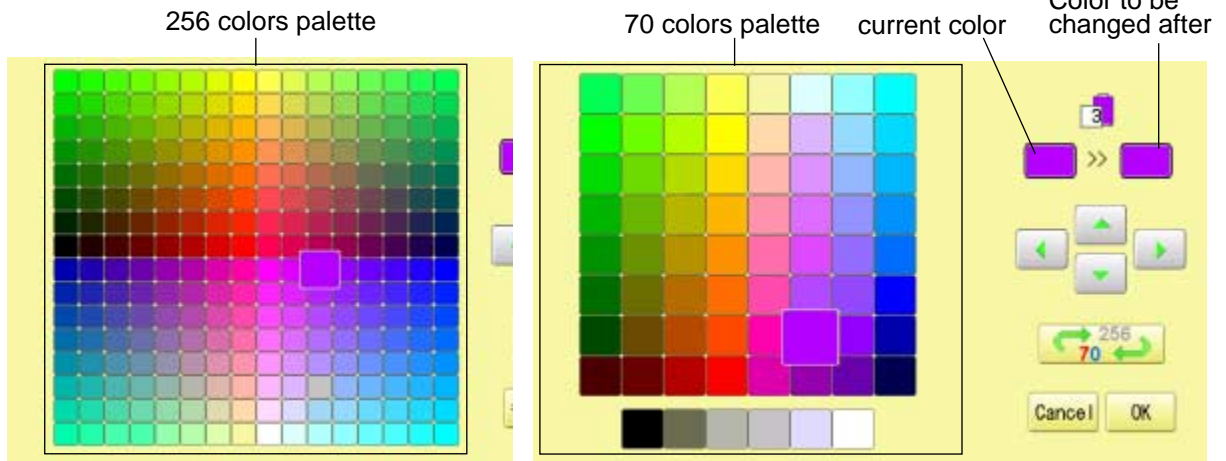

- Select the color to be changed at the palette.

You can select the color with .

Current color will be shown.



- Press .



- Press .

The setting is fixed.



Preview screen is displayed.

Press to return to Menu mode.


Press to return to Drive mode.



●Color change data registration

You can import and apply color change data from saved patterns (Including color change stops) to the current pattern. This function lets you apply the same color change data from other patterns.


■ The color change data is limited to one and the color change numbers are limited to 250.

1. When the machine is stopped, press .




2. Select "NEEDLE".

Color change number

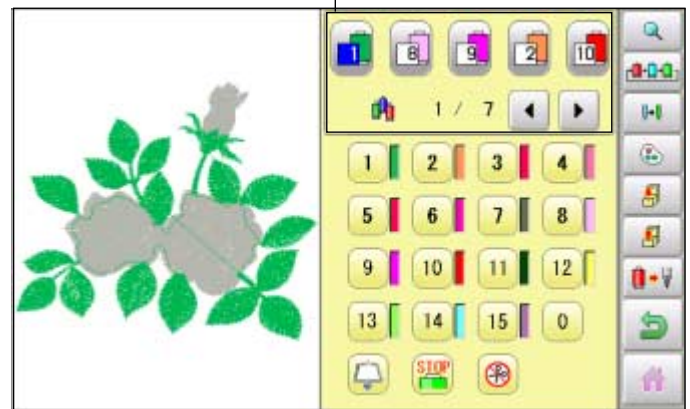


3. Press  from right submenu.



4. Press .

The color change data will be saved into memory.

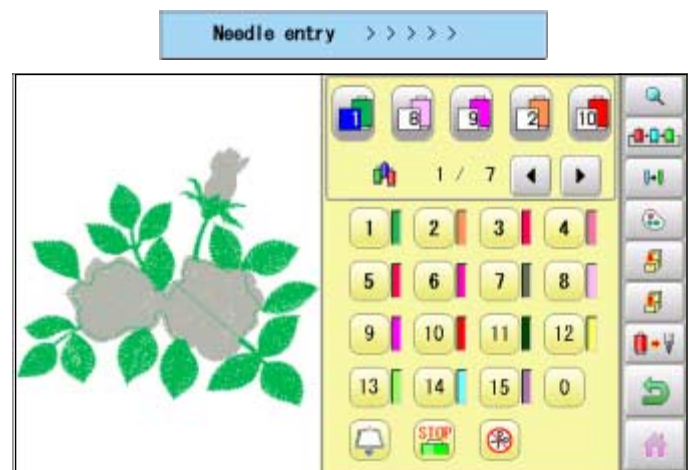


Press  to return to Menu mode.

Press  to return to Drive mode.

●Color change data read

You can export the registered color change data to other patterns.


- If the pattern receiving the imported color change data has more color changes than the imported data, the extra color changes will be set to "0" and will need to be set manually later.

1. When the machine is stopped, press .





2. Select "NEEDLE".

Color change number

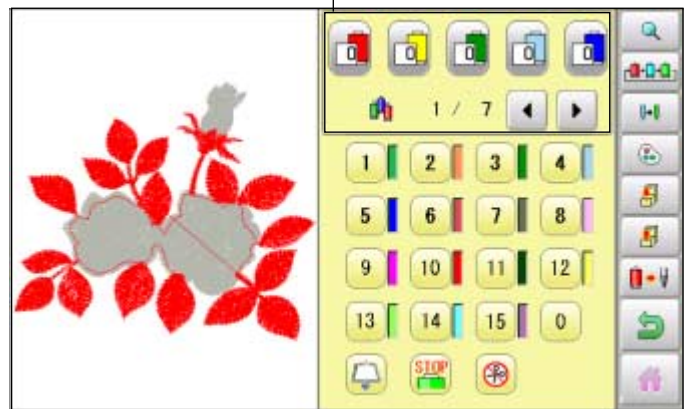


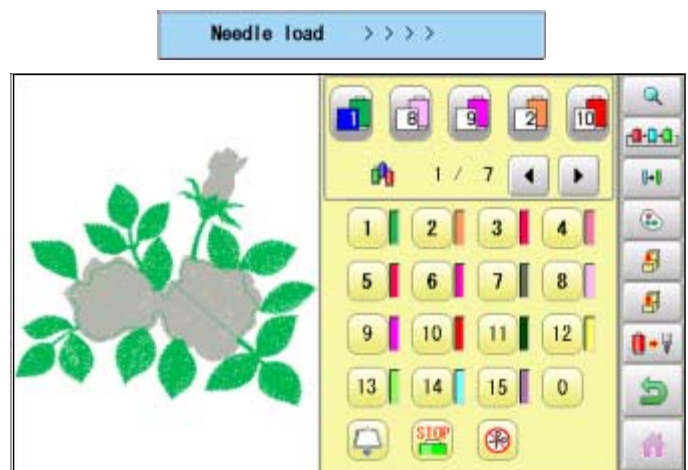
3. Press  from right submenu.



4. Press .

The needle number set is subject to the color change data exported.

Confirm the color shown in the  preview display.




Press  to return to Menu mode.

Press  to return to Drive mode.

● Repetition of color group setting

If your design has repetition of the group of the same color sequence, only set first sequence and set other automatically by following steps.


(If you have some function in the needle "Example: color change stop", the function also will set)

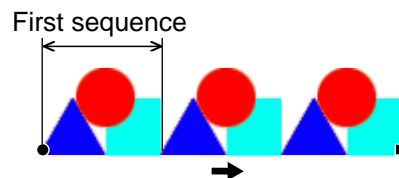

● : Start point of pattern
■ : End point of pattern

Fig. 1

1. When the machine is stopped, press

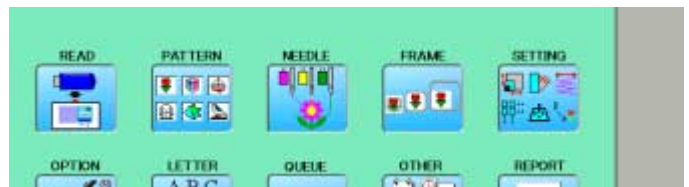

2. Select "NEEDLE".



3. Set first color sequence group.

Please confirm that the next number of the group is "0".




4. Press



from right submenu.

Set other color change setting automatically.

If the number of total color change does not become the first number of group multiple number. Machine display warning.

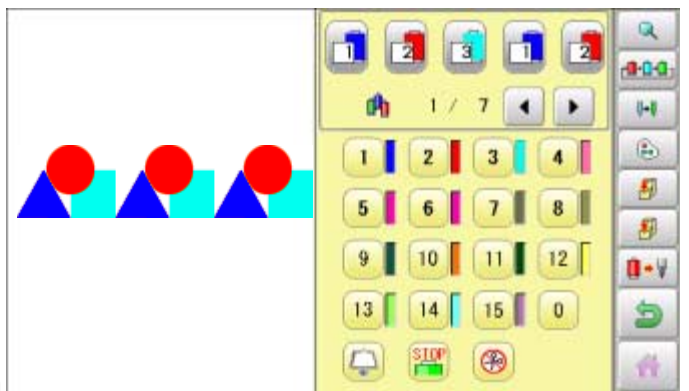

Press



to return to Menu mode.

Press



to return to Drive mode.




Check repeat setting.

OK

●Join


Joining 2 patterns into 1 pattern data to be read from a memory media.

Function of joining patterns is not valid for pattern data in PC connected with LAN.  5-6

■ In case you would like to use "Join" function, please set "Join design data" to "YES" on "READING" setting in advance.  14-4

1. Insert the memory media into the machine as described in "Inserting memory media".


 5-5

2. When the machine is stopped, press .








3. Select "READ".



4. Select  (USB memory).

Indicates pattern data of the memory media.


 TAP : HAPPY
 DST : Tajima
 DSB : Tajima (Barudan)
 DSZ : Tajima (ZSK)

 Folder : Contents of folder will be displayed when you select this icon.

1 % of free memory is equivalent to about 400,000 stitches.

If there are more stitches than remaining space, you may need to delete some designs to make room for the new patterns.

--- Serch pattern ---

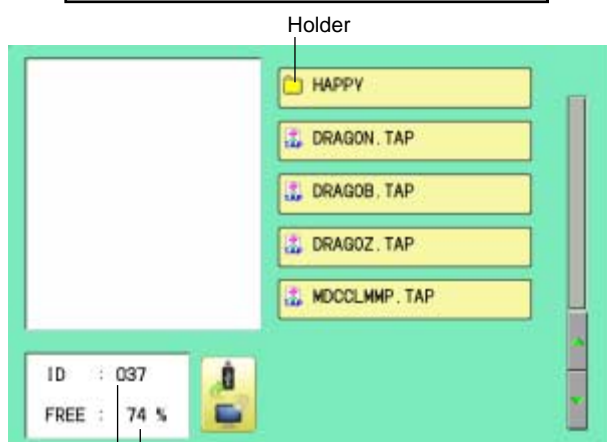


Free memory
The designs new ID number in the machines memory.

5. Select the pattern.


Once design is read.

Enable to read other pattern data.

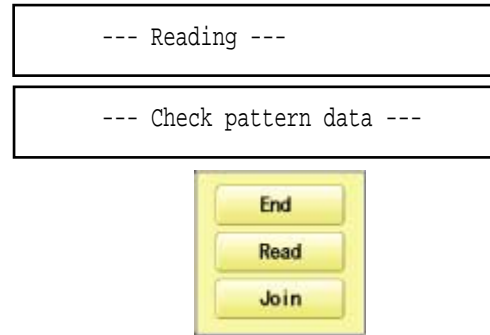


6. Press **Join**.

Shift the Memory media if the pattern data you desire to Join is in the other Memory media.

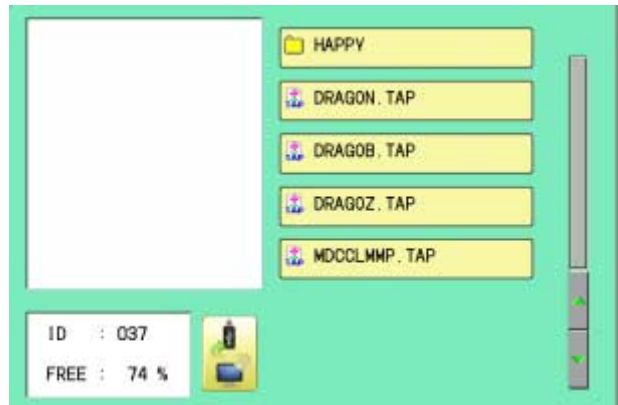

7. Select the pattern data to be Joined.

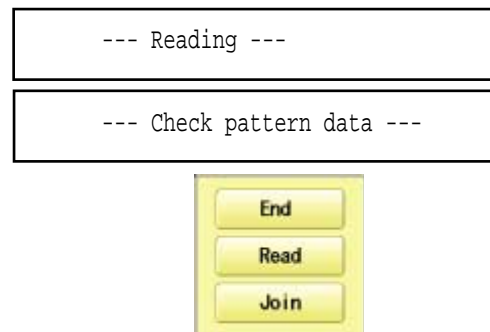


8. Press **End**.


The pattern data selected to be joined is joined next to the pattern data previously read in the machine as one pattern data and the screen returns to Menu screen. Pattern name is registered as the name of the first pattern data read in the machine in pattern datum joined.




Press **Join** if you desire to join more patters.

Necessary pattern data can be read by performing step 6 to 8.



When the screen displays pattern data in the folder,  is displayed.

When  is pressed, the screen moves off from the current folder.

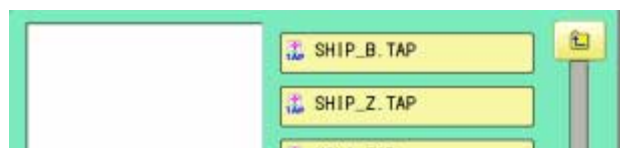

●Pattern read settings

Settings related to pattern data reading:

SETTING ITEM	SETTING RANGE (Default is underlined)	
1 Keep null (CHG.)	Yes• <u>No</u>	: This function lets the machine read zero stitches as they are before color change when reading pattern data.
2 Skip null stitch	Yes• <u>No</u>	: This lets you choose to ignore all null stitches when reading pattern data.
3 Combine jump	Yes• <u>No</u>	: Allows you to combine multiple, consecutive jump stitches when reading pattern data, if desired. It combines them into jump stitches of the maximum 12.7mm and reads the pattern with the combined jumps.
4 <u>Stitch sweeper</u>	<u>Yes</u> •No	: This function eliminates extremely short stitch for stitch width when reading pattern data.
5 Sweep length	0 ~ <u>0.4</u> ~ 0.8 (mm)	: This setting controls the length of the stitches eliminated by the Stitch sweeper. Stitches shorter than this setting will be eliminated.
6 DST name display	<u>Yes</u> •No	: When patterns in Tajima format are read in, the display shows the file name.
7 <u>Data format</u>	<u>Auto</u> →Automatic Happy→HAPPY, Tajima Brd →Barudan Zsk →Zsk	: Turn data format for reading patterns. Usually, set it to Automatic.
8 <u>Design information</u>	<u>Yes</u> •No	: This function reads various function setting which are set in pattern data together with pattern data (type TAP).
9 <u>Trace type</u>	 	: Lets you select the type of trace data that is created as a pattern is read in. → Maximum embroidery area of pattern → Out line
10 Join design data	Yes• <u>No</u>	: It is appeared that other pattern data is joined to the data previously read in the machine. You can make one pattern data by joining multiple pattern data read in the machine.
11 Folder select	Yes• <u>No</u>	: When reading pattern data, the list for selection of folders will be displayed.

Detailed explanation of machine setting

4 Stitch sweeper

This removes stitches that are extremely narrow when reading pattern data and writing to machine memory. If thread breaks occur often at the same point in a pattern, this may be because of narrow stitches.

■ If the thread still breaks in the same place you can use this function again but repeated usage may distort the shape of the stitch.

1. Save the pattern to USB memory.
2. Conduct a stitch sweeping of the pattern and load it into the machine again.

End

7 Data format

This enables you to select a different format and read the pattern again if the machine did not read it correctly the first time.

8 Design information

*Various settings are saved together with a pattern. If some settings are changed in the pattern and you wish to return to the originals, simply reload.


■ The data may only be HAPPY format (TAP).


9 Trace type

You can compare the design size and design position to the embroidery frame before you start sewing.

The embroidery frame will move around the actual design size.

At this time you can choose which type of trace from the two types as seen in the following figure:

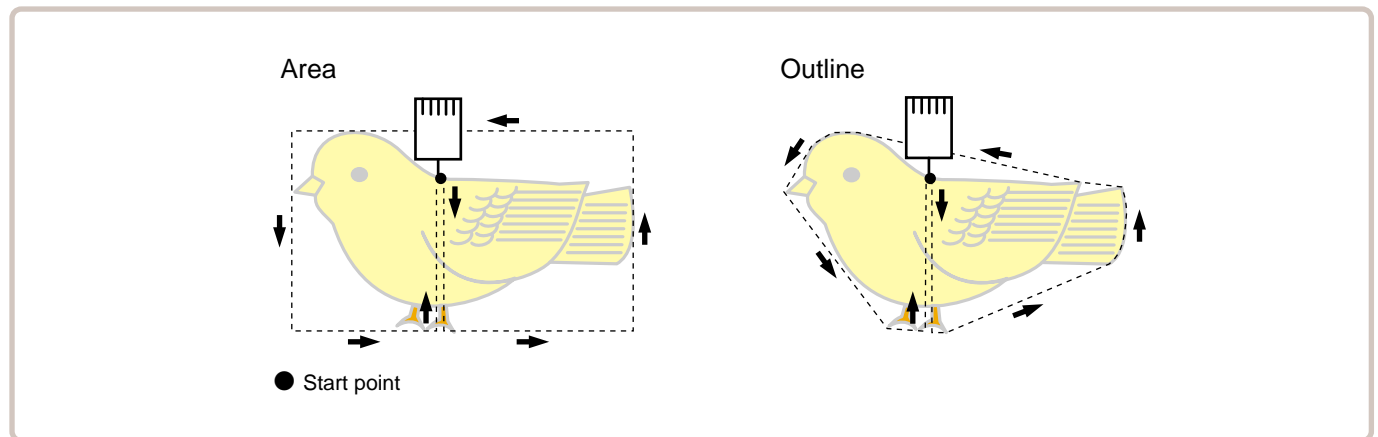

1. When the machine is stopped, press  .



2. Select "OPTION".




3. Select  .




4. Select desired setting item and change the setting.

You can move to next page by pressing .

Press , all settings are returned to the default.

Press  to return to Menu mode.

Press  to return to Drive mode.

POSITION ALIGNMENT BY DEFINING 2 POINTS 15-1





When embroidery position is aligned, machine automatically sets angle and embroidery only by defining 2 points (P1, P2).

This function is easy to align the position for embroidery on the edge of pocket or over seam of shirt.

*This function cannot be executed when repeat sewing " is set. [P 12-5](#)

*This function is cleared when pattern with "Offset" is set. [P 12-8](#)

Alignment Example

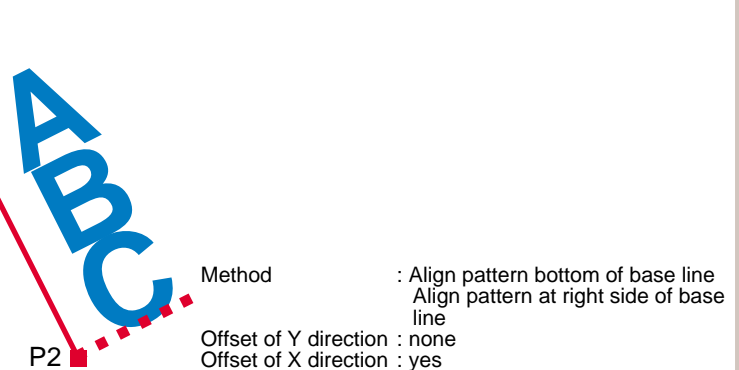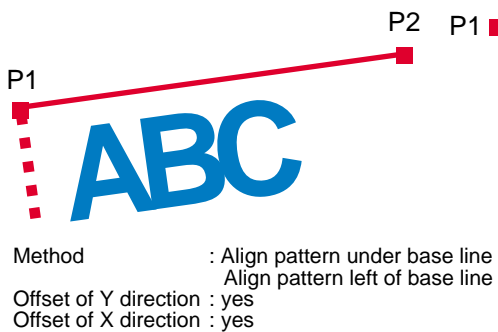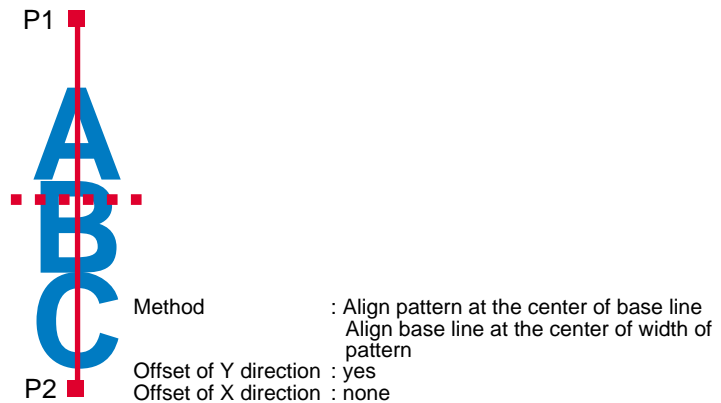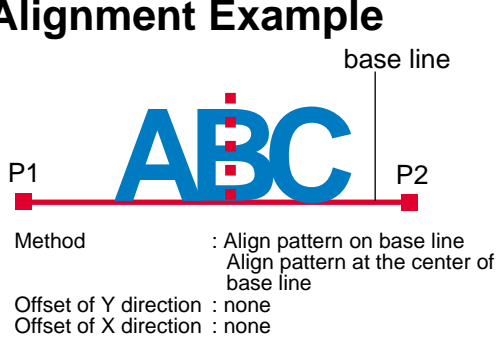

Alignment Method

Align pattern with horizontal base line

Align pattern under base line			
Align base line at the center of height of pattern			
Align pattern on base line			
Y dir. X dir.	Align pattern left of base line	Align pattern at the center of base line	Align pattern right of base line


Align pattern with vertical base line

			Align pattern top of base line
			Align pattern at the center of base line
			Align pattern bottom of base line
Align pattern at right side of base line	Align base line at the center of width of pattern	Align pattern at left side of base line	Y dir. X dir.

POSITION ALIGNMENT BY DEFINING 2 POINTS 15-2

The procedure is explained as an example of embroidering pattern on pocket of shirt.

1. Hoop a shirt on embroidery frame.
(Diagonal position of pocket on frame is okay.)
Set the frame on the machine.

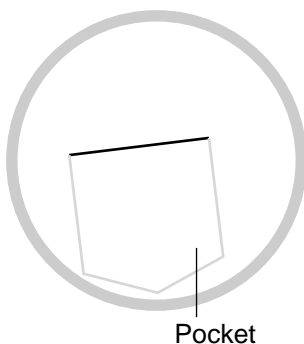

2. Press


Press and to turn the pointer on when laser pointer is installed.

3. Press






4. Select alignment method

Select in this case.

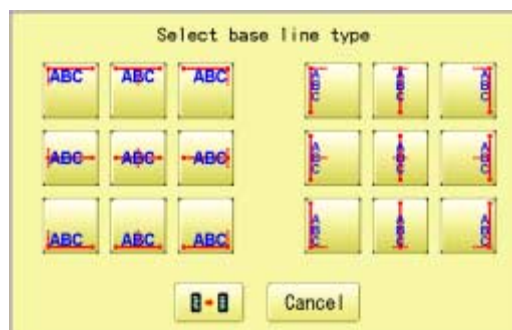



5. Move frame with and align the pointer or pressure foot on the left edge (P1) of pocket.

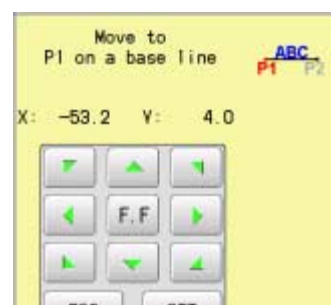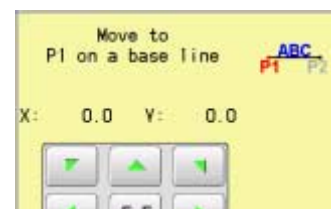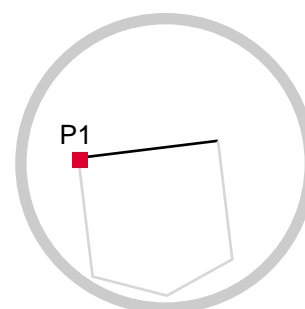

6. Press and move frame with



, and align the pointer or pressure foot on the right edge (P2) of pocket.

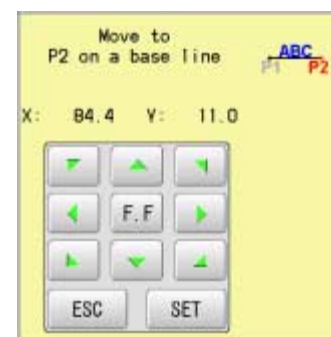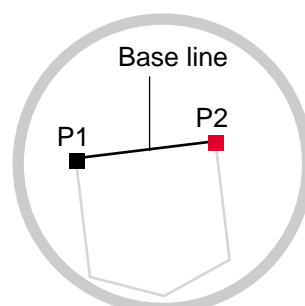


Line connected between P1 and P2 is base line.

POSITION ALIGNMENT BY DEFINING 2 POINTS 15-3

7. Press **SET**.

Enter movement of arrow from base line (edge of pocket) to pattern.


Enter "15.0"(15mm) in this case.

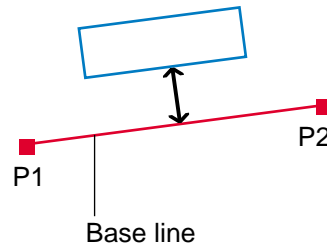

8. Press **SET**.


Enter movement of arrow from base line (edge of pocket) to pattern.

Leave "0.0" when pattern is aligned to the center of base line (width of pocket).

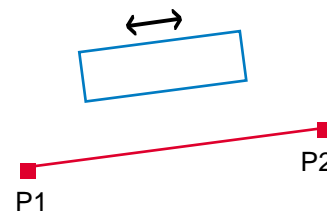

9. Press **SET**.

Complete

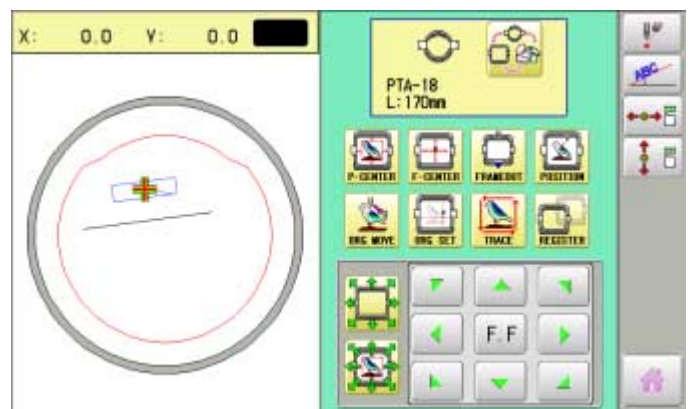

10. Press **HOME**.

Angle and position of embroidery are automatically set.



Important safety instructions


When using an appliance, basic safety precautions should always be followed, including the following.



WARNING - To reduce the risk of injury to persons:

1. An appliance should never be left unattended when plugged in. Always unplug this appliance from the electric outlet or switch main breaker OFF after using and before cleaning.
2. Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
3. Use this appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual.
4. Keep fingers away from all moving parts. Special care is required around the sewing machine needle and borer blade.
5. Switch the sewing machine off ("0") when making any adjustments in the borer device area, such as changing borer blade, etc.


SAVE THESE INSTRUCTIONS

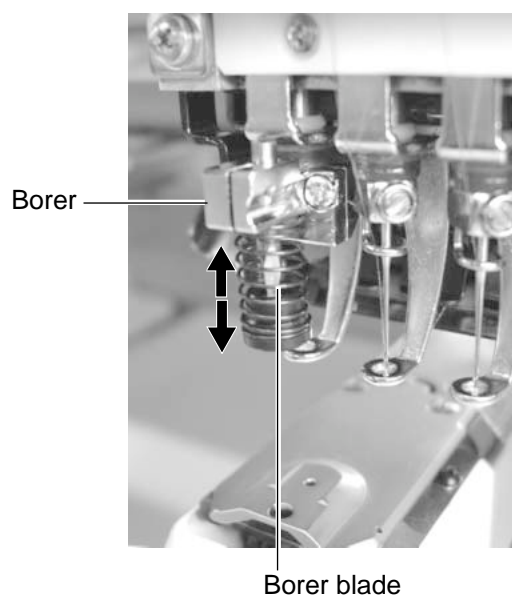

- For safe use of this device, we highly recommend to use "Safety Sensor" (option) together. "Safety Sensor" will stop machine, when your hand gets closer to needles or knife. Please contact your local distributor to get more detail information.


Select needle number for Borer device

Select needle number which Borer device is installed.

1. When the machine is stopped, press .




2. Select "NEEDLE".

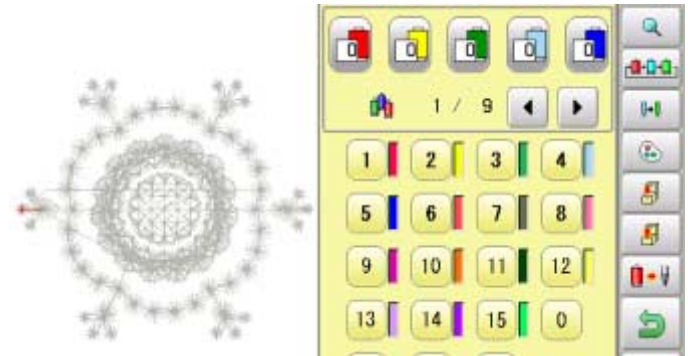


3. Press  from right submenu.




4. Select 15th needle number.

Display  on right side of needle number.
If you press again, cancel the BORER setting.




5. For fix the setting, press .

If you like to cancel this setting, press .

Press  to return to Menu mode.


Press  to return to Drive mode.

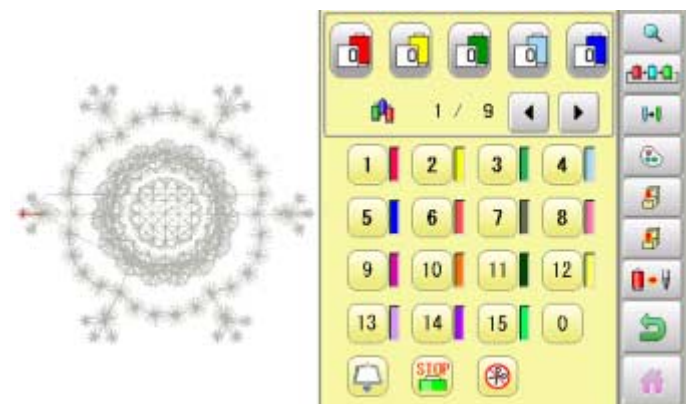


Borer setting to color change sequence

When you use the borer, you can set the use of the borer blade to any color number of the selected pattern data.

 You can not setting "NEEDLE" for selected "LOCK" design.


Please release "LOCK" from design.  11-1

1. When the machine is stopped, press  .




2. Select "NEEDLE".

The screen of color number 1 selection is displayed.
The current color number is showed in the pattern data display portion.

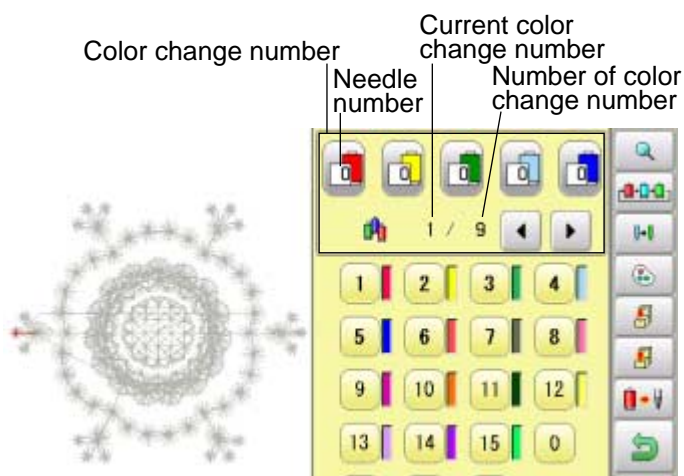


3. Select the color change number.

The current color number is showed in the pattern data display portion.

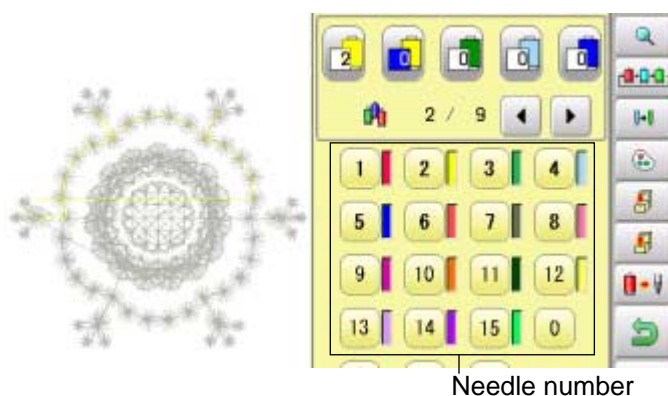

4. Select Needle number (15th needle).

The setting is completed.
If you like to set borer to another color sequence too, you need to repeat step 3 and 4 again.

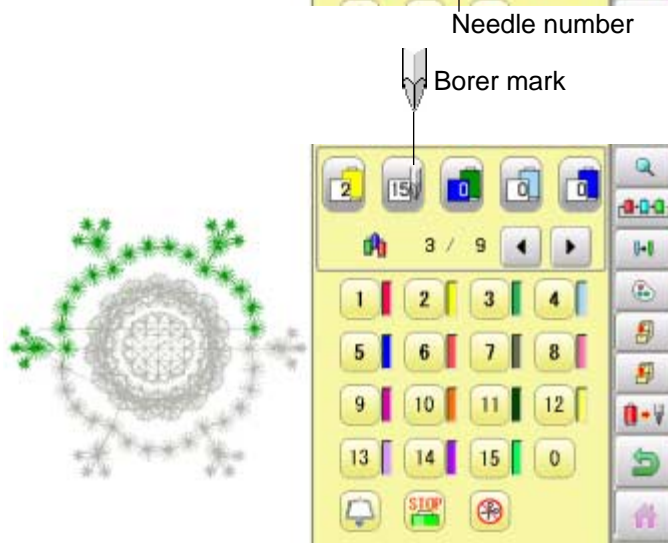


Press  to return to Menu mode.

Press  to return to Drive mode.

●Exchange the borer blade (option)

If the Borer blade become bunt or should chip, exchange the Blade in the following procedures.



CAUTION: To prevent accidents;
Be sure power switch is "OFF".

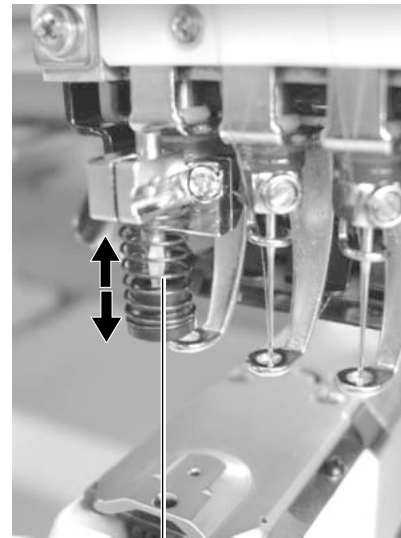

Borer blade


1. Loosen the set screw and remove old borer blade from bracket.
2. Please set position of Top of borer blade 3 mm higher than surface of Bracket, and Cutting point of blade should be on front and back, right and left.

CAUTION: To prevent accidents;
Please do not push up Blade guard by finger.

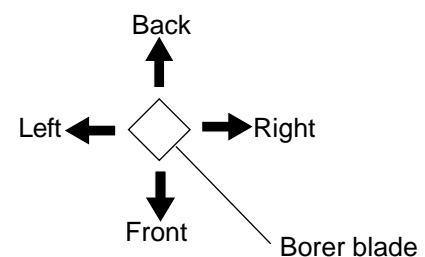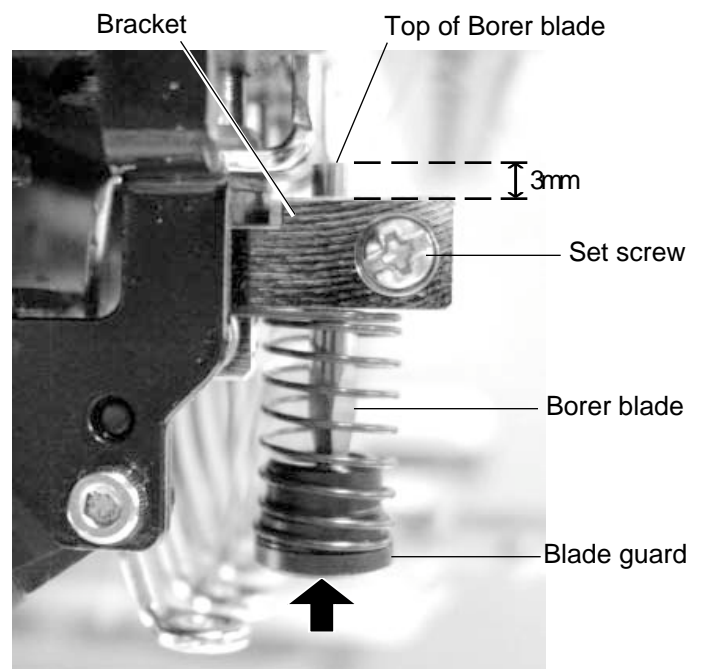

Standard Borer blade position is that position of Top of borer blade is 3mm higher than surface of Bracket.
Depending on cutting result this height can be adjusted between 0mm to 3mm.

This creates direct designations to the number of stitches and *color change number, as well as setting the frame and data to the designated sewing position.

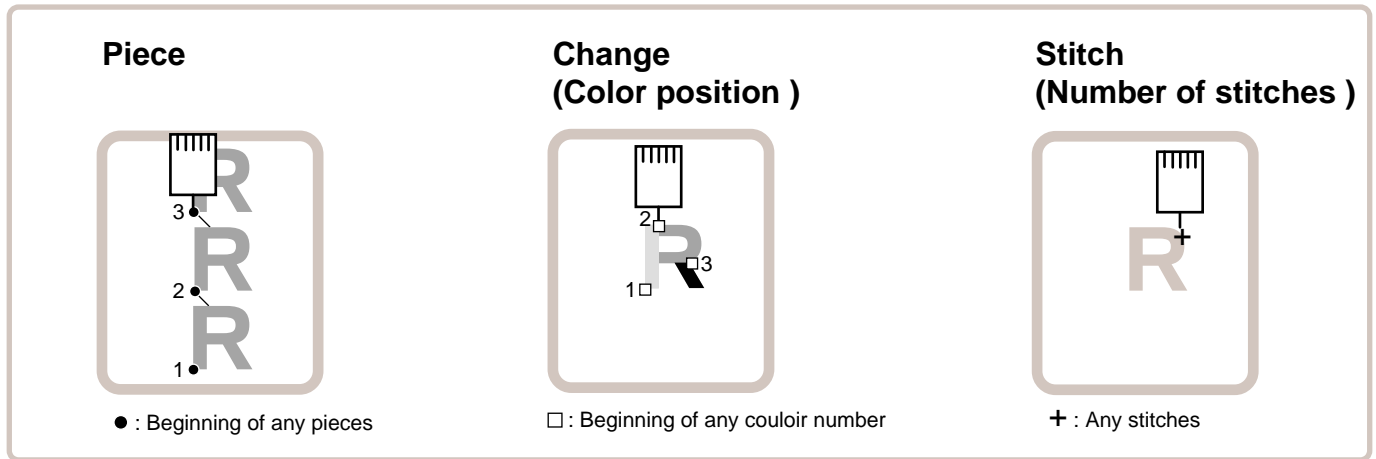

Piece

If "Repeat" is set, this allows the frame to move to the beginning of any piece at will.

- You can specify sewing position at specified pattern data number and specified number of stitch or color change number by entering the specified information.

Change (Color position) 9-7

This moves the frame to the beginning of any Color change number at will beginning of color.


Stitch (Number of stitches) 9-6

This moves the frame to any stitch at will.

Piece number

The frame and pointer can be moved a specified piece number.

1. Press  "Frame forward".

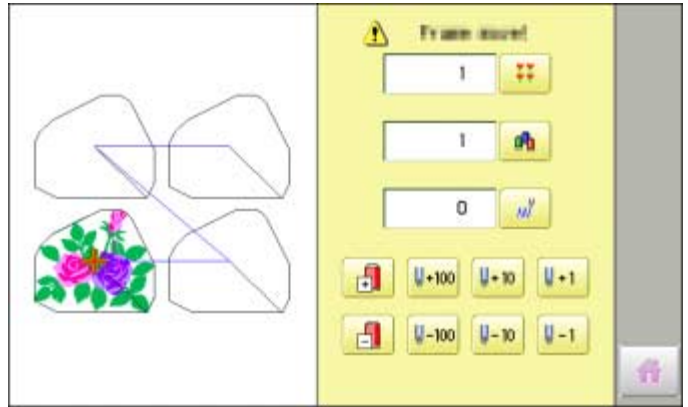


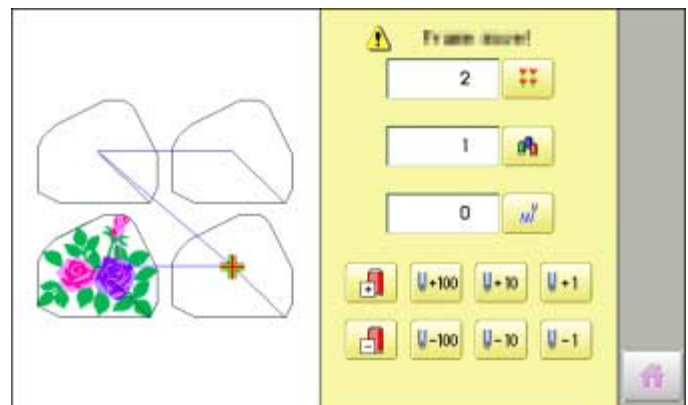
2. Press .



3. Input the number and press .


The frame and pointer will move to the specified piece number.

 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep hands away from the frame.



Press  to return to Drive mode.

Register will restore the position of the frame to the last point before a power failure even if the point of origin or the pattern itself were changed.

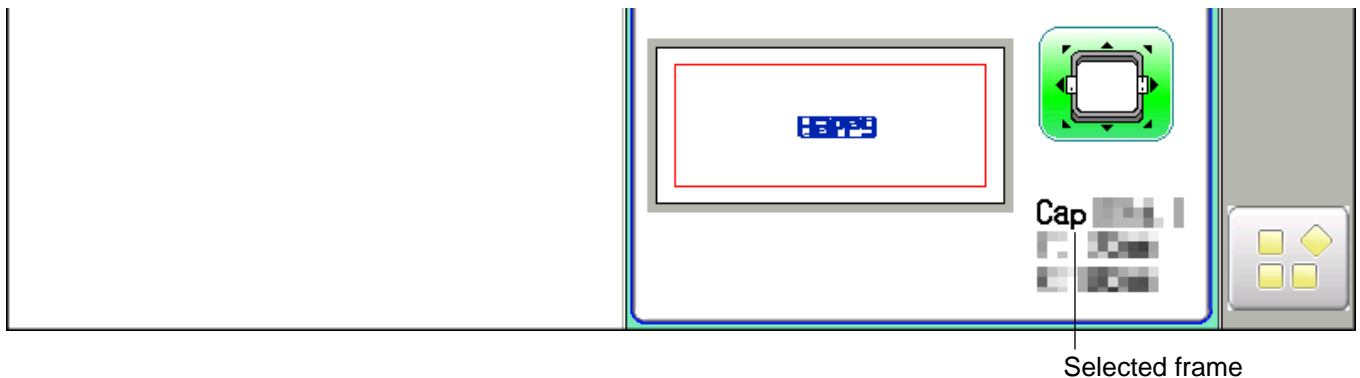

- ⚠ If register is used with a cap drive frame, make sure that the machine recognizes it by showing "Cap" (Cap frame) or "OnePoint" (One Point frame) the appropriate frame or the machine could be damaged.
If register is used with indication of frames that do not require cap drive frame, carriage moves and exceeds embroidery area of cap drive frame and damages the machine and cap drive frame.
- ⚠ When you use "REGISTER", keep clear of the frame and table. It is dangerous as the frame could make sudden movements.
Never use register with the needle bar and presser foot lowered, as they could hit the cap drive frame and break.
- It is not always necessary to set "Entry", but you can't set "Return". Once "Entry" is set, it is retained even if power is turned off.
If you change the position of the original point, set it again.
- Even if you set "Entry", the frame may not return exactly to the original position in process of time.
Reset this monthly.

Entry



Registering the start point in the selected pattern.


Return (Registered position)


When position of the frame changes because of power loss, this will restore the frame to the registered point.

Entry

This registers the original point of the selected pattern.

1. Press .
2. Confirm that there is indication of  (Top) in the display and go on to procedure no. 3.

Press  "Top", if there is not a indication.

Upper right indication of  will be shown.

3. Move the frame to the original point with the




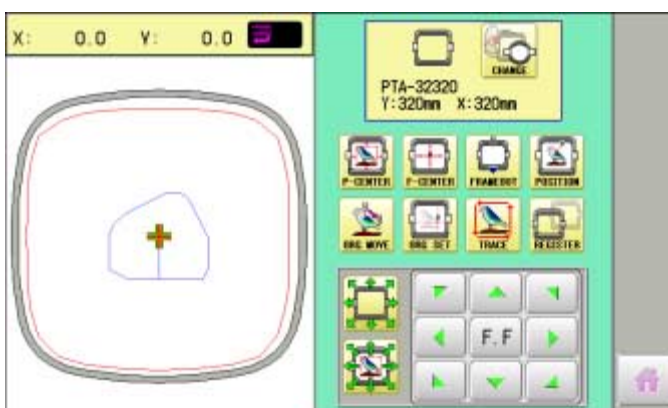
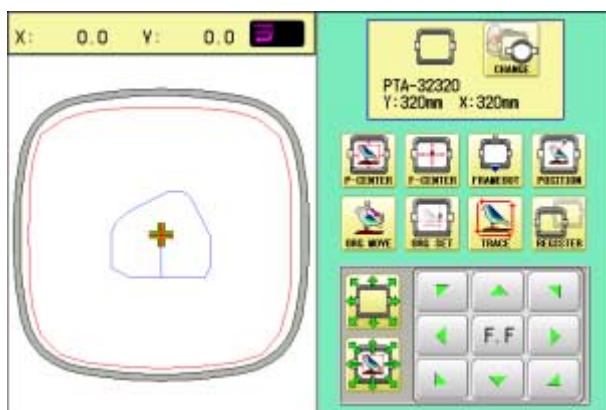
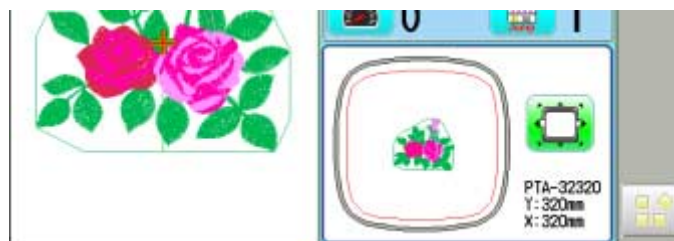
If the frame is located at the origin point, proceed to Step 4.

4. Press .

5. Press .

The origin point is registered.

Press  to return to Drive mode.




Return


In case of power failure you can return to the original point you registered.



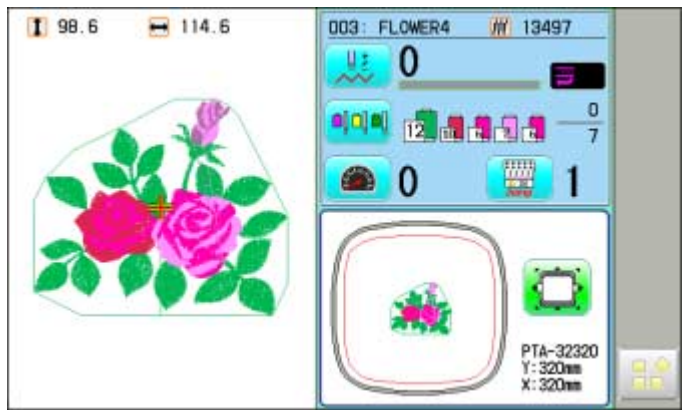

CAUTION: To prevent accidents.
The frame moves quickly.
Keep your hands away from the frame.




1. Press .

2. Confirm that there is indication of  (Top) in the display and go on to procedure no. 3.

Press  "Top", if there is not a indication.

Upper right indication of  will be shown.

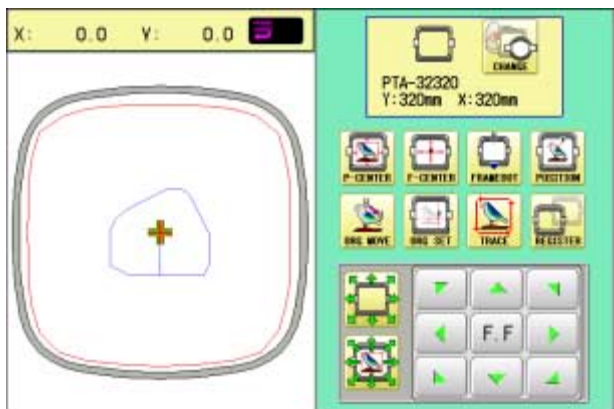


3. Press .



4. **Return** press.

The frame will return to the origin point you registered.

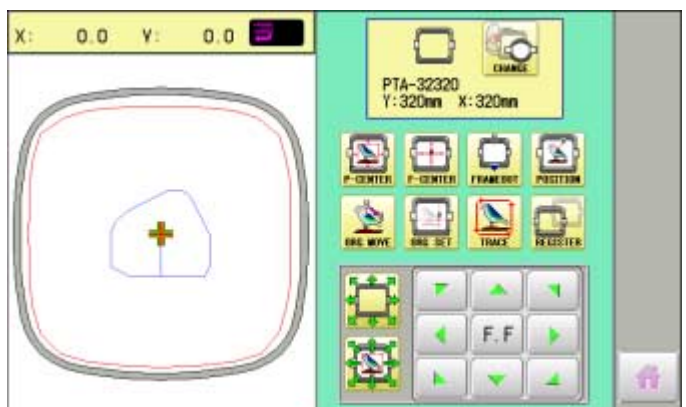

Press  to return to Drive mode.


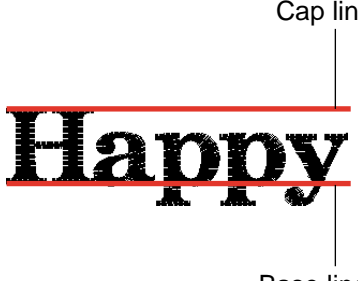





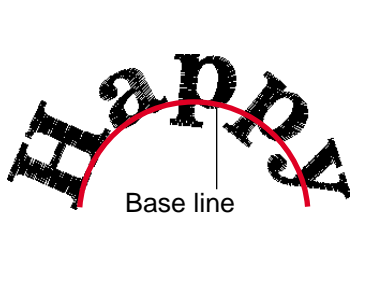





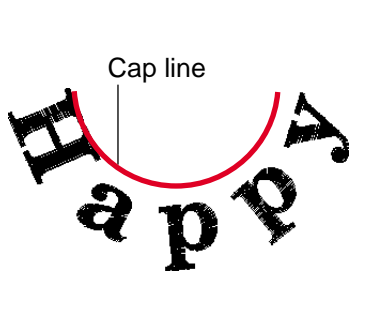





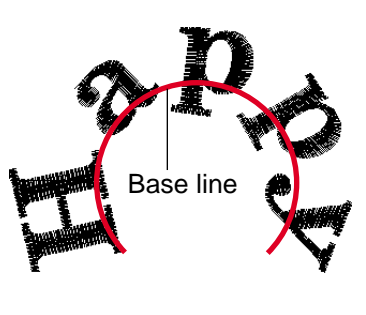





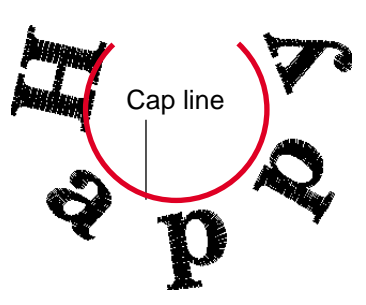
Selecting letters using the built-in fonts.


You can create monogramming data by using built-in alphabet, numbers and symbols.

You can choose layout method of monogramming data from horizontal, arch, or circle layout.

Save lettering embroidery data to design memory automatically.


Layout method

 Horizontal (straight line) Base line is horizontally laid out.		
 Arch (upward) Increase or decrease by 5. Set by entering value. Baseline is formed a round arch in an upward direction. Change settings of baseline's width and height. Press SET after setting is firmed.	<div>  Width <div> <div>-</div> <div>+</div> <div></div> </div> </div> <div>  Height <div> <div>-</div> <div>+</div> <div></div> </div> </div>	
 Arch (downward) Cap line is formed a round arch in a downward direction. Change settings of capline's width and depth. Press SET after setting is firmed.	<div>  Width <div> <div>-</div> <div>+</div> <div></div> </div> </div> <div>  Height <div> <div>-</div> <div>+</div> <div></div> </div> </div>	
 Circle (upward) Baseline is formed a circle in an upward direction. Change settings of baseline's diameter and angle. Press SET after setting is firmed.	<div>  Diameter <div> <div>-</div> <div>+</div> <div></div> </div> </div> <div>  Angle <div> <div>-</div> <div>+</div> <div></div> </div> </div>	
 Circle (downward) Capline is formed a circle in an downward direction. Change settings of cap line's diameter and angle. Press SET after setting is firmed.	<div>  Diameter <div> <div>-</div> <div>+</div> <div></div> </div> </div> <div>  Angle <div> <div>-</div> <div>+</div> <div></div> </div> </div>	

- When the machine is stopped, press .




- Select "LETTER".




Letter selection

Select letters. One data can contain up to 26 letters including space.


- Select letter.


 The screen is switched to basic script or cyrillic script.


 All the letters are deleted.


 Uppercase of basic script

 Lowercase of basic script


 Uppercase of diacritic script

 Lowercase of diacritic script



 Uppercase of cyrillic script

 Lowercase of cyrillic script

 Symbol


 The screen returns to menu.


 Selected letter or number is deleted.

  The cursor moves left and right.




Space or Delete

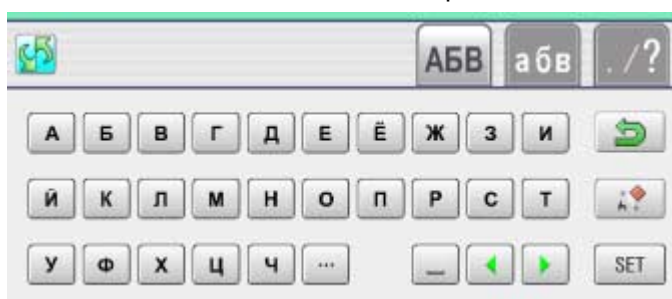


The display of Cyrillic script after pressing .


Except for the space between letters, space is eliminated.

- Press  when you are finished with the letter selection.

Fix your setting and you can select fonts.

For fonts, refer to [BUILT-IN FONT LIST].  26-3


Font Selection

Enables you to select the preferred font.  26-3

- Select the font.

Fix your setting and go to next step.

Basic script (Diacritic)

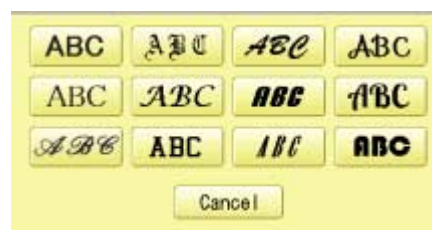

Cyrillic script



Letter Height selection


Select the letter height.

6. Select .




7. Select desired height.


After the height setting is fixed and now line length can be selected.

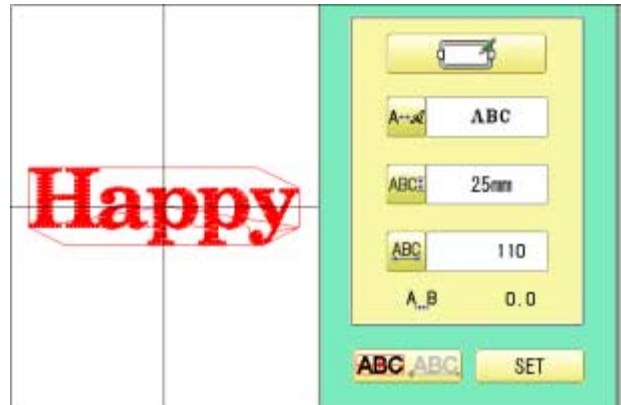

Layout method

Select layout method.


8. When you would like to change layout method, select either layout method from the right submenu.  16-1
Initial layout method is horizontal (straight line).

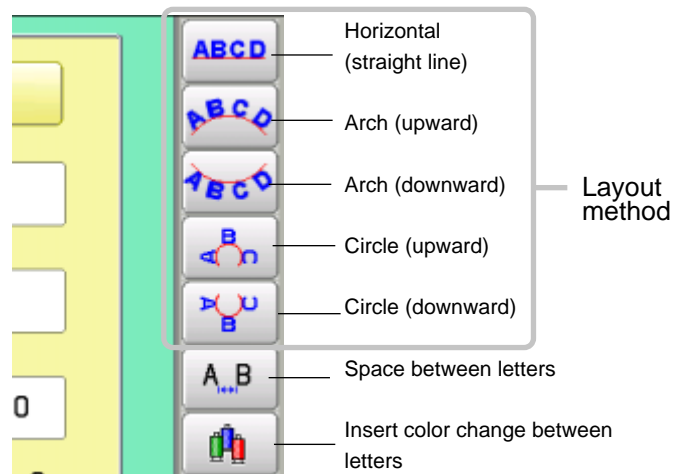

Line Length


When layout method is "horizontal ", you can change line length.

For other layout method than "horizontal", line length is not used.


9. Select  when "horizontal" in layout method is selected.
Go to the procedure when other style than "horizontal" in layout method is selected.





9. Select the number.


 Setting is canceled.




10. Press .


 Return to the Letter selection.


 Return to the Font Selection.

 Return to the Letter Height selection.


 Return to the Line Length.

You can change start point of monogramming data.

 : Start point is the center of monogramming data.

 : Start point is the center of monogramming data.

Start point is the center of baseline or capline for "arch" and "circle" layout.

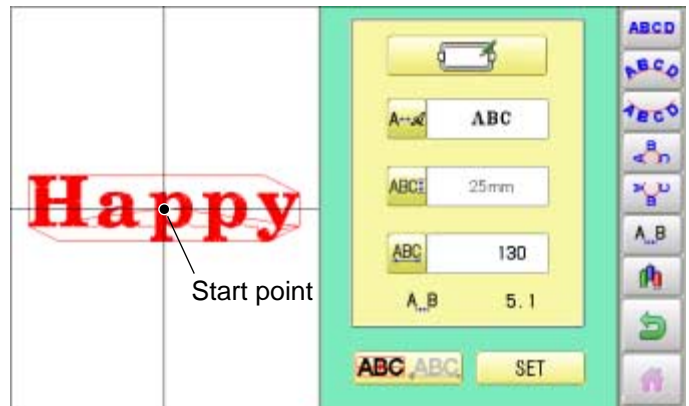


Create

You can create embroidery data from the letter settings.


11. Press .

The new pattern data will be created. Then you will return to menu mode.

Press  and go to Running Screen.

You can see letter created as embroidery data.


The first 8 letters will be shown as the name of the pattern which you have made by letter selection.


Press  to return to Menu mode.




Space between letters

Space can be added between letters.

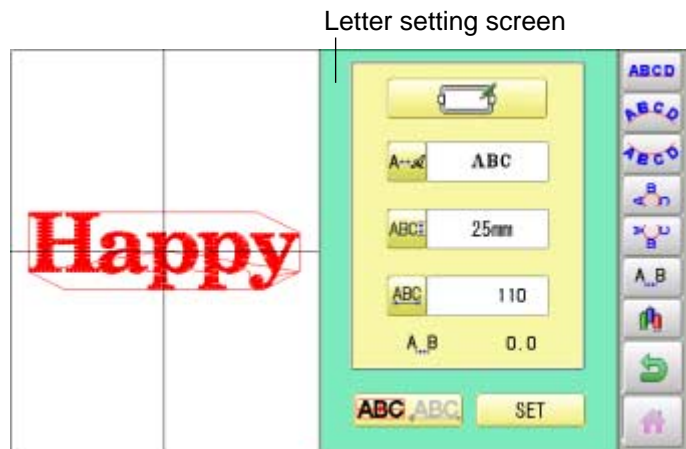

1. Press  on the letter setting screen.




2. Select  on space between letters you would like to change.




3. Enter value.




4. Press .

When you would like to make the same value on all the space at the same time select

 and enter value of the space.

Press .


All the space settings are firmed.

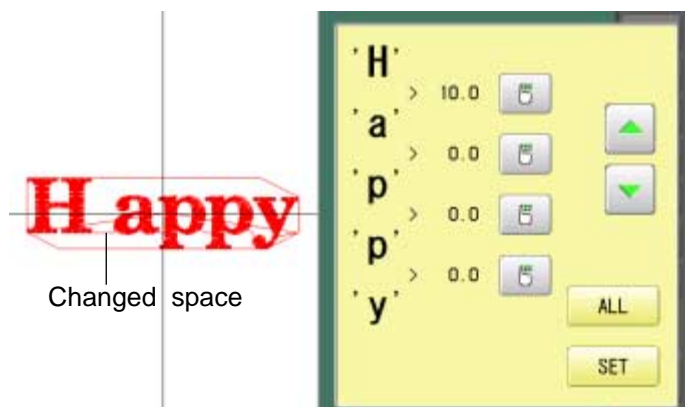





Color change between letters

Color change can be made between letters.

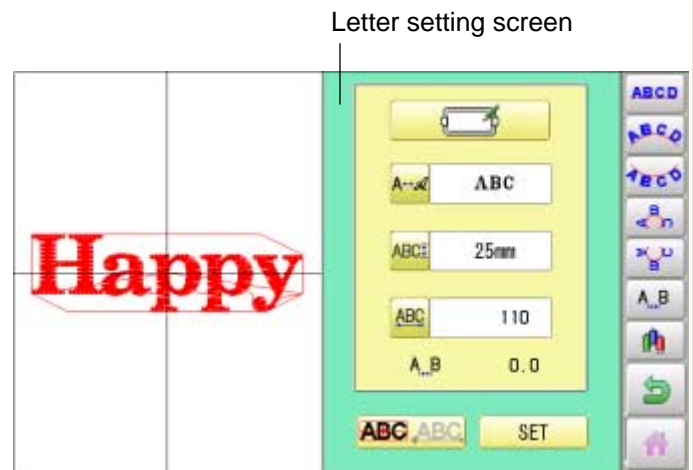

1. Press  on the letter setting screen.

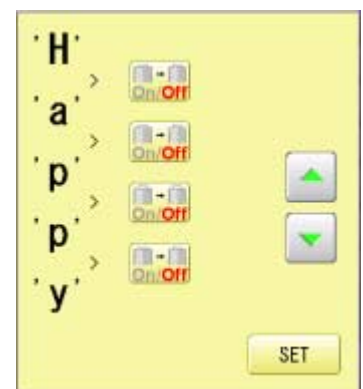

2. Select  on space between letters you would like to change.




Setting of space between letters is ON.




Setting of space between le is OFF.

Setting of space can switched by pressing




Press .

The settings are firmed.

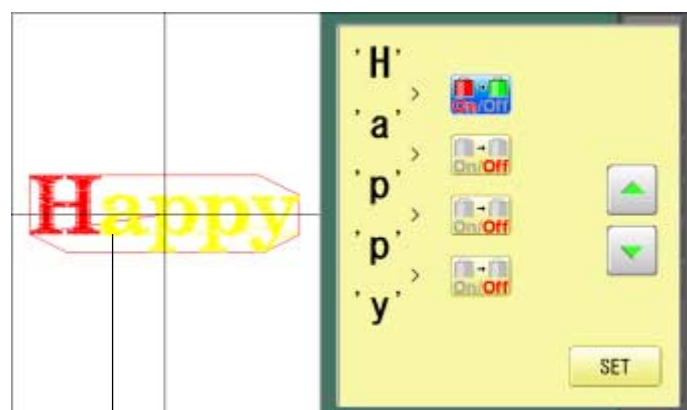

Color change setting is made

- When color change setting is made for the space between letters you can set needle number of the letters of both sides of the space whose color change setting is ON.

 3-9, 5-E

This sets up a succession of patterns that can be embroidered in any desired sequence. The machine will proceed with the *various settings set to each pattern.

- If you embroider a pattern like in Fig.1, you will need to set an offset as a pivot to each pattern in advance. If the offset is set to the first pattern like in Fig. 2, you will need to set a setoff point to the first pattern with the offset of the other pattern as a pivot. P12-8
- If automatic original point return is set, the machine will return to the original point when finished. If automatic original point return is not set, the embroider will finish at the end point of the last pattern.

Setting example

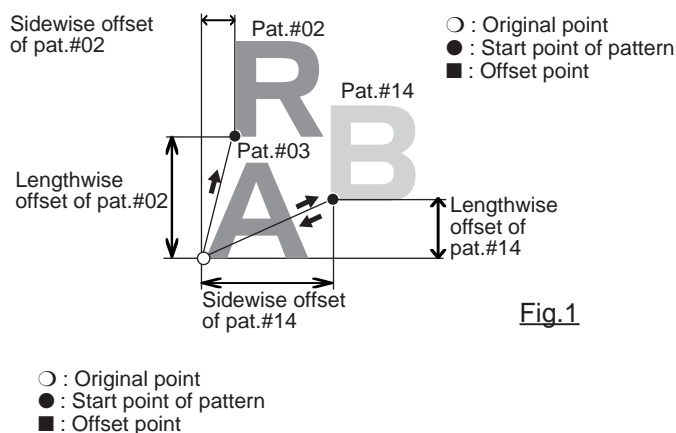


Fig.1

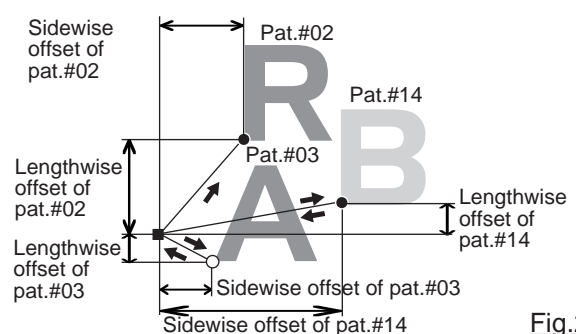


Fig.2

Alter and Execution

This registers Queued patterns in order, and executes.

Needle bar selection and Pattern settings

Needle bar selection and Pattern Settings for patterns selected to QUEUE operation can be applied by the following steps.

Registration of QUEUE setting

Up to 10 QUEUE settings can be registered.

Read QUEUE setting


Read registered QUEUE setting.

Alter and Execution

This allows you to sew any combination of designs in sequence (up to 30 designs), and executes.

Once "QUEUE" is set, the pattern data registered and set in the "QUEUE" is embroidered until pattern data in "READ" is selected.


Therefore, you need to select other pattern data in "READ" to cancel QUEUE.

1. When the machine is stopped, press .




2. Select "QUEUE".


The left side shows the pattern data.

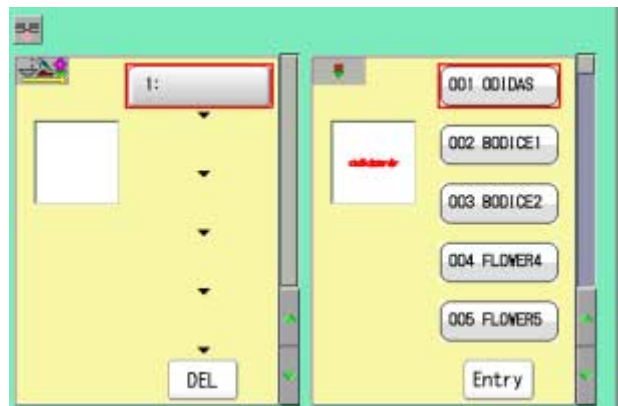

3. Select desired pattern and press .

The selected pattern is shown to the left.


If you need to erase the design, press .

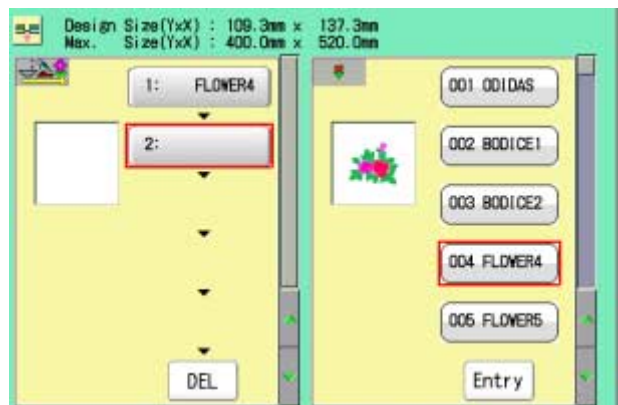

4. Select desired pattern and press .

The selected pattern is shown to the left.

If you select other memory pattern data continuously, repeat step 4.

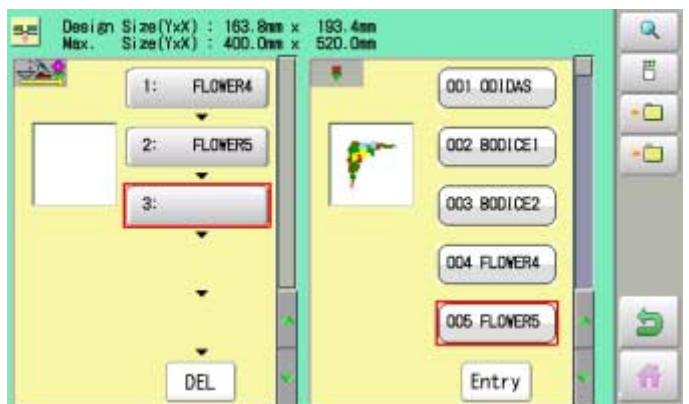



5. Combined design can be seen on Screen.
To show combined design, please press



Illustration of the pattern selected will be displayed.

In case you do not need to check combined design, please go to step no.7.

6. Press

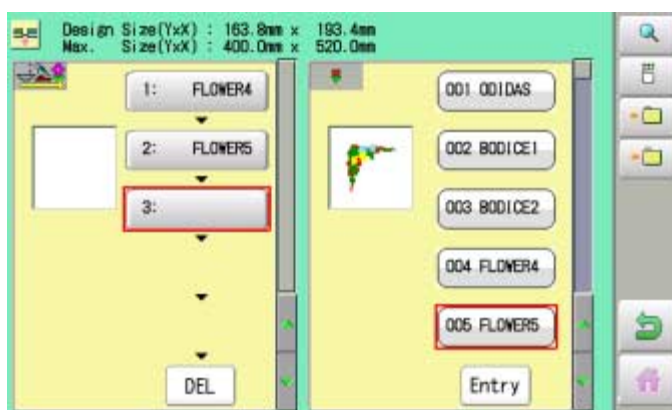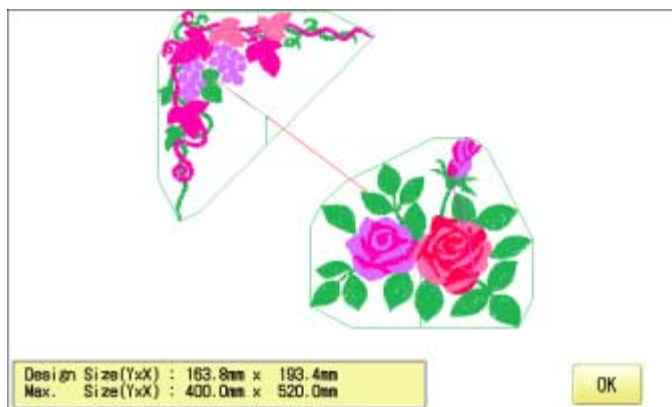


7. Press



--- Check pattern data ---



8. Press

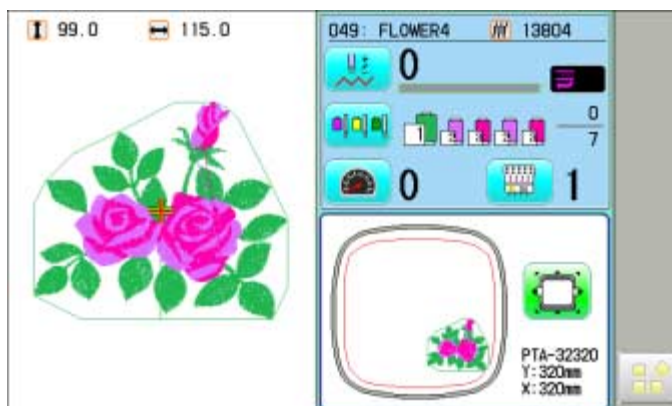

9. Press




The machine will start a Queue embroidery with Queue operation in registered order.
After finishing your last design, the display will show ">>End" and the machine will stop.

>>End

Needle bar selection and Pattern settings


Needle bar selection and Pattern Settings for patterns selected to QUEUE operation can be applied by the following steps.

1. When the machine is stopped, press .




2. Select "QUEUE".

The selected pattern is shown to the left.

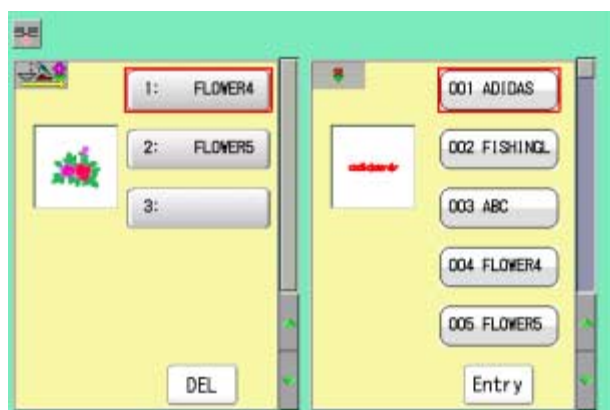

3. Select desired pattern.

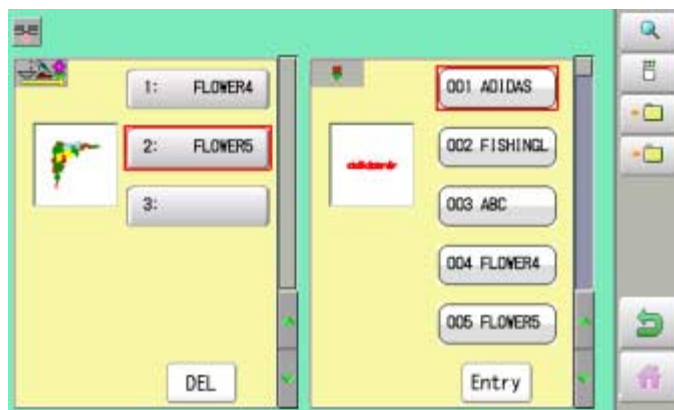



4. Press .



5. Select desired setting.

Please refer pages mentioned below for setting.

"Needle bar selection"  5-E,


"Pattern settings"  12-1

Needle bar selection




Pattern settings



6. After setting, press .

For setting of "Needle Bar Selection"[NEEDLE] and "Pattern Setting"[SETTING] to other design, please do steps no.3-7.

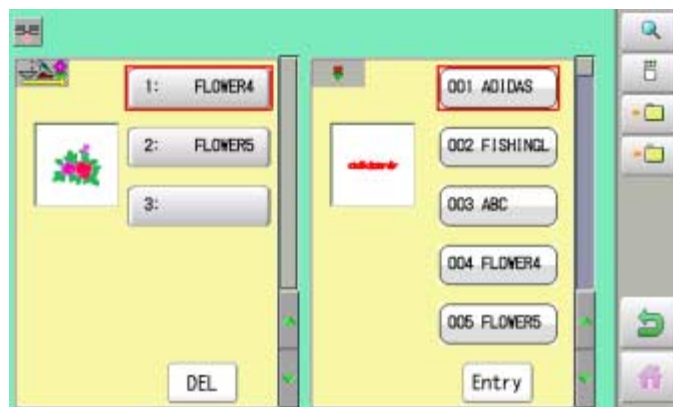

Press  to return to Menu mode.


Press  to return to Drive mode.

Registration of QUEUE setting

Up to 10 QUEUE settings can be registered.

Once you register QUEUE you can select registered QUEUE setting anytime.

1. According to step 1-8 of "Alter", select patterns.

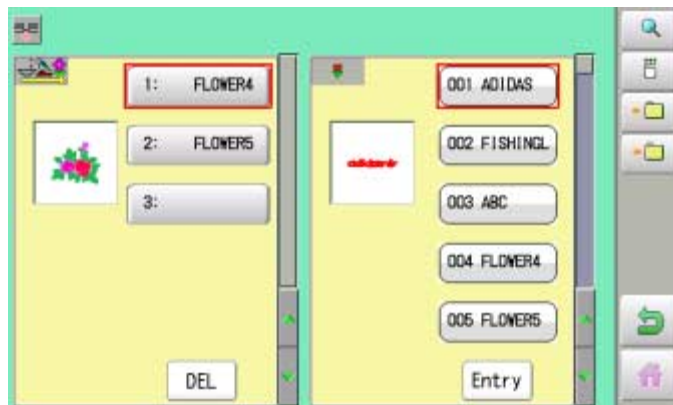


2. Select .




3. Select registration No. and press .


When pattern data is not displayed on the left side on the screen, no pattern data is registered in the holder of the setting No.

 Registration is deleted.




4. Press .

QUEUE setting is registered as setting No.2.

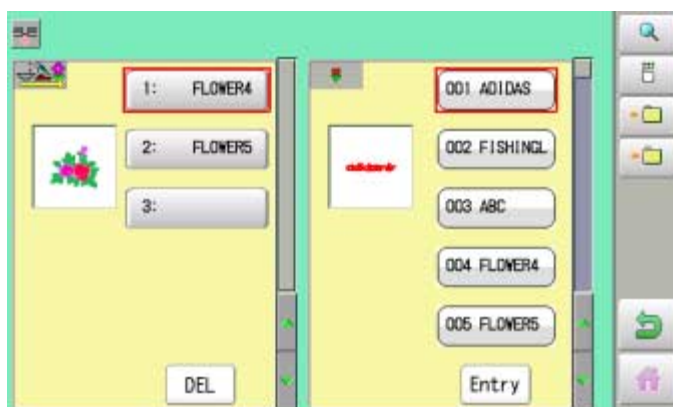


Press  to return to Menu mode.

Press  to return to Drive mode.

■ In case you delete pattern from machine memory, QUEUE setting which has deleted pattern will be deleted too. (Erasing patterns from memory  5-B)


Read QUEUE setting

Read registered QUEUE setting.

1. When the machine is stopped, press .




2. Select "QUEUE".

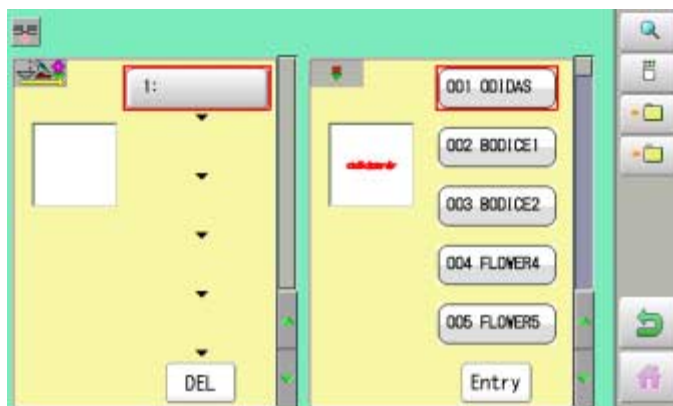


3. Select .



4. Select number and press .

QUEUE setting is selected.

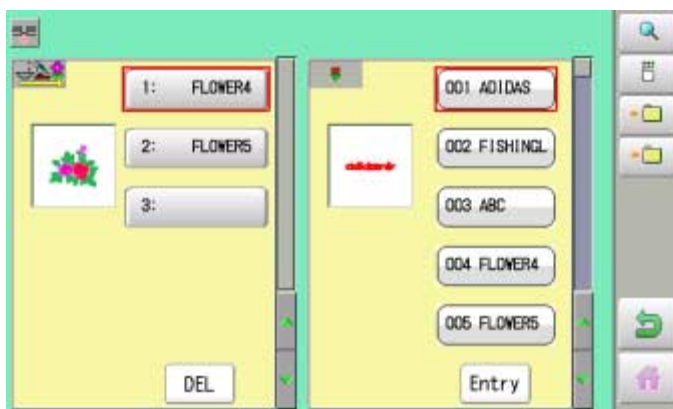

Press  to return to Menu mode.

Press  to return to Drive mode.

By default the machine checks if the pattern fits the embroidery area.

This helps you to check whether or not the selected pattern fits in the desired hoop.

This helps confirm positioning between the embroidery area and the pattern.

If you change the frame position by the frame move key, the display will be changed and you can check the position onscreen.


- ⚠ The "monitor display" checks whether or not the pattern fits the embroidery area of the frame you are going to use before starting the operation.
This is not a safety device that will prevent crashes if pattern size is too large for the frame; it is intended for your reference only when judging the fit of a pattern to a given size frame. After using "monitor display", do not move the frame. If you do so the machine may be damaged due to the needle or pressure foot hitting the frame.
- ⚠ Make sure to perform "Registration number selection" when changing hoop size. If not done, the machine may be damaged from the needle or pressure foot hitting the frame.

●Frame selection

Selecting a frame.

The embroidery area for each registered frame is set to the inside of the frame edge to allow for pressure foot clearance. (Fig. 1)

This allows confirmation of positioning between the embroidery area and the pattern.

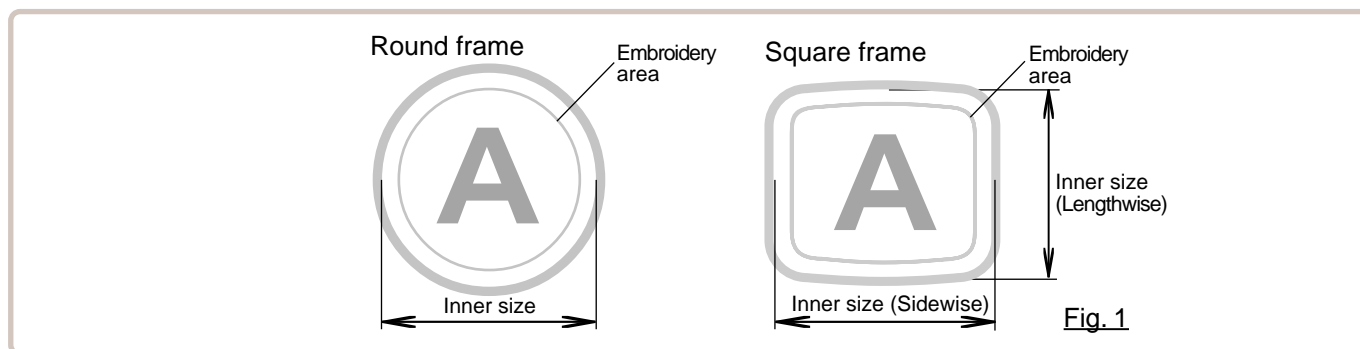

1. When the machine is stopped, press



2. Select "FRAME".


- Tubular round frame
- Tubular square frame
- Cap and One-point frame
- Border frame (for HCD2, HCR2)
- Sock frame
- User-defined frame
- Non registered P 20-L



3. Select type of frame.



Change the type of frame.

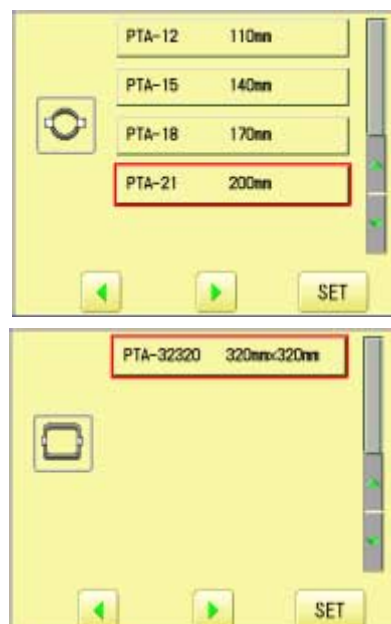


FRAME CONFIRMATION

20-3


4. Select desired size of frame and press

SET.

The embroidery area appear in red.

5. Confirm that  (Top) appears in the display and go to step 7.
If this does not appear, go to step 6.


6. Press  "Top".




Upper right indication of  will be shown.

7. By  position of design can be moved.

8. Press .

The display returns to Drive mode.


Start sewing by pressing .

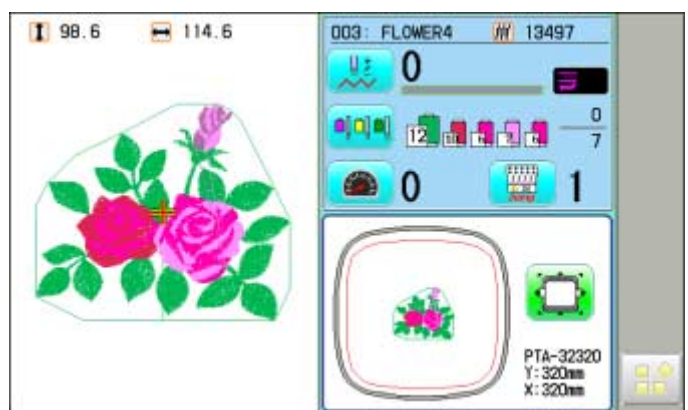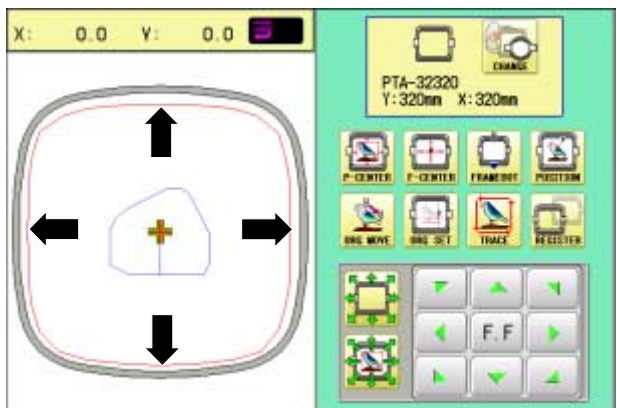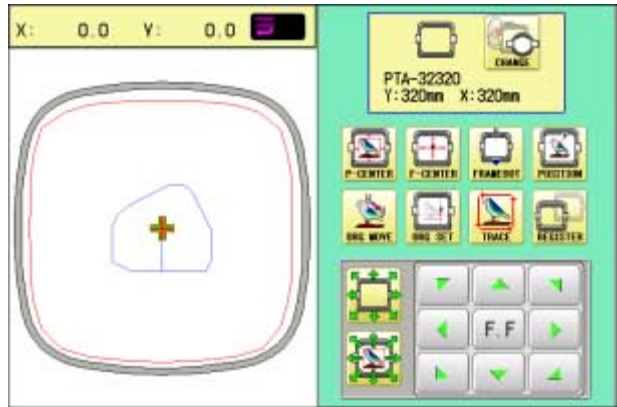

●Adjusted for embroidery area

Cap frame

The embroidery area of HAPPY semi-wide and wide cap frames is saved in the machine. The Y axis of the embroidery area can be adjusted for a variety of caps. (Fig. 1)

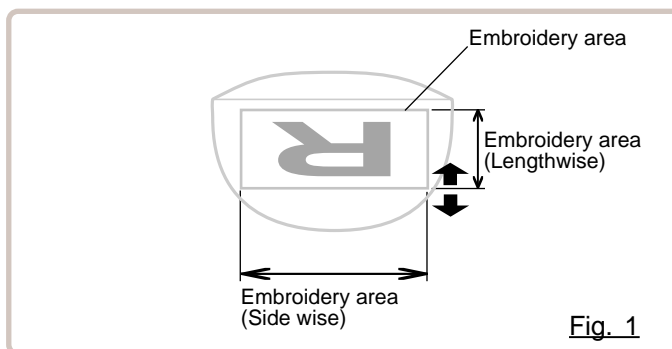


1. When the machine is stopped, press



2. Select "FRAME".




3. Select  "Cap and One-point frame".




4. Select desired size of frame and press




The embroidery area appear in red.

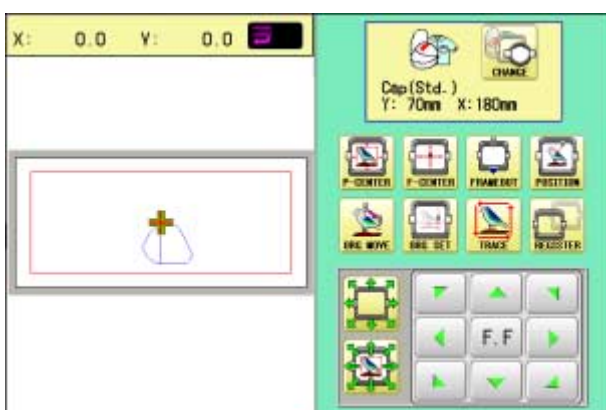

5. Press

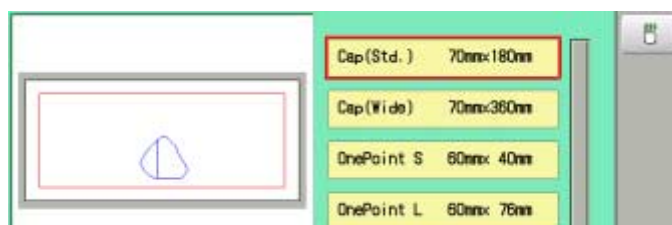

6. Press .



7. Press .




8. Select the number .

Enter the width of the cap.

Standard 40 ~ 70mm
Width 40 ~ 95mm




9. Press .





10. Press .

The setting is fixed.

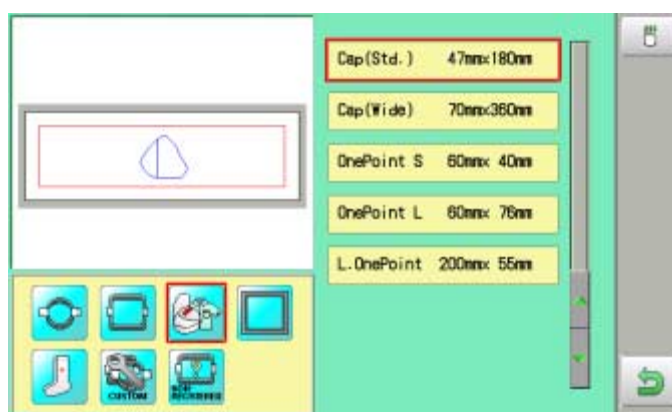

11. Press 

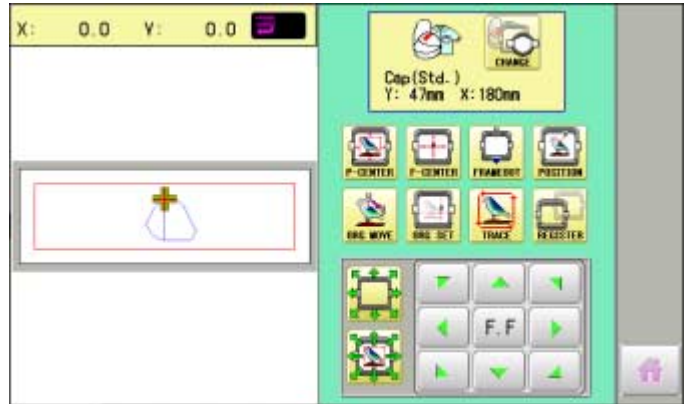


Press  to return to Drive mode.


User-defined frames (1 ~ 5)

The embroidery area of each registered frame is set to the inside of the frame edge for pressure foot clearance. (Fig. 1, 2)

■ The embroidery area of each registered frame is set to the inside of the frame edge for pressure foot clearance. (Fig. 1, 2)

When you use square frame as shown in fig.3, pressure foot may hit the corner of frame.
In this case you need to create frame as special shape under the frame No.6 - 20.

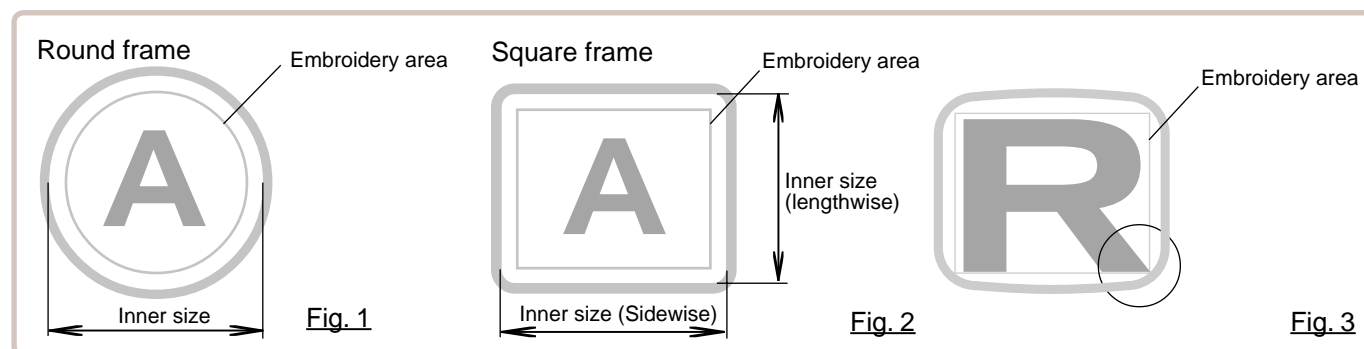


1. When the machine is stopped, press .



2. Select "FRAME".




3. Select  "User-defined frames".




4. Select desired size of frame and press




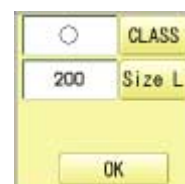
The embroidery area appear in red.

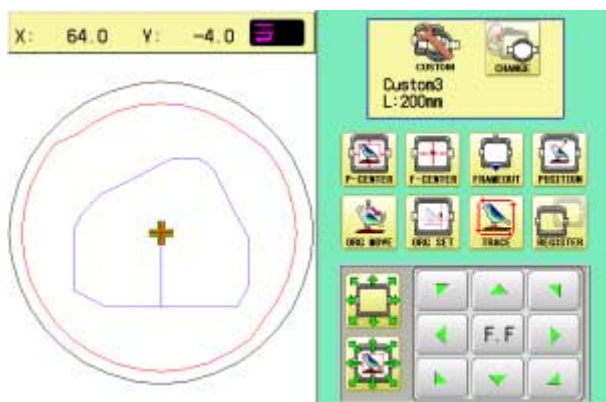

5. Press .

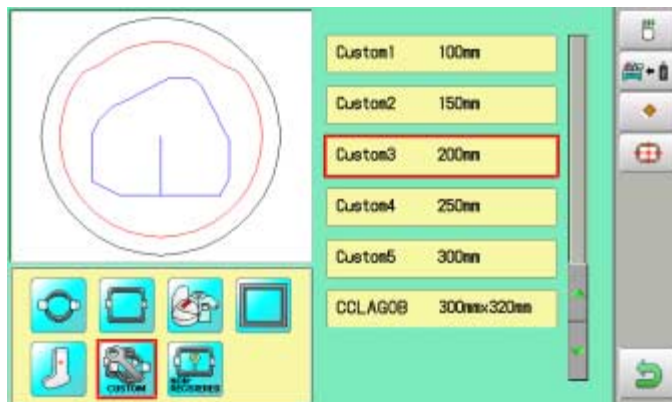


6. Press .




7. Press **CLASS** to select the hoop (Class).

- ☐ : Round frame
- ☐ : Square frame

Case for selected round frame

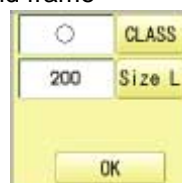

Case for selected square frame

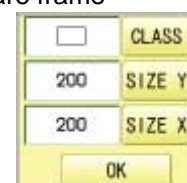

8. Press **Size L**.

Select **SIZE Y** or **SIZE X** you wish to change square frame size.



9. Select the number .

Input number for size of embroidery area.




10. Press **SET**.




12. Press .

The date is fixed.

Case for selected round frame

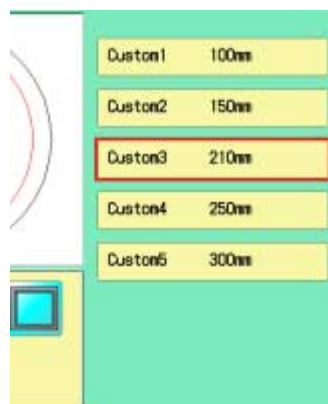


Case for selected square frame

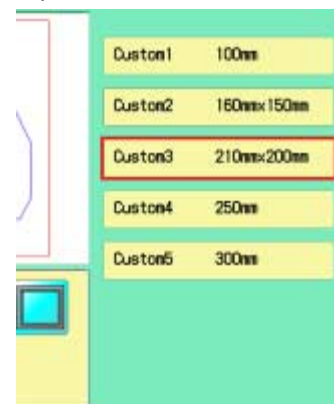

13. Press .



Press  to return to Drive mode.


●User-defined frames (6 ~ 20)

You need to prepare for the data which entered the shape of the frame and entry the entered data.

You can entry the data up to 15 different size of custom frames.


You need to prepare custom frame size data for entry the size to your machine.  20-B

The embroidery area for each registered frame is set to the inside of the frame edge to allow for pressure foot clearance. (Fig. 1)

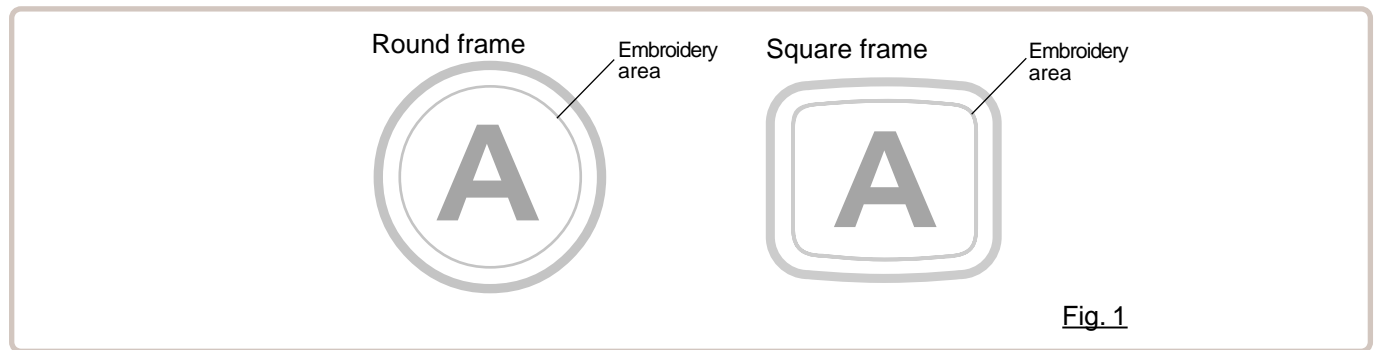

How to make frame size data of your User-defined frames (6 ~ 20)

We need to use text edit software of PC like "WordPad" and make frame size data with following constitution, then entry the data to your machine.

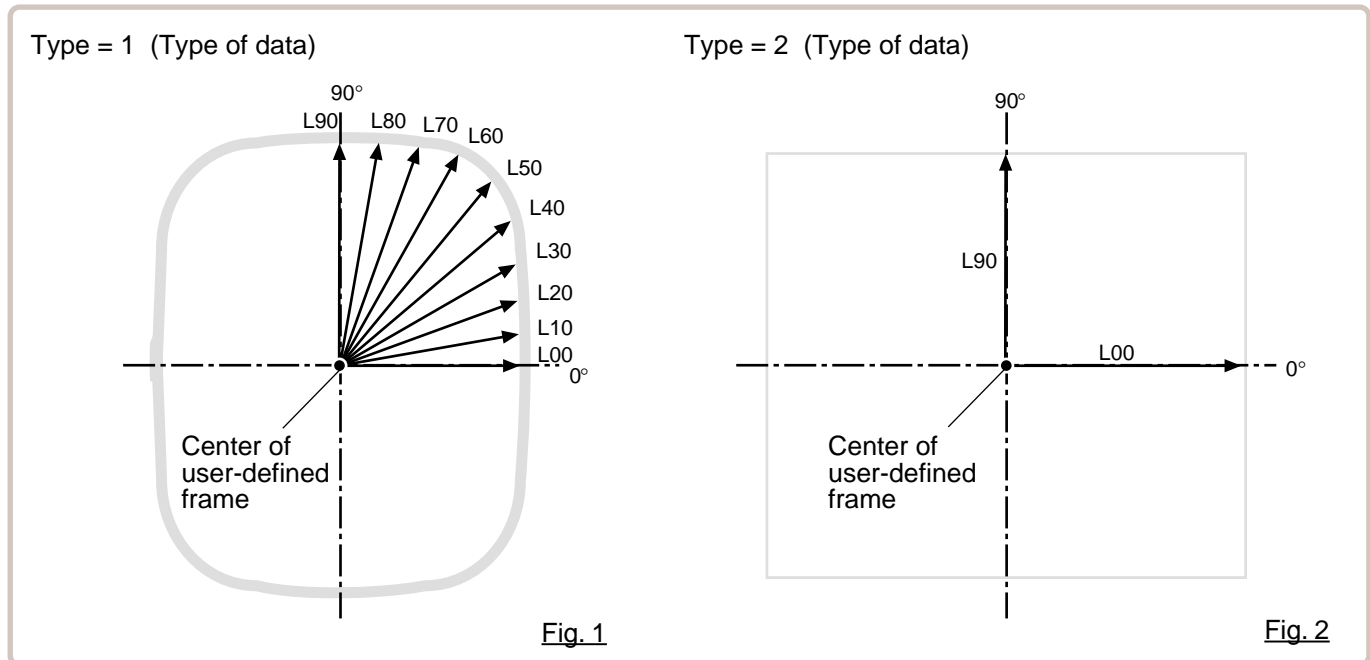

Frame data constitution

Type = [Type of data]

Name = "[Name of frame]"

Form = [L00],[L10],[L20],[L30],[L40],[L50],[L60],[L70],[L80],[L90] (Frame shape)

Type : Select type of data by following number.

1 : Frame size 2 : Possible embroidery size

Note: If select "1", machine will memory reduced size for Presser foot diameter automatically.

If select "2", machine will memory exactly same size as can embroider it on.

Name : Naming the your User-custom frame. Pick up to 10 letters up with a "mark.

Form : Refer the above figure. Please fill it out every 10 degrees of dimensions to the inside of the frame in a frame heartily. (20 to 500mm)

Fill it out length from point from No. L00 till L90 total 10 points size using ", " between the each size data.

If your frame shape is Round, the every 10 points length frame size data should be same.

If you select Type (Type of data) "2", please put length data of L00 and L90 only.

END : Please fill out the line of the last of data. Please make entry of "END" by all means.

Please use half width character for the length data.


Please cut off the decimal of the length.

Example: 102.3mm -> 102

When you save the frame size data, please save as text document form and file name should be less than 8 characters.

Extension should be ".TXT"

Example: ROUND250.TXT


Please save the frame size data to machine usable memory media and read the data by embroidery machine.  20-D

Example of making the frame size data

Sample for each teaching method.


Ex. Round frame

Type = 1
Name = "Round"
Form = 125,125,125,125,125,125,125,125,125,125
END

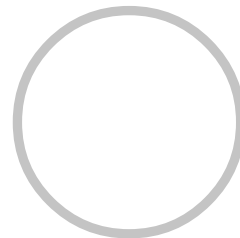


Ex. Square frame

Type = 1
Name = "PS240"
Form = 120,122,126,130,128,120,106,100,96,94
END

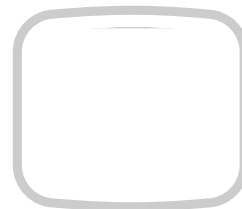

Ex. Possible embroidery size


Type = 2
Name = "T-SC-01"
Form = 90,60
END



FRAME CONFIRMATION

20-D

Reading frame data

1. When the machine is stopped, press .




2. Select "FRAME".




3. Select  "User-defined frames".





4. Press .


You can choose any frame options.

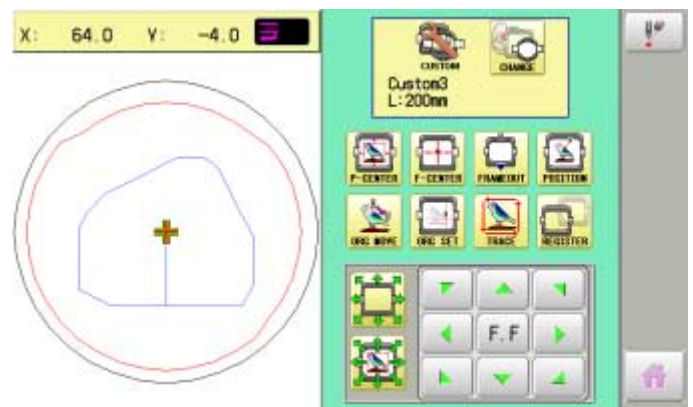

5. Press .

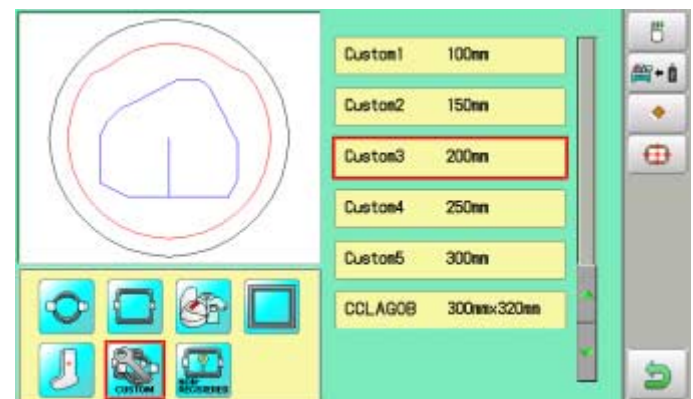


6. Press .

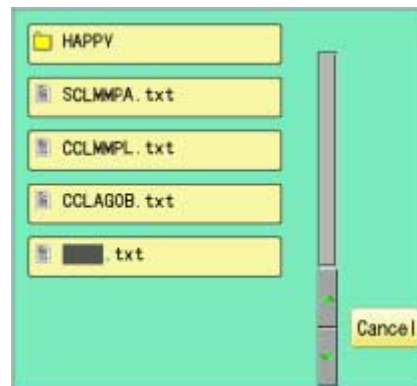

7. Select the frame data "CCLAGOB.txt".

The frame data has been read.

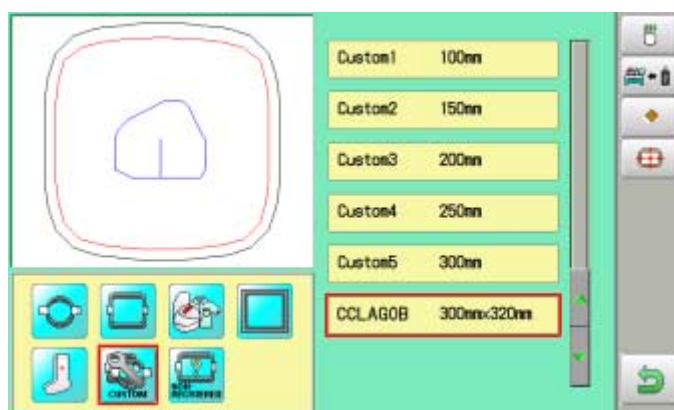


8. Press .



Press  to return to Drive mode.

How to delete the resisted user-defined frames (6 ~ 20)


Delete resisted User-defined frame from memory.

1. When the machine is stopped, press .




2. Select "FRAME".




3. Select  "User-defined frames".




4. Press .


You can choose any frame options.

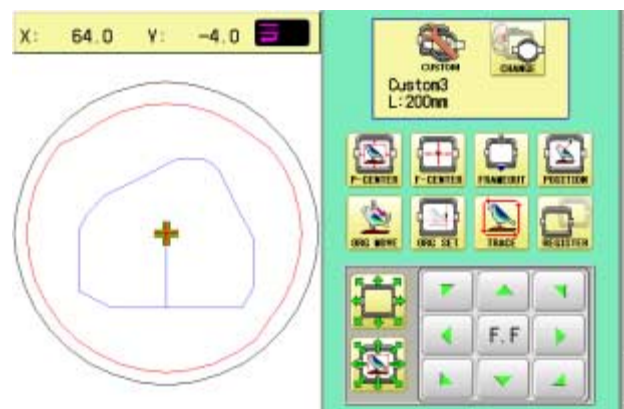

5. Press .

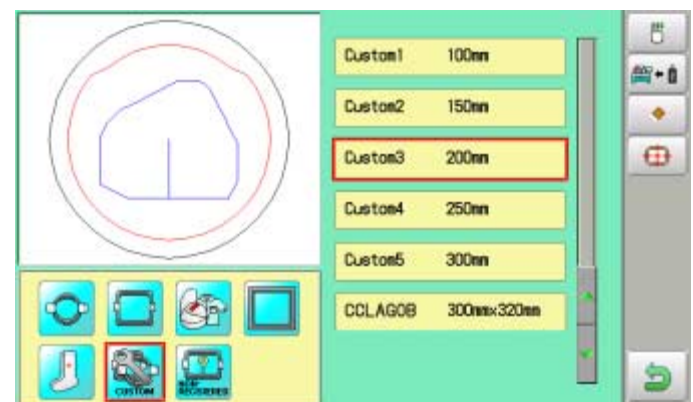


6. Select desired User-defined frames.

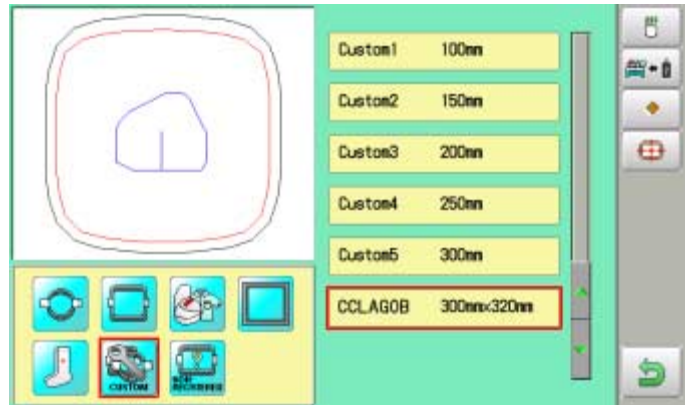


7. Press .

The user-defined frames will be deleted.

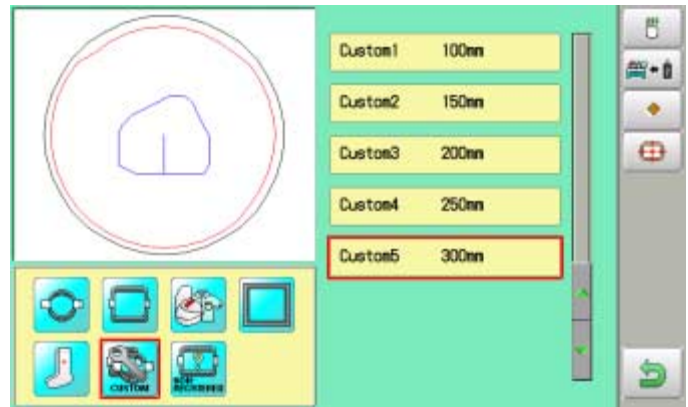

8. Press .




Press  to return to Drive mode.

●How to change center point of frame (1 ~ 5, 6 ~ 20)

You can change memorized frame center point.


When you set your frame and use machine function of "Frame move" and "Center" (P 3-9c), If your frame is not center, please practice following steps for center setting again.

1. When the machine is stopped, press .



2. Select "FRAME".




3. Select  "User-defined frames".




4. Press .


You can choose any frame options.

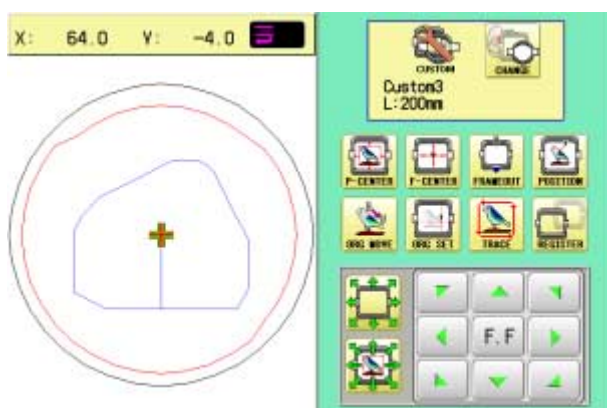


5. Press .

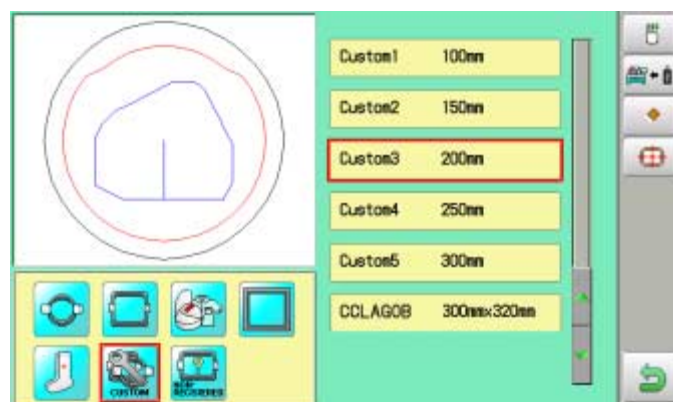


6. Select desired User-defined frames.

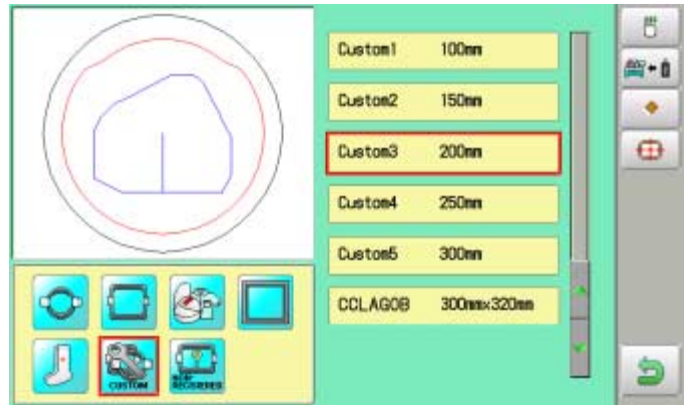


7. Press .





8. Press .

CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.

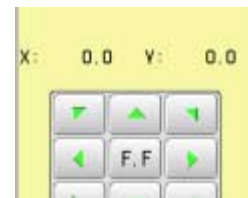


9. Move embroidery frame to frame center

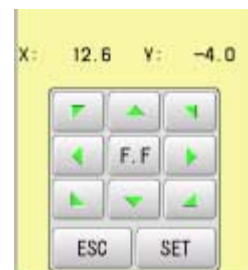


10. Press .

Memorized frame center point coordinate to the machine.

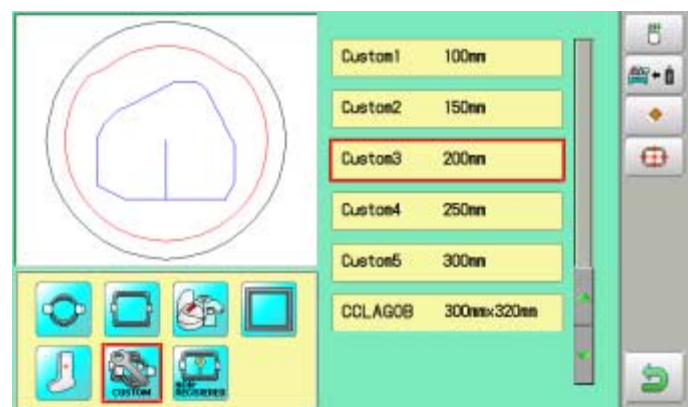

11. Press .



Press  to return to Drive mode.

●Non registered

In case Non Registered Frame is selected, carriage does not have movement for creating the coordinates of frame position at the time of turning machine on.

Please select Non Registered Frame, when you need use special frame which can hit pressure foot or other machine parts by movement of carriage for creating the coordinates of frame position.


The following functions is canceled by selecting Non Registered Frame;

- * Frame confirmation
- * Restore the position at the time of power failure [P] 9-2
- * Locate [P] 17-1
- * Autostop function when movement exceeds the carriage limit.



Except using special shape frame, please do not select Non Registered Frame.

In case you have operation mistake, needle and/or pressure foot may hit frame and machine and/or frame can be damaged.

1. When the machine is stopped, press .



2. Select "FRAME".



3. Select  "Non registered".



4. Press .


Indication of frame type disappears.
It means that "Non Registered" is selected.

- When you need to change from Non Registered frame to other type of frame, please power machine off and start again. Without re-starting machine, machine will move incorrectly.




Frame indication disappears

You can place frequently used key icons freely on the right side of Drive mode screen.

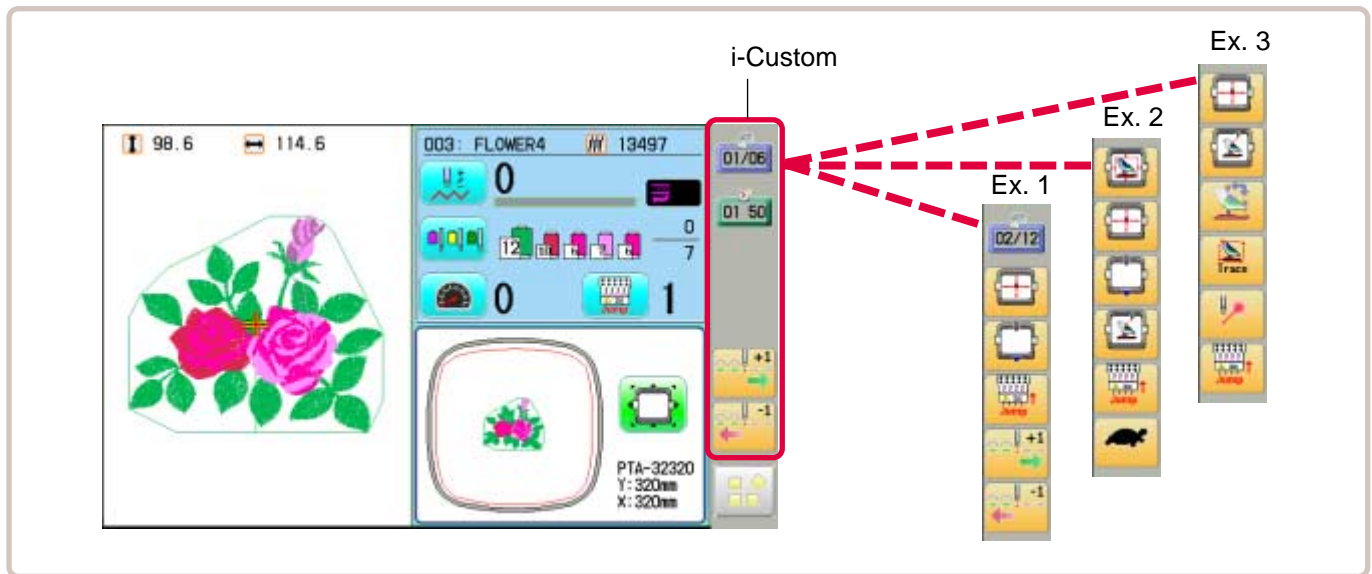

Display icons to be placed



Calendar

Current year, month date is displayed.



Clock

Current time is displayed.



LAN connection

This indicates the machine connects with LAN.



Wireless LAN (Option)

This indicates the machine recognizes wireless LAN device.

Keys icons to be placed



Stitch number forward

Move the frame forward or backward by the one stitch.



Design centering

Move design to the center of frame.



Center

Moves the embroidery frame to the center automatically.



Frame out [P 3-9c](#)

Move frame to the front position which was set

before.



Original point return [P 3-9c](#)

This returns the frame to *pattern origin point.



Origin registration

Register the current frame position as origin.



Trace

When pressed while at the beginning of design, the embroidery frame moves following the outer edge of the design.



Register

Register will restore the position of the frame to the last point before a power failure even if the point of origin or the pattern itself were changed.



Pointer (Option)

Turn on and off the laser pointer.



Jump [P 3-9b](#)

Turn on and off the Jump.




Low speed operation [P 3-9b](#)


Turn on and off the Low speed operation.



Position alignment by defining 2 points [P 15-1](#)

Embroidery position is aligned by defining 2 points.

1. When the machine is stopped, press .

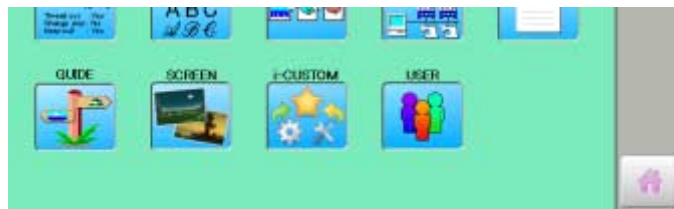

2. Select "i-CUSTOM".

i-CUSTOM currently selected



3. Select a desired custom icon.



4. Select display or key icon(s) from the gray frame.

When changing to other display or key icon(s),.

When you select the desired display or key, repeat steps 3 and 4 .




Selected i-CUSTOM is deleted.




Setting is returned to the default.



The desired key change has been made.


5. Press .

The setting is fixed and to return to Menu mode.

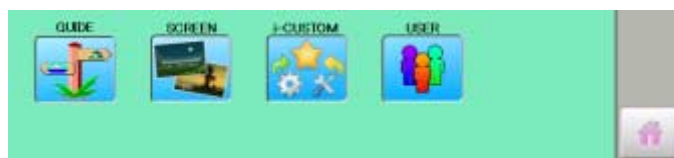

6. Press .

Custom icon change is made.

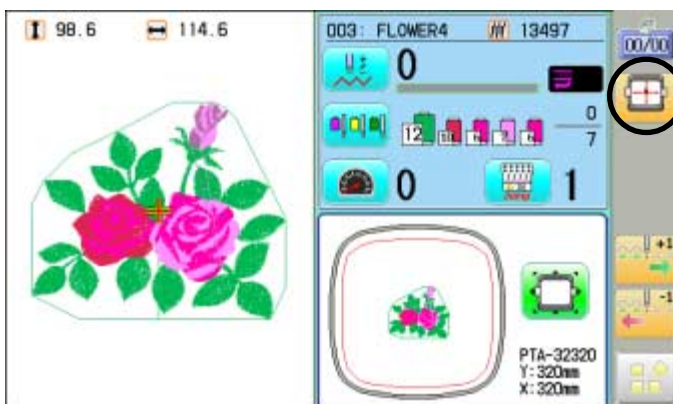


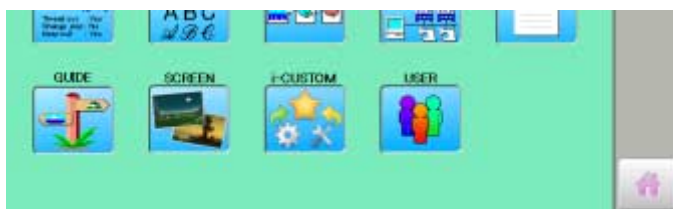
When machine operators have been registered as user, you can manage the right to operate the embroidery machine and you can collect the production data of each user.

●Registration of administrator

Registration and change of administrator's name and password.

Only registered administrator has the right to access the user management function.

1. When the machine is stopped, press .





2. Select "USER".



3. Press .

The display when password is not set.

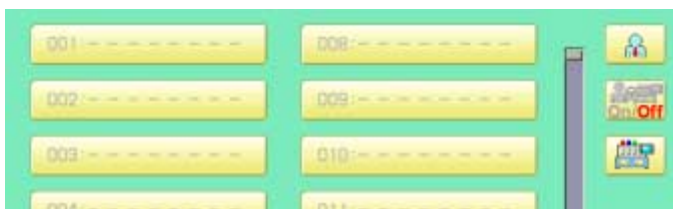

When administrator's password is set, enter password and press .


The display when password is set.




Cancelled.



Numbers are deleted.

4. Press .




5. Press , in case you do not need to change the administrator's name.

When you prefer to change the administrator's name, move cursor with



then, enter new name from the

keyboard and press .



The maximum number of characters is 16 letters.




Uppercase and lowercase letter are switched.



All the letters are deleted.



Selected number is deleted.



Cancelled.

6. Enter arbitrary 6 digits number as password.

Enter "000000" if you do not want to use password.

Please keep your password safe.



Cancelled.




Numbers are deleted.

CAUTION


If you lost the password, you may not be able to access the User management function.


Please contact your dealer, if you have forgotten or lost your password.




7. Press .


Password is fixed.

8. Push  to activate the User management function.

The icon will be changed to .

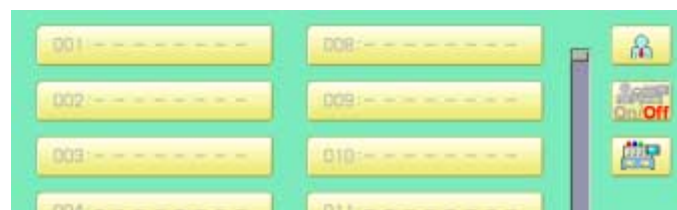

Proceed to step 9, if you do not want to use the User management function.

9. Press , when you want to change the machine name.




10. Enter new [Machine name] and press




Please note that the [Machine name] will be recorded as an item of the Production data. The maximum number of characters is 15 letters.

If the Machine name is not to be changed, proceed to Step 11.

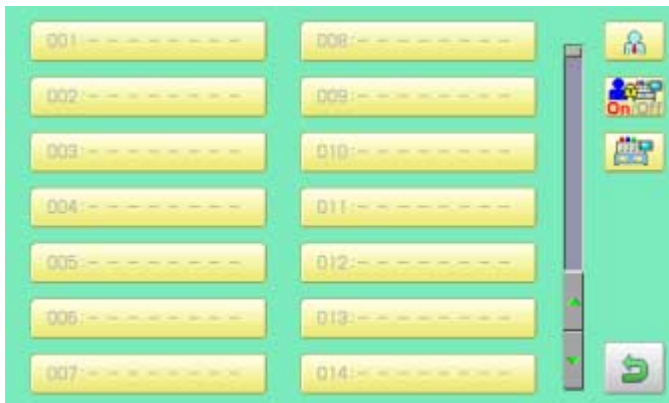


11. Press .

The setting is fixed and to return to Menu mode.



●Registration of user


Registration and change of user name and password.
The maximum 250 user can be registered.


1. When the machine is stopped, press .




2. Select "USER".




3. Press .

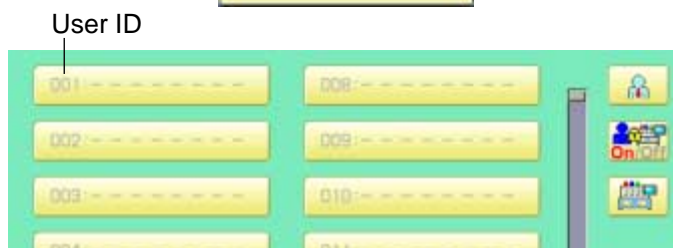

4. Select desired ID number.

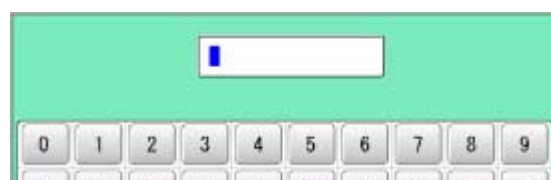


5. Enter user name from key board then, press .

The maximum number of characters is 16 letters.



Cursor are moved.



Uppercase and lowercase letter are switched.



All the letters are deleted.



Selected number is deleted.



Cancelled.



- Enter arbitrary 6 digits number as password.

Enter "000000" if you do not want to use password.



Cancelled.




Numbers are deleted.




- Press .

The setting is fixed.

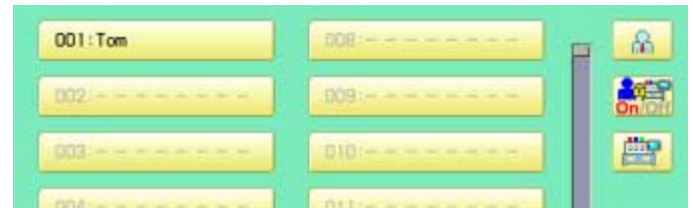


- To continue registering other user, repeat the procedure from step 4 to 7.

Proceed to step 9, if you do not want to register user name.

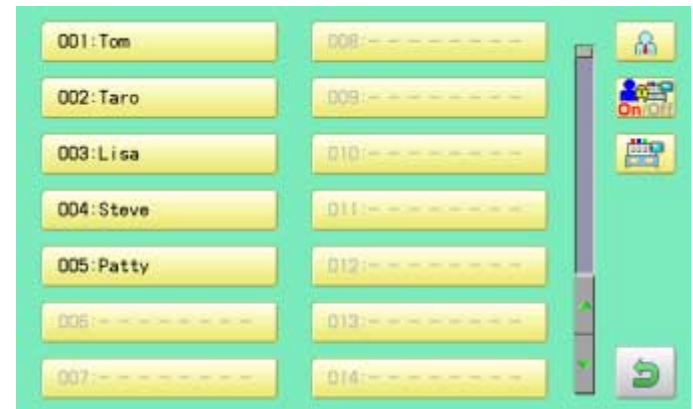


- Press .


The setting is fixed and to return to Menu mode.

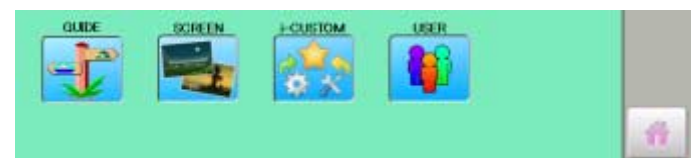


● Selection of user (Login)

You can select user name and login, when User management function has been activated beforehand.

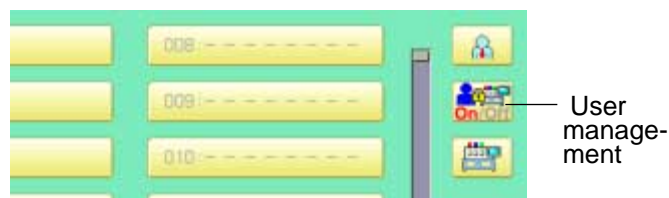

1. When the machine is stopped, press .

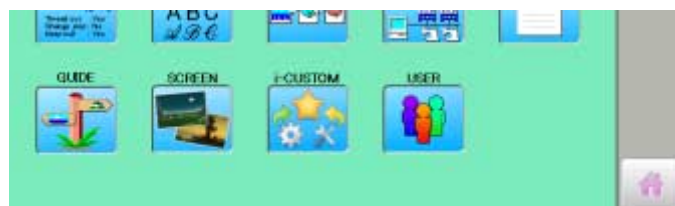

2. Select "USER".



3. Press .




4. Select user or administrator


If password has not been set, the screen will be changed as step 6.

5. Enter the password.




6. Press .

To return to Menu mode.

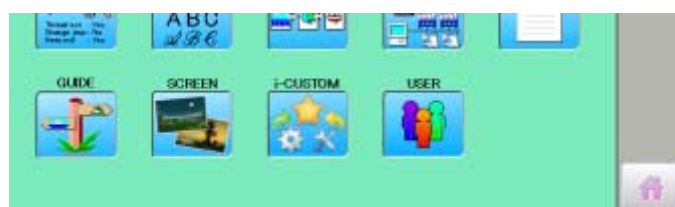

● Selection of user (Login) at power ON

The user selection menu will be displayed, when User management function has been activated beforehand.

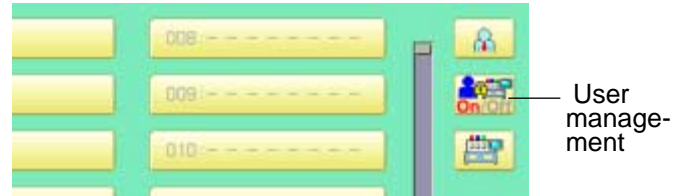

1. Turn on the power switch.



2. Press **Next**.


After the carriage and frame move slightly, the embroidery frame will return to the previous position automatically.



CAUTION: To prevent accidents.
The embroidery frame and carriage will move.
Please keep hands clear for your safety.

User

Administrator

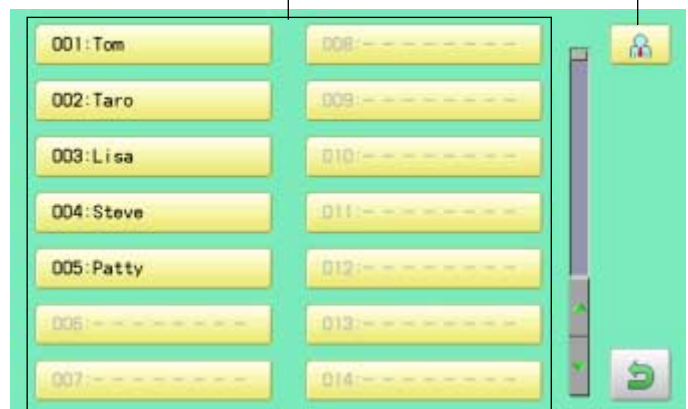

3. Select user or administrator


If password has not been set, the screen will be changed as step 5.

4. Enter the password.




5. Press **SET**.

Machine becomes ready for operation.

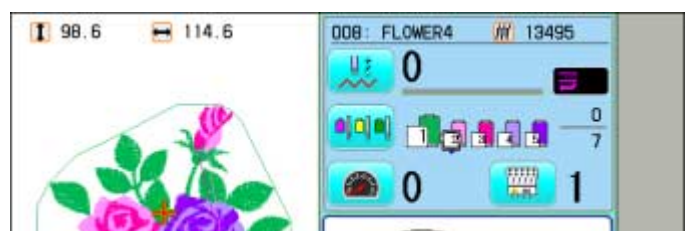

● Create network

Set this menu when you use Network cable to connect PC and machine(s).
Also use separate network software instruction together with this setup.


1. When the machine is stopped, press .







2. Press .

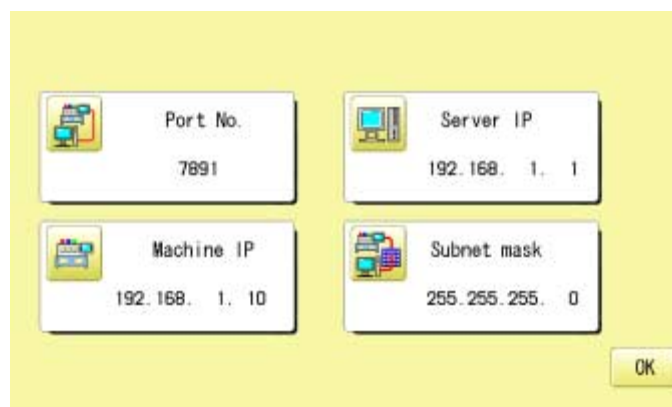

3. Press .




4. Select desired item.

Press right /left of   to select the setting point, and press up/down of   to select the number.



5. Press .

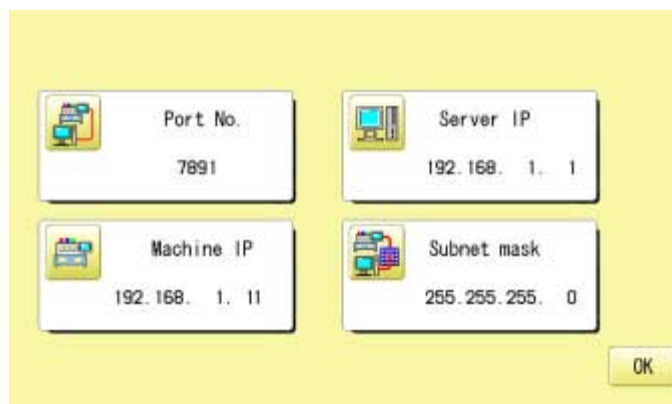

6. Press .



7. Press .



8. Press .

The machine will be rebooted.
The setting is fixed.



●Version information and software update

Software version installed in the machine is displayed.


Software can be updated to the latest version.

Preparation for update file

Contact your distributor to obtain the latest update file.

Use the appropriate update file for your machine.

Put update file in the root directory of USB memory.

1. When the machine is stopped, press  .



2. Select "OTHER".



3. Press .





4. Confirm version number.

Press  to return to MENU screen.

The display returns to MENU.

When updating, insert USB memory including update file into the controller and press




5. Press .

Update is starts.
Do not turn on power during updating.

```
[ Install_HAPPY_***.*** ]    version *.*.*
In preparation . . .
Starting UpDate
```



The machine will reboot once update is complete.  3-5




6. Press .

The display will return to Drive mode.



●Language

Change the language displayed on control box.

1. When the machine is stopped, press .



2. Select "OTHER".




3. Press .



4. Select the Language by  .



5. Press .

The language has been changed, and the display returns to MENU.



Press  to return to Drive mode.

●Calibrate

Calibration for the touch panel LCD.

Touch panel is already adjusted and you do not need adjustment of the panel.

If the screen does not recognize correct position of each icon and you cannot operate, please adjust the screen as follows:


1. When the machine is stopped, press



2. Select "OTHER".




3. Press



4. Press




Prepare built-in stylus.



5. Press the center of "+" displayed in screen in numerical order by a stylus.

"+" will appear in numerical order.

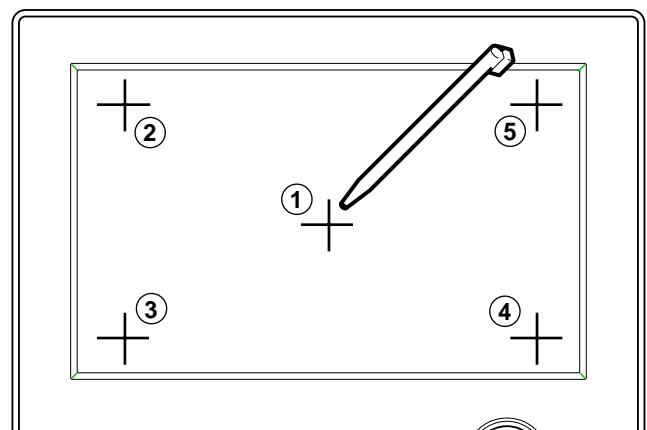

6. Press the 5th "+" by stylus.


The screen shows "New calibration settings have been measure ..." at small letters.



7. Press the screen with a finger (any location is okay).

After this operation, you can press the screen with a finger.
Adjustment is complete, and the screen returns to Menu mode.



Press  to return to Drive mode.

Indicating operation record of machine.


●Production data

Last 10 records of following production data will be displayed.

Time of power on/off, and number of operated stitches will be recorded in machine memory.


If the machine is switched on without embroidery operation, it will not be recorded in memory.


[Power ON] he time when machine main switch is turned on
 [Power OFF] The time when machine main switch is turned off
 [Embroidery Stitches] The number of embroidered stiches while main switch is turned on

1. When the machine is stopped, press .



2. Select "REPORT".

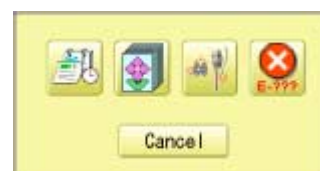

3. Select .

Time of power on
month/day/year/
hour:minute:second

Time of power off
(1st raw is time of
reporting.)

Number
of stitches

No.	Power ON - Power OFF	Stitches
1	12/19/2013/14:08:24 - 12/19/2013/14:13:02	0
2	12/11/2013/11:29:46 - 12/11/2013/14:09:34	62159
3	12/09/2013/11:45:32 - 12/09/2013/12:00:00	163
4	11/28/2013/12:49:33 - 11/28/2013/15:48:10	20702
5	11/28/2013/09:09:19 - 11/28/2013/11:59:10	35253
6	11/26/2013/10:45:54 - 11/26/2013/20:05:10	142106
7	11/15/2013/09:49:32 - 11/15/2013/19:06:33	3253
8	11/15/2013/09:27:10 - 11/15/2013/09:48:54	22
9	11/13/2013/12:53:37 - 11/13/2013/20:36:38	26908
10	11/12/2013/09:34:59 - 11/12/2013/09:35:32	160
	07/11/2013/10:30:19 - 12/19/2013/14:13:02	634560

4. In order to exit the mode, proceed to the step 5.

If you want to delete the record, press



Time of deleting
record or power on

Current time
(time of viewing
the report)


Number of
stitches after
deleting record

5. Press .


The display returns to MENU.

Press  to return to Drive mode.



 Save the report

You can save the displayed records in CSV format.

Insert the USB memory into the machine and press  button then, new folder named "Production Report" will be made and the report data will be saved as file name "Stitch Report_*****".


●Detailed production data

You can view following detailed production data for each user. (Max 4,096 data)

ITEMS

[No.]	Number	: Sequence number of the records
[User] *1	User ID	: The ID number of embroidery machine operator
	User Name	: The name of embroidery machine operator
[Design]	Design ID	: The ID number of embroidery design
	Design Name	: The name of embroidery design
[Stitche]	Stitches	: The number of stitches of embroidery design
[Pro.]	Output	: Quantities of production
[TTL.]	Total time (min.)	: The total required time (minutes) to complete the embroidery design
[RUN]	Running time (min.)	: The machine running time to embroider the design
[PAUSE]	Pause time (min.)	: The pause time in the middle of embroidery
[Run %]	Operating rate (%)	: Running time / Total time
[Pro./H]	Productivity	: Quantity of the production per hour
[BRK.]	Number of thread breakage	: The number of thread breakage within one production cycle

*1 :When machine main switch is operated (On/Off), "Power off <-> on" will be displayed in "User Name" section.

1. When the machine is stopped, press .



2. Select "REPORT".



3. Select .

No.	User	Design	Stitch	Pro.	TTL.	RUN	PAUSE	PROD.	Pro./H	BRK.
1	001-HAPPY User-1	001-0001	805	1	2	2	0	100%	21	0
2	001-HAPPY User-1	002-0002	817	1	2	2	0	100%	24	0
3	001-HAPPY User-1	003-0003	738	1	2	2	0	100%	22	0
4	Power OFF <-> On		0	0	0	0	1	0%	0	0
5	Power OFF <-> On		0	0	0	0	1	0%	0	0
6	001-HAPPY User-1	004-0004	711	1	2	2	0	100%	26	0
7	001-HAPPY User-1	005-0005	1279	1	3	3	0	100%	17	0
8	002-HAPPY User-2	006-0006	911	1	2	2	0	100%	24	0
9	002-HAPPY User-2	007-0007	1221	1	3	3	0	100%	19	0
10	002-HAPPY User-2	008-0008	939	1	2	2	0	100%	22	0
11	002-HAPPY User-2	009-0009	1206	1	3	3	0	100%	18	0
12	003-HAPPY User-3	010-0010	1034	1	2	2	0	100%	20	0
13	Power OFF <-> On		0	0	0	0	1	0%	0	0
14	003-HAPPY User-3	012-0012	1206	1	3	3	0	100%	18	0
15	003-HAPPY User-3	015-0015	1247	1	12	3	10	19%	4	0
16	004-HAPPY User-4	022-0022	948	1	3	3	0	100%	18	0
17	Power OFF <-> On		0	0	0	0	1	0%	0	0
18	005-HAPPY User-5	031-0031	1532	1	3	3	0	100%	15	0
19	005-HAPPY User-5	032-0032	1446	1	3	3	0	100%	16	0
20	005-HAPPY User-5	033-0033	1104	1	3	3	0	100%	19	0

4. In order to exit the mode, proceed to the step 5.

If you want to delete the record, press



4. Press .

The display returns to MENU.


Press  to return to Drive mode.





Save the report

You can save the displayed records in CSV format.

Insert the USB memory into the machine and press  button then, new folder named "Production Report" will be made and the following files will be saved.

"ProductionReport_Standard_*****" : This file contains the output data in each piece of embroidery production.

"ProductionReport_Arranged_*****" : This file contains the output data which is totalized in user and design.

ITEMS

[No.]	: Sequence number of the records
[User ID]	: The ID number of embroidery machine operator
[User Name]*1	: The name of embroidery machine operator
[Machine Name] *2	: The embroidery machine name of embroidery design
[Design ID]	: The ID number of embroidery design
[Design Name]	: The name of embroidery design
[Stitches]	: The number of stitches of embroidery design
[Output]	: Quantities of production
[Start of Design] *2	: The time embroidery is started
[End of Design] *2	: The time embroidery is completed
[Total time (min.)]	: The total required time (minutes) to complete the embroidery design
[Run (min.)]	: The machine running time to embroider the design
[Pause (min.)]	: The pause time in the middle of embroidery
[Power OFF] *2	: The time main switch is turned off
[Power ON] *2	: The time main switch is turned on
[Power OFF time] *2	: The elapsed time while main switch is turned off.
[Run Ratio]	: Running time / Total time
[Pause Ratio] *2	: Pause time / Total time
[Productivity/hour]	: Quantity of the production per hour
[Thread Break]	: The number of thread breakage within one production cycle
[Error] *2	: The number of error message within one production cycle
[Interval (min.)] *2	: The time period from machine power on till start of embroidery or the time after completion of embroidery until it starts the next embroidery.


*1 :When machine main switch is operated (On/Off), "Power off <> on" will be displayed.

*2 :These items will not be shown in the display.

● Record of thread break

This function will show thread break data of each needles.

In case of Multi-head embroidery machine, data line for each head will be displayed.

1. When the machine is stopped, press .



2. Select "REPORT".



3. Select  .



4. In order to exit the mode, proceed to the step 5.

If you want to delete the record, press




Head number

Needle number

Head	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Head 1	119	0	0	29	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0
Head 2	0	0	0	40	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Total	279																			

Total

Clear OK

4. Press 




The display returns to MENU.

Press  to return to Drive mode.



Save the report

You can save the displayed records in CSV format.

Insert the USB memory into the machine and press  button then, new folder named "Production Report" will be made and the report data will be saved as file name "BreakReport_****".




●The date and time of error message

You can view code and time of the error message and last 100 times of the data will be held.

●The number of error message

You can view the total number of each error messages which is occurred in the embroidery machine.

1. When the machine is stopped, press .



2. Select "REPORT".



3. Select .

 The screen is switched to date or number.

The date and time of error message

No. Error	Date	No. Error	Date
1 E-141	2013/12/26 08:37:04	16 E-105	2013/12/17 15:08:08
2 E-116	2013/12/26 08:35:40	17 E-105	2013/12/17 15:08:37
3 E-141	2013/12/24 15:45:23	18 E-105	2013/12/17 14:58:30
4 E-061	2013/12/24 14:09:40	19 E-105	2013/12/17 14:58:19
5 E-141	2013/12/24 12:51:20	20 E-105	2013/12/17 14:58:16
6 E-110	2013/12/24 12:44:39	21 E-105	2013/12/17 14:58:11
7 E-110	2013/12/24 11:37:00	22 E-105	2013/12/17 14:58:04
8 E-110	2013/12/24 11:36:55	23 E-105	2013/12/17 14:57:57
9 E-110	2013/12/24 11:36:50	24 E-105	2013/12/17 14:57:50
10 E-110	2013/12/24 11:36:45	25 E-105	2013/12/17 14:57:43
11 E-110	2013/12/24 11:36:40	26 E-105	2013/12/17 14:57:36
12 E-110	2013/12/24 11:36:35	27 E-105	2013/12/17 14:57:29
13 E-110	2013/12/24 11:36:30	28 E-105	2013/12/17 14:57:22
14 E-193	2013/12/19 15:28:55	29 E-193	2013/12/ 6 10:41:44
15 E-193	2013/12/19 15:15:21	30 E-061	2013/12/ 5 12:56:29

The number of error message

Error Count	Error Count	Error Count	Error Count	Error Count
E-000 0	E-015 0	E-030 0	E-045 0	E-060 1
E-001 0	E-016 0	E-031 0	E-046 0	E-061 20
E-002 0	E-017 0	E-032 0	E-047 0	E-062 0
E-003 0	E-018 2	E-033 0	E-048 0	E-063 0
E-004 0	E-019 0	E-034 0	E-049 0	E-064 0
E-005 0	E-020 0	E-035 0	E-050 26	E-065 0
E-012 0	E-027 0	E-042 0	E-057 0	E-072 0
E-013 0	E-028 0	E-043 0	E-058 0	E-073 0
E-014 0	E-029 0	E-044 0	E-059 0	E-074 0

4. In order to exit the mode, proceed to the step 5.

If you want to delete the record, press

 .

5. Press .

The display returns to MENU.

Press  to return to Drive mode.




Save the report







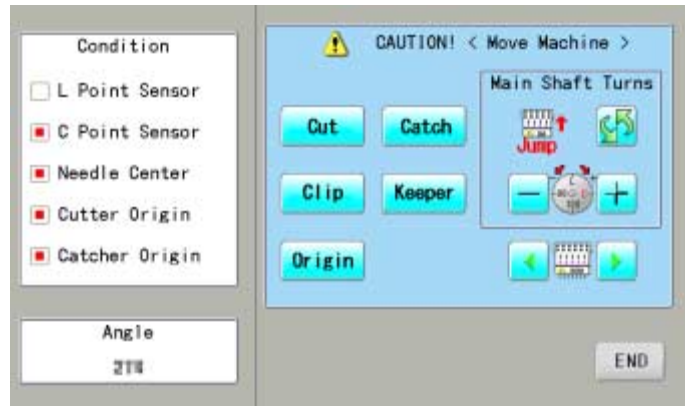

You can save the displayed records in CSV format.

Insert the USB memory into the machine, Insert the USB memory into the machine and press [] button then, new folder named "Production Report" will be made and the following files will be saved.

● User maintenance mode

User maintenance mode has 8 items as below.
Indicates point which sensors are active.




Button	Machine movement
 Change jump	Change the needle bar's movement. "JUMP" : Needle Jump, "DRIVE" : Needle Drive
 Upper shaft turns	Upper shaft turns clockwise and counterclockwise. When release button, upper shaft stops. ⚠ Caution: please be careful that Needle move at once.
 Needle change	Move the sewing head to the adjustment needle in the direction of the arrows.
 Cutter Open/Close	When cutter is open position, cutter move to close position. When cutter is close position, cutter move to open position. ⚠ Caution: please be careful that cutter move at once.
 Catcher Open/Close	When catcher is open position, cutter move to close position. When catcher is close position, cutter move to open position.
 Clip-type thread holder (option)	When clip is open position, clip move to close position. When clip is close position, clip move to open position.
 Keeper	When keeper is open position, keeper move to close position. When keeper is close position, keeper move to open position.
 Standby position	In case, each equipment position without standby position, as example "Upper shaft is not at C point, Thread cut blade is not at stop position, Thread Catcher is open position", this key work for back to standby position automatically.

Conditions


L point sensor	The point that indicator becomes RED is L-point, when upper shaft is turned.
C point sensor	The point that indicator becomes RED is C-point, when upper shaft is turned.
Needle sensor	The point that indicator becomes RED is needle position, when moving head is moved.
Origin point of cutter	The point that indicator becomes RED is origin point of cutter.
Origin point of thread catcher	The point that indicator becomes RED is origin point of thread catcher.

Angle

Indicate angle of upper shaft.


1. When the machine is stopped, press .



2. Press .



3. Press .

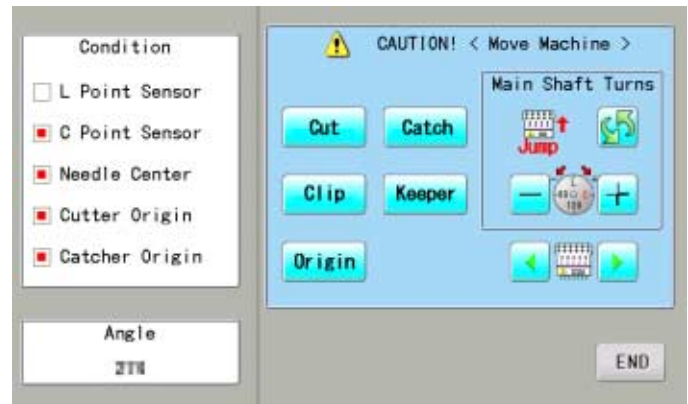


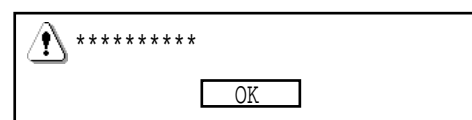
4. Press one key and check machine movement.

CAUTION: To prevent accidents;
The machine moves quickly.
Keep hands away from the machine.

One equipment was not standby position,
machine show following message
when you press key.

C point : Upper shaft is not at C point.
Cut blade : Thread cut blade is not at
standby position.
Thread Catcher : Thread Catcher is open
position.

Please press  for back to standby position
and repeat step 4 again.



Press  to return to Menu mode.

If screen saver is set, images saved in the machine are displayed on the screen in numerical order when the machine is stopped and is not in operation for a certain amount of time. Screen saver is cancelled when any place on the touch screen is touched.

■ If the setting time of "display off timer" on "OPTION" is shorter than one of screen saver, screen saver is not displayed.

Make sure the setting time of "display off timer" is longer than one of screen saver when both screen saver and "display off timer" are used. 5-2

Start-up time

Set the time to start screen saver

1. When the machine is stopped, press .



2. Select "SCREEN".



3. Press .




4. Select the number. (Unit : minute)

Changing is cancelled.
 Numbers are deleted.



5. Press .

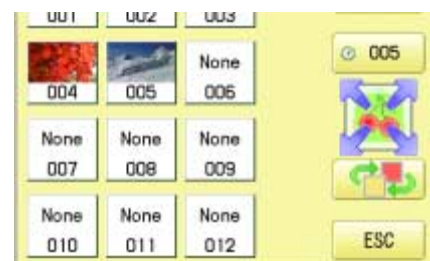

6. Press .


The setting is fixed and display returns to MENU.

Press to return to Drive mode.



Slide direction

Set the slide direction of the screen saver image switched to the next image displayed on the screen.


1. When the machine is stopped, press .




2. Select "SCREEN".



3. Press .

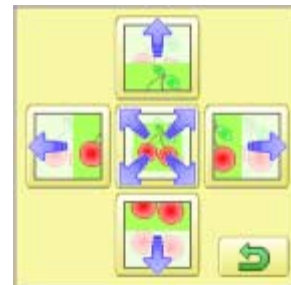


4. Select the direction.

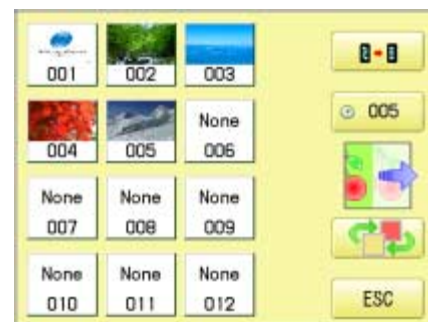

5. Press .

The setting is fixed and display returns to MENU.

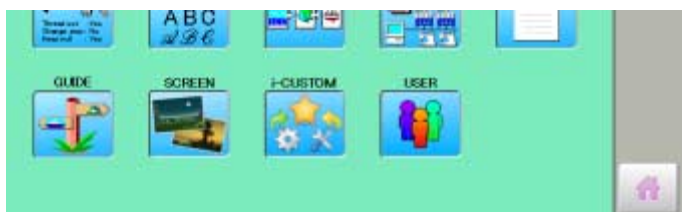

Press  to return to Drive mode.


Change and delete image(s)

This is done to change or delete screen saver image(s) 5 images are pre-installed in 001 thru 005.

Maximum 12 images can be saved by adding images.

Please refer to 22-B regarding how to make the image file.

1. When an image is changed, insert the USB memory into the machine.

2. When the machine is stopped, press .



2. Select "SCREEN".



4. Select the image to be unwanted or deleted saved on the screen.



3. Press .




Image is deleted.

Setting is cancelled.



4. Select Image file.

Press the image file name you would like to add on the screen.


Ex: The new image is added in the 006.



5. Press .

The setting is fixed and display returns to MENU.

Press  to return to Drive mode.

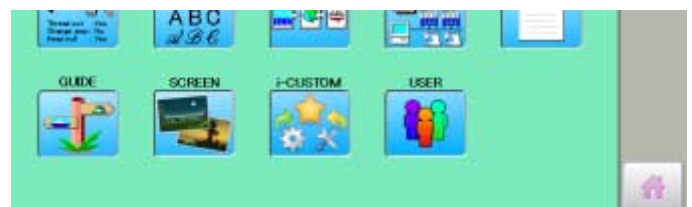


Initialization of registered images in the machine

Screen saver images to set current status to initial status (factory setting).

Original images in 001 to 005 are restored although they are deleted.

All the images saved in 006 to 012 are deleted.

1. When the machine is stopped, press .




2. Select "SCREEN".





3. Press .



4. Press .


 Initialization is cancelled.

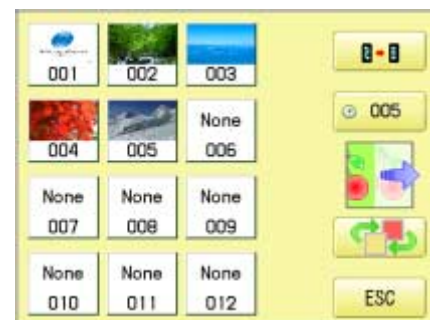

5. Press .

The setting is fixed and display returns to MENU.




Press  to return to Drive mode.

How to make the screen saver image

You can display any image(s) in addition to pre-installed images.

Create image(s) to meet the following specifications by using your image editing software.

Save the image(s) in USB flash memory.

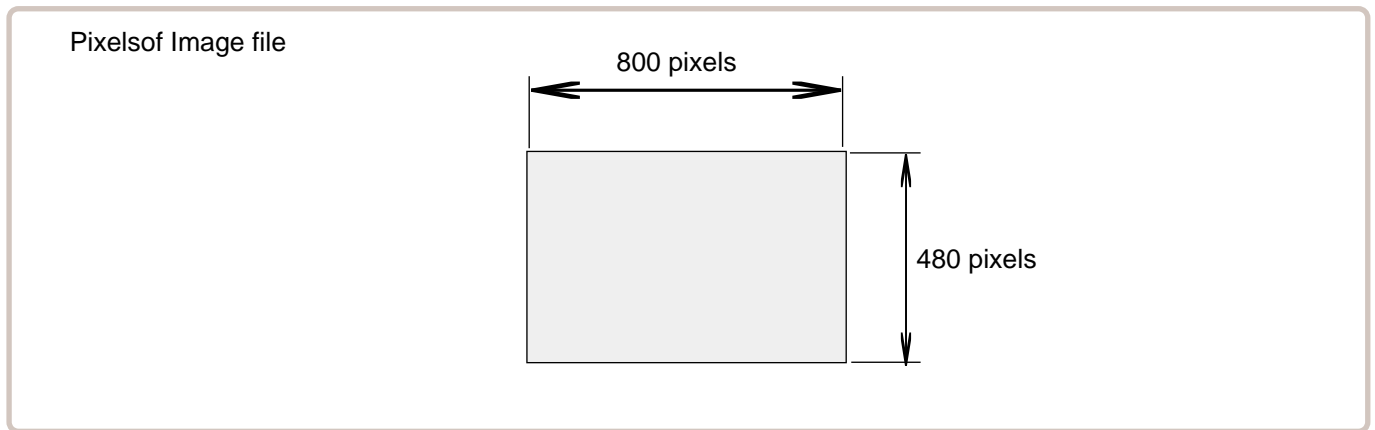

File format

BMP format

Ex : "*****.bmp"

Pixels

800 x 480 is recommended.

1600 x 1200 can be displayed. However, capacity of the file is larger and the machine consumes the memory for pattern data.

The number of color

Maximum 24 bits color (full color)

● Specifications

Voltage	1 phase 100V ~ 115V -10% ~ +10%	1 phase 200V ~ 230V -10% ~ +10%
Electricity consumption	240 Wh	240 Wh
Frequency	50 /60Hz	
Environmental condition	Temperature 0 ~ 40° C Moisture 45 ~ 85 %	
Dimension (Width x Height x Depth)	845 mm x 871 mm x 778 mm, 33.3 x 34.3" x 30.6" (Standard) 1,522 mm x 871 mm x 778 mm, 59.9" x 34.3" x 30.6" (Wide X-Carriage Option)	
Weight	106 Kg (Standard) 109 Kg (Wide X-Carriage Option)	
Embroidery area (Y x X)	Standard 400 mm x 520 mm, 15.7" x 20.5" Max.*1 (Wide X-Carriage Option) 400 mm x 1,200 mm, 15.7" x 47.2" Max.*1 Standard cap frame (Option) 70 mm x 180 mm, 2.8" x 7.1" Max.*2 Wide cap frame (Option) 95 mm x 360 mm, 3.7" x 14.2" Max.*2	
Max speed	1,200 rpm *3 (Standard) 1,000 rpm *3 (Wide X-Carriage Option)	
Memory capacity	About 40,000,000 stitches	
Registered pattern	250 pat.	

*1 Actual embroidery area will be restricted in accordance with inner frame size.

*2 Actual embroidery area will be restricted in accordance with shape of a cap.

*3 Maximum machine speed may change by sewing condition, such as pattern, material and etc.

■ Specifications are subject to change without notice.

● Oiling



CAUTION: To prevent accidents.

When performing maintenance, be sure to disconnect the power cord.

The machine will periodically prompt periodically for lubrication based on the number of stitches sewn.

When powered on, the machine will display an icon and letter to indicate that lubrication is necessary. 3-4

- A** Place to oil

B Place to oil


Please lubricate the specified oil locations according to the instructions below.

Running the machine without proper oiling will damage the machine. Lint will gather in and around the rotary hook. Rotary hooks then wear which will cause the threads to break. Please clean lint with a brush and run the machine idly for 2 ~ 3 minutes.

Mark	No.	Place to oil	Specified oil
A	1	Rotary hook (Lubricate with oil slightly with a small brush and sewing machine oil between the outer and inner rotary hook parts.)	Sewing machine oil
B	2	Needle bar	
	3	Head shaft	
	4	Crank lever	

■ When oiling the head shaft, please move the head to the left and set it to needle No. 1.

■ Too much oil may stain fabrics and threads.

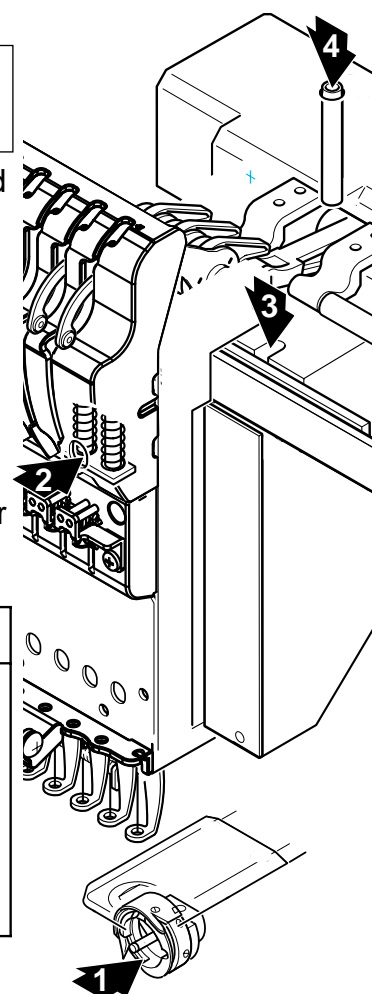

●Cleaning the rotary hook

If the rotary hook is clogged with waste thread or dust, it will degrade the stitch quality of the embroidery or may cause other problems.

For a long sewing life, please keep the rotary hook clean.

Use the included brush for cleaning the hook.





●Cleaning the thread cutting knife

If the thread cutting knife is clogged with waste thread or dust, the knife will not work correctly.

Please keep the thread cutting knife and device clean.

1. Remove set screw (2 pieces) by offset driver and remove the needle plate.

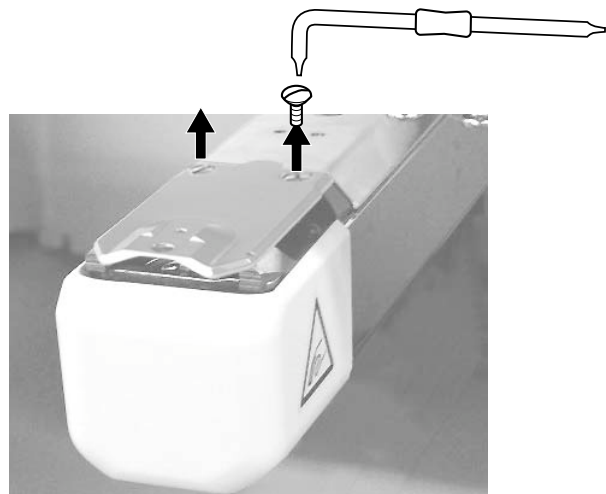


2. When the machine is stopped, press 

and Press



3. Press 

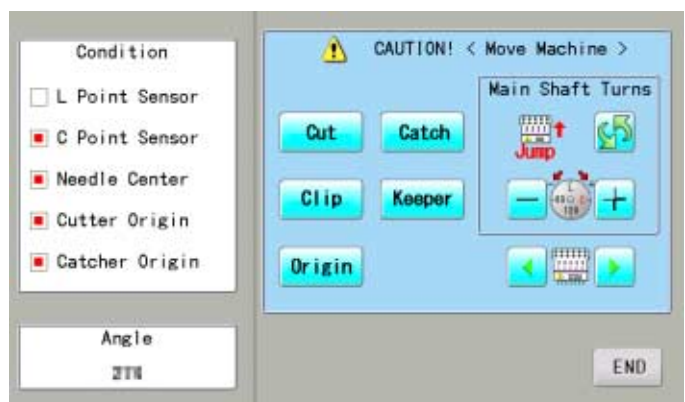



CAUTION: To prevent accidents.
The thread cutting knife moves quickly.
Keep your hands away from the machine.

4. Press **Cut**.


In maintenance mode, pressing this button causes the moving knife to open and stop at max open position.

5. Remove any waste thread and dust from the knife assembly and surrounding area.

6. Press **Cut**.


Moving knife returns to the original position.

Press **END** to return to Menu mode.

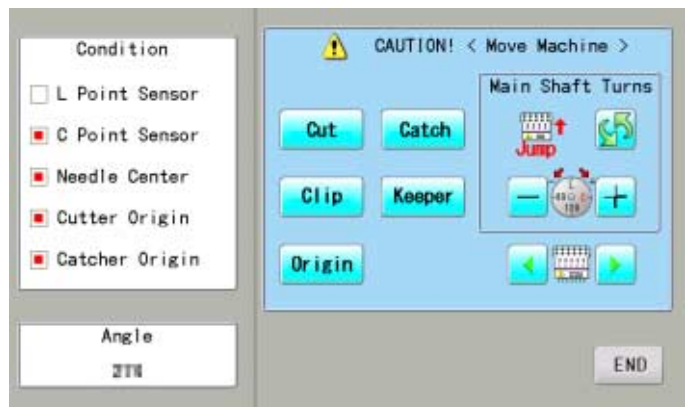


7. Put the needle plate on the bed.

Please insert positioning pin to hole of the needle plate.

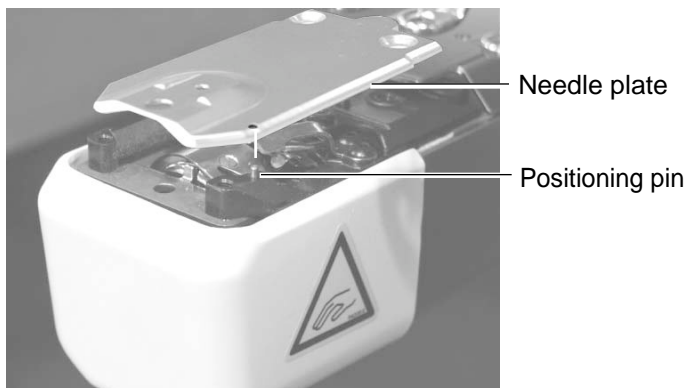


8. Tight set screws (2 pieces) for fix the needle plate.

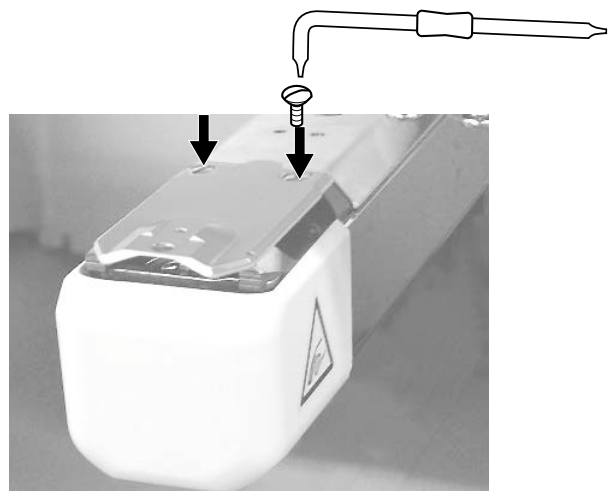

The machine has an extensive error code list to aid in troubleshooting when problems occur, as listed below. Upon error, press the **OK** to release the error and correct it according to the list below.

When errors occur frequently, please contact your dealer.



Automatic errors backup


The machine recovers from some errors (E-050, E-190, E-193) automatically after detecting the error(s) by it self. In cases where the machine does not recover from the error automatically, follow the "Solutions" below according to the indicated error number.



CAUTION: To prevent accidents.

In case of "Automatic errors backup", the machine's sudden movement might be caused without showing errors or messages after its stoppage.


No.	Display	Error	Solutions	Page
001	Circuit board	Abnormality detected in control circuit board	Power down machine and, after 10 seconds, power on again.	
002	Power source	Power failure or abnormal voltage		
004	System memory	System memory fault		
014	Fan Alarm	Cooling fan fault	Contact your Dealer.	
015	Inverter trip	Sewing motor-related trouble. Overload, short circuit, trouble with motor drive unit	Cut power and turn main shaft by hand. If turns normally, power on again. Fig. 2	
016	Alarm X unit	X-motor-related trouble, i.e. x-motor overload, short circuit, problem with motor drive unit	Power off machine, test pantograph movement manually. Check for any abnormality throughout full range of motion. If none found, power on again	
017	Alarm Y unit	Y-motor-related trouble, i.e. x-motor overload, short circuit, problem with motor drive unit		
018	Main shaft	Main shaft will not turn.	Turn main shaft manually at least 1 full turn & ensure that it turns freely, clearing any jam. Then, re-initialize machine system and speed.	25-1 25-2
020	Needle detect	Machine not detecting current needle # correctly, or needle bar selection unit is off its stop position. Trouble with position-detecting circuit board.	Turn needle bar selector to the fixed position (marked area shown below in Fig.1).	

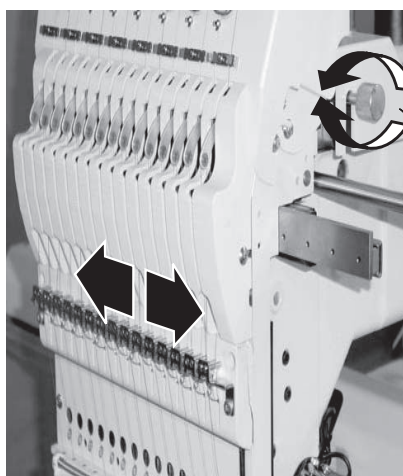

Turn the needle bar selection knob to the moving head situational position.

Situational position


Fig. 1

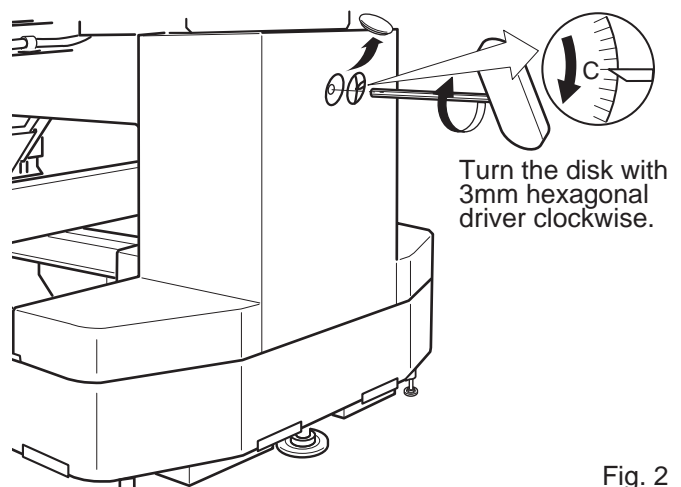

Turn the disk with 3mm hexagonal driver clockwise.

Fig. 2


No.	Display	Error	Solutions	Page
021 022	Needle move	Motor for needle bar selection unit has stopped partway through its path. No movement due to malfunction of thread take-up lever or trouble of position-detecting circuit board	After fixing malfunction of needle and thread take-up lever, turn needle bar selector shaft with wrench to have it set at center of fixed position (range within which needle bar selector doesn't move) Fig. 1	
024	Needle center	Needle bar stop position is off-center; needle bar stop position is out of place.	Turn needle bar selector with 3mm hex wrench to have it set at center of fixed position (scope within which needle bar selector doesn't move). Fig. 1	
025	Needle over	Needle # out of range of actual needles on given machine.		
026	Needle differ	Needle # differs between		
030	Slow mismatch	Improper speed adjustment at low speed. Speed does not decrease below 100rpm at low speed.	Re-initialize machine system and speed.	25-1 25-2
050	C point	Main shaft is stopped in a position other than "C" point	See Fig. 2 below.	24-5
051	L sensor	Timing detection board fault, or marred photo-sensor. Malfunction of "Lowest needle position" sensor [PH2] on detection circuit board. Improper adjustment of slit plate.	Check to see if photo sensor is clean or if the slit plate contacts sensor. Re-initialize machine system and speed.	25-1 25-2
052	C sensor	Timing board detection fault, or marred photo-sensor. Malfunction of "Color change position" sensor [PH1] on timing detection circuit board. Improper adjustment of slit plate.		
060	X limit	Frame/pantograph has moved beyond sewing area along X-axis.	Return frame within sewing area using the frame movement keys on the control boxl.	
061	Y limit	Frame/pantograph has moved beyond sewing area along Y-axis.	Check pattern size and center mark to ensure that it is within size range of selected hoop and also properly centered.	
063	Drive Setup	During embroidery, preparation for frame movement did not complete within predetermined time.	Malfunction of "Lowest needle position" sensor on detection circuit board, Improper adjustment. Re-initialize machine speed. If this condition occurs frequently, contact your Dealer.	25-2
064	X Center sens.	Trouble with X-Carriage sensor, Improper position adjustment, sensor relay board fault, cable fault.	Contact your Dealer.	
065	Y Center sens.	Trouble with Y-Carriage sensor, Improper position adjustment, sensor relay board fault, cable fault.		
066	Frame drive	During embroidery, frame movement did not complete within predetermined moving time.	If this condition occurs frequently, contact your Dealer.	

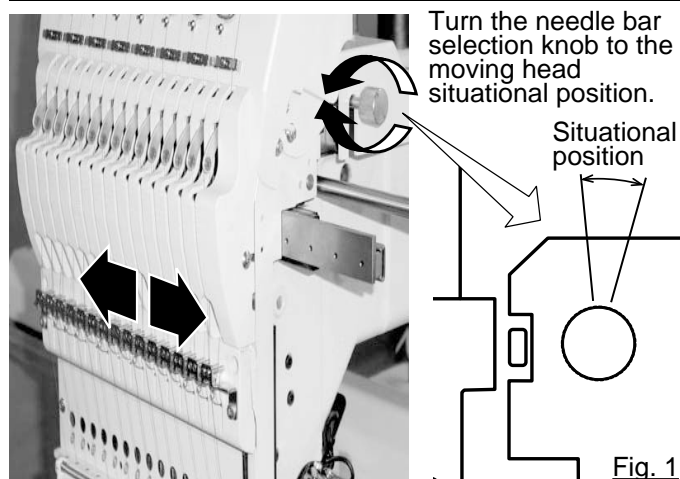

No.	Display	Error	Solutions	Page
067	Position data	Loss of embroidery frame coordinate data.	If this condition occurs frequently, contact your Dealer.	
068	Position set	Failure to read embroidery frame sensor signal. (Return)	Check if position sensor is dirty. Turn off power source, then turn on again.	
069	Position Entry	Failure to read embroidery frame sensor signal. (Entry)	If problem still persists, contact your Dealer.	
070	Safety sensor	Safety sensor has been tripped.	Clear area around safety sensor. Ensure that sewing area are clear.	
090	Miss reception	Error has occurred during data transfer (via cable) between machine and PC.	Try reading pattern data again. Verify that transmission speed setting is correct at (1) transfer software; (2) device manager of PC and (3) RS-232C speed of machine.	5-4
091	No send	Machine has not received data for > 10 seconds during data transfer.		
103	Data format	Machine unable to determine format of pattern data.	Verify format of pattern data and fix if necessary.	14-4
104	Miss function	Timing to read pattern data does not conform.	Read pattern data again from the start.	5-4
105	Dual function	Data has been detected in the pattern that has ambiguous/dual function.	Read pattern data again from the start.	5-4
106	No function	Interval between start read time and time of reception of actual pattern data is too great.	Check quality of design data.	
108	Improper read	While reading pattern data, error has occurred in internal processing.	Read pattern data again from the start.	5-4
110	Memory full	Memory has filled while reading in a design.	Delete unnecessary patterns from machine memory and try again.	5-B
111	Change over	While reading pattern data, # of color changes (color No.) has exceeded 250.	Divide pattern data such that number of color changes of each segment is less than 250.	
112	Data error	Pattern data of current design is damaged.	Delete pattern and re-load.	5-B
114	Id over	# of patterns in control panel memory has exceeded the maximum of 250.	Delete unnecessary patterns from machine memory and try again.	5-B
116	Not found Id	Specified pattern does not exist.	Check setting.	
118	Trace data over	Over 1024 stitches trace data were created during reading of pattern data.	Set maximum stitch length to embroidery area of pattern data within 2m (lengthwise) x 2m (sideways).	
120	Memory error	Fault in retaining contents of pattern memory.	If this occurs frequently, it is likely that CPU is faulty. Contact your Dealer.	
130	Disk error	Unable to communicate continuously with memory media.	Power down machine and after a 10 seconds, power on again. If error remains, contact your Dealer.	
131	Device no ready	Memory media is not set.	Check if memory media is properly set.	5-5
133	Bad card	Improper or faulty memory media.	Memory media that media reading unit can't read or faulty media or un-initialized media.	5-5
141	Not found name	Designated pattern is not found.	Memory card is not correct.	5-5
142	Disk full	Memory media is full to capacity.	Clear unnecessary patterns or use a different memory media.	
143	Multi name	Another pattern with same name has been detected while attempting to write to memory media.	Change name, use a different memory media, or overwrite existing pattern.	

No.	Display	Error	Solutions	Page
190	Cut blade	Thread cut knife is not at stop position.	Follow the instructions below.	24-5
191	Cut Sensor	Thread cut knife is not at stop position.	Check if threads are jammed around the thread cutting knife. Press the thread cutting button 2~3 times. If error remains, contact your Dealer.	23-2 23-4
193	Catcher	Thread catch hook is off its position. Limit switch to detect position is not "OFF".	Please follow the example below: 1. Check whether thread was actually cut by thread cutting knife. If not, cut thread and return catch hook to its normal position. 2. If thread is actually cut, check if thread catch hook on head has returned to its position completely.	24-6
203	Install data	Error has occurred during update of program.	Check an update program.	
215	Frm. drive err	Frame movement did not complete during normal movement. (Time over)	If this condition occurs frequently, contact your Dealer.	
217	Frm.drive data	Frame movement data loose.		
255	Default Error	During embroidery, frame movement did not complete until main shaft reach "Lowest needle position".	Re-initialize machine speed setting. Check adjustment of upper shaft timing. (C point / L point) If this condition occurs frequently, contact your Dealer	25-2


What to do when Stop position of main shaft is out of place (error E-050)




1. Press .
2. Select "Auto".




The main shaft turns 2 to 3 times and returns to a stop position ("C" point) automatically.
The display returns to drive mode.



When you cannot clear by the method above (Auto)




1. Press .
2. Select "Manual".




The error status is released and the display shows "drive mode".



3. Remove the cap over the small hole in the rear of the machine. Using a 3 mm hexagonal driver, Please turn the main shaft and adjust it to the "C" point.

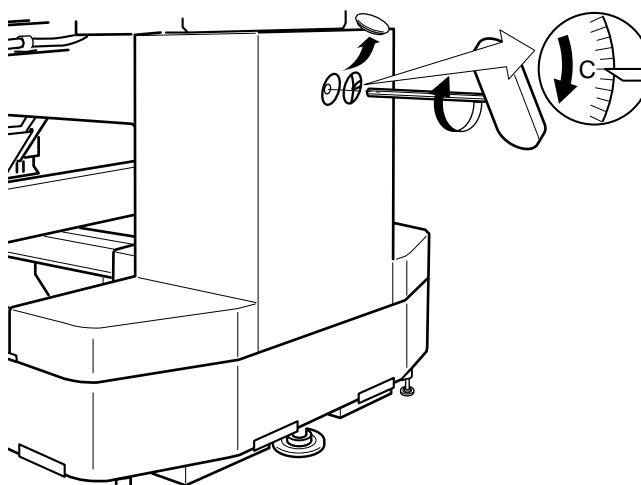

What to do for "Thread cut knife is not at the stop position (error E-190)"

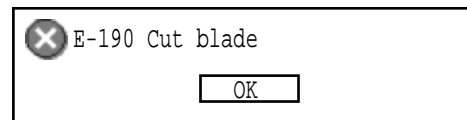

1. Press .




2. Select "Auto".

The display returns to the drive mode.



When you cannot clear by the method above (Auto)



1. Press .





2. Select "Manual".

The error status is released and the display shows "drive mode".



3. Using a 3 mm hexagonal driver, Please turn the main shaft and adjust it to the "C" point.

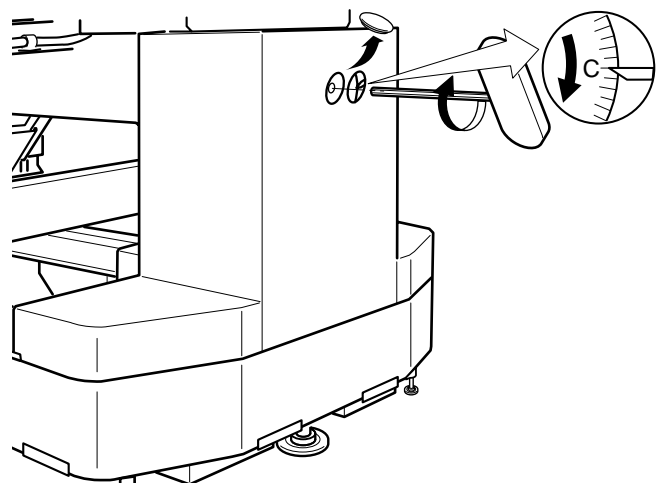

4. When the machine is stopped, press 

and Press




5. Press 

6. Press 


You should hear the sound of moving knife opening.

7. Press 


You should hear the sound of moving knife returning to the closed position.

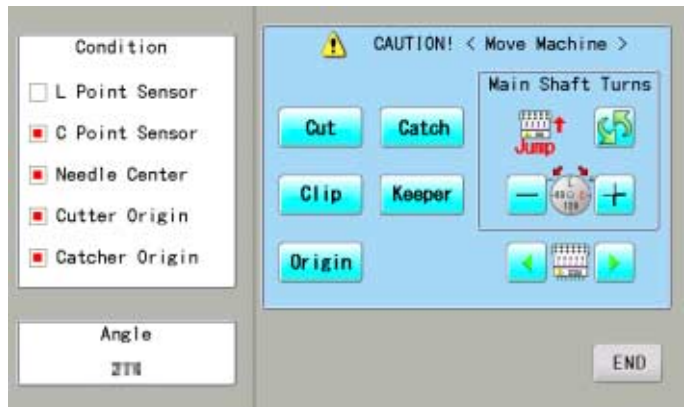


Press  to return to Menu mode.

Press  once again to return to Drive mode.

What to do for "Thread catch hook is off its position (error E-193)"



1. Press .




2. Select "Auto".

The thread catch hook returns to the original position.
The display returns to drive mode.



When you cannot clear by the method above (Auto)

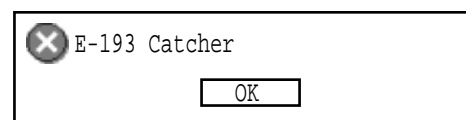

1. Press .



2. Select "Manual".


The Error status is cleared and the display shows "drive mode".



3. Refer to the page in the section (ERRORS AND WHAT TO DO), and determine what may be preventing the hook from returning to the original position, and follow the steps outlined. [P 24-4](#)


● Re-Initialization of machine system


Perform this function only to fix problems with the machine.
When performed, all settings in the "OPTION" menu are lost.
Be sure to reset the "OPTION" menu after performing this function.


1. When the machine is stopped, press 

and Press




2. Press 



3. Press  to carry out.

Formatting of the machines systems are carried out.
Indicate HAPPY logo in screen.


If you cancel, press the .

The display returns to MENU.




●Initializing of machine speed


If you have E-18, E-30, E-51 or E-52 while sewing, Please try initializing the machine settings.


1. When the machine is stopped, press 

and Press





2. Press 



3. Press  to execute.

The machine will display a warning, then start turning the main shaft automatically.
The speed will slowly increase from slowest speed to maximum and then stop automatically and return to Drive mode.



If you cancel, press the .



The display returns to MENU.

PROBLEM	CAUSE	CORRECTION	PAGE
Upper thread breaks	Machine not properly threaded. Needle inserted incorrectly. Thread tension too tight. Poor thread quality. Dry hook Empty stitches or continuous tiny stitches in design data. Thread is tangled in an upper thread cone.	Re-thread machine. Re-insert needle. (remember, needles have a front and back!) Readjust thread tension. Replace with good quality thread. Oil the hook. Turn on stitch sweep function, then read design data in again. Un-tangle thread.	4-6 4-1 8-1 23-1 14-4
Lower (bobbin) thread breaks	Bobbin threaded incorrectly. Bobbin wound unevenly or too full. Thread tension too tight. Dirt on the hook. Dry hook	Re-thread the bobbin. Re-wind the bobbin. Readjust thread tension. Clean the hook. Oil the hook.	4-5 4-4 4-5 23-2 23-1
Thread break lamp lights up despite thread not being broken (False thread breaks)	Upper thread is not passing around the detecting roller.	Thread upper thread correctly.	4-7
Machine skips stitches	Needle inserted incorrectly. Bent or blunt needle. Incorrect size of needle.	Re-insert needle. Insert new needle. Choose correct size needle for fabric.	4-1 4-1 4-2
Fabric puckers	Machine not properly threaded. Bobbin threaded incorrectly. Blunt needle. Thread tension too tight.	Re-thread machine. Re-thread the bobbin. Insert new needle. Readjust thread tension.	4-6 4-5 4-1 8-1
Machine makes loose stitches or loops	Bobbin threaded incorrectly. Machine not properly threaded. Tension not adjusted properly.	Re-thread the bobbin. Re-thread machine. Readjust thread tension.	4-5 4-6 4-5,8-1
Poor tension balance	Bobbin threaded incorrectly. Machine not properly threaded. Dry hook	Re-thread the bobbin. Re-thread machine. Oil rotary hook.	4-5 4-6 23-1
Poor design registration	Fabric not hooped correctly. Garment is made of elastic material. Hoop not installed into machine properly.	Set hooping correctly. Use correct backing and ensure that design has proper underlay. Set hoop correctly.	6-2,7-9 6-2,7-9 6-3,7-5
Needle breaks	Bent or blunt needle. Needle setting incorrect. Thin needle against material. Poor hooping.	Insert new needle. Re-insert needle. Change to thicker needle. Re-hoop fabric.	4-1 4-1 4-2
Machine runs with difficulty	Dirt on the hook race.	Clean rotary hook. Oil rotary hook.	23-2 23-1
Machine will not run	Cord not plugged into electrical outlet. Power switch is not turned on. Power source fuse has blown.	Insert plug fully into outlet. Turn on the switch. Replace power source fuse (6A).	 3-5 3-1

Thread break back

With this setting, drive frame backs up several stitches after a thread break before stopping.

Color change number

The Needle number (thread color) to be sewn can be set to each Color change number. For example, if a pattern is divided by a color change function in 2 places, 3 color change numbers exist in the pattern. When the needle number is set to its respective color change number, the pattern is sewn in 3 colors.

Memory pattern

Patterns stored in memory.

Start point of the frame

This is the point where the frame begins to move before the machine starts sewing.

Various function settings

A general term for Needle bar selection, Convert, Pattern adjustment, Repeat sewing, Offset and frame out which are set in the pattern data.

Zero stitch

This is a stitch whose net movement in both the X- and Y- direction is zero, and the needle lands in the same position.

Original Point

The frame position where the machine embroiders the pattern from the beginning is automatically registered as the original point.

Stitches

This is the minimum unit within the pattern data. There are different types of such "stitches": "stitches" that command determine the sewing sequence; "functions" that dictate functions such as jumps, thread cut, etc; "sideways movement distance" and "lengthwise movement distance" that command the movement distance of the frame.

Auto origin

This returns the frame automatically to the original point upon finishing the embroidery.

Tubular round frame, Tubular square frame

The frames made by HAPPY and used for cylinder sewing, such as on T-shirts, bags, etc. These frames have brackets at both sides.

Memory media

What saves design data by things, such as memory card and a USB memory.

Data format

This is the format that the pattern data is converted into/

Color change stop

When a color change stop is assigned to a color change number, the machine embroiders the set color change and stops.

Conversion

This is a user-adjustable design setting of a given pattern that allows rotation in increments of 90 degrees.





































































































Cyrillic script

АБВ	АБВГДЕЁЖЗИЙКЛМНОПРСТУФХЦЧШЩЪЫЬЭЮЯГГЬЄSIIJЛЬНЬТКЎЦ абвгдеёжзийклмнопрстуфхцчшщъыьэюяггьєsiijльньћкўц 0123456789,./!<>()&-'@_:
АБВ	АБВГДЕЁЖЗИЙКЛМНОПРСТУФХЦЧШЩЪЫЬЭЮЯГГЬЄSIIJЛЬНЬТКЎЦ абвгдеёжзийклмнопрстуфхцчшщъыьэюяггьєsiijльньћкўц 0123456789,./!<>()&-'@_:
АБВ	АБВГДЕЁЖЗИЙКЛМНОПРСТУФХЦЧШЩЪЫЬЭЮЯГГЬЄSIIJЛЬНЬТКЎЦ абвгдеёжзийклмнопрстуфхцчшщъыьэюяггьєsiijльньћкўц 0123456789,./!<>()&-'@_:

Those fonts are created by  (www.i-cliqq.com)

BUILT-IN PATTERN LIST

26-4

BUILT IN PATTERN includes clip art from [Master clip] created by H2soft (Fax:+81-422-28-5211 E-mail:support@office4dc.co.jp).



HEAD OFFICE 3-3515, Tachiyagawa, Yamagata-city, 990-2251, Japan
Phone: +81-23-686-2272 Fax: +81-23-686-2243

TOKYO OFFICE 2-9-5, Taito, Taito-Ku, Tokyo 110-0016, Japan
Phone: +81-3-3834-0711 Fax: +81-3-3835-8917